



- Snap out (press) rear-view mirror only in direction of travel towards windscreen.
- Do not under any circumstances twist the mirror foot when removing.
- Twisting the mirror off the mirror mount will damage the rear catch.
- If the rear catch is damaged, the mirror will be loose when installed and must be replaced.

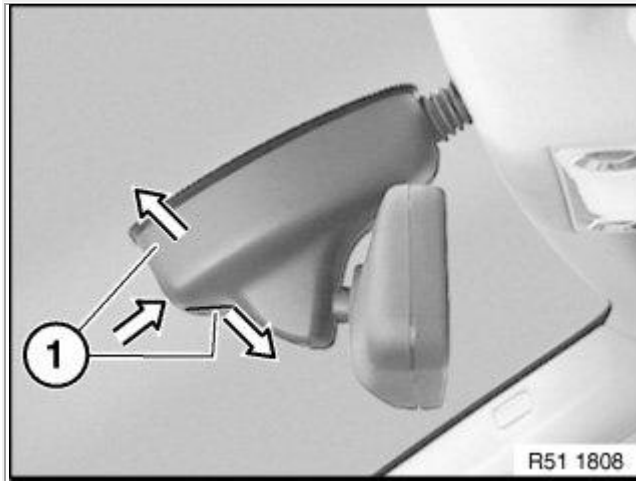


Press on end caps (1) and at same time press them apart; this releases clip connection of both caps (1).

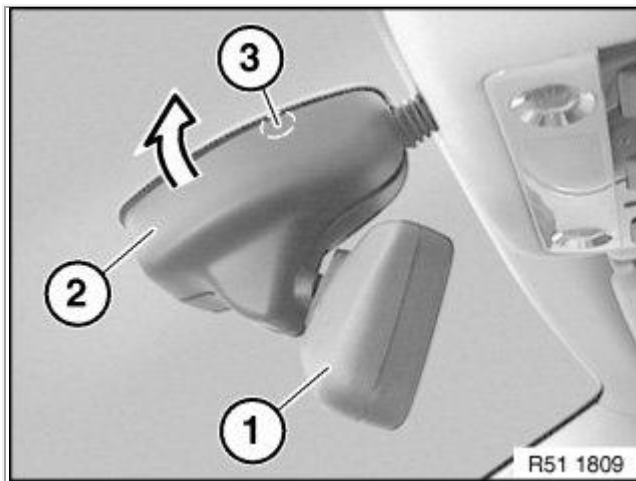


Twist mirror (1) at an angle towards front and right/top.

Swivel left end cap (2) off ball neck in direction of arrow; this detaches the engagement clip (3) from the metal foot.

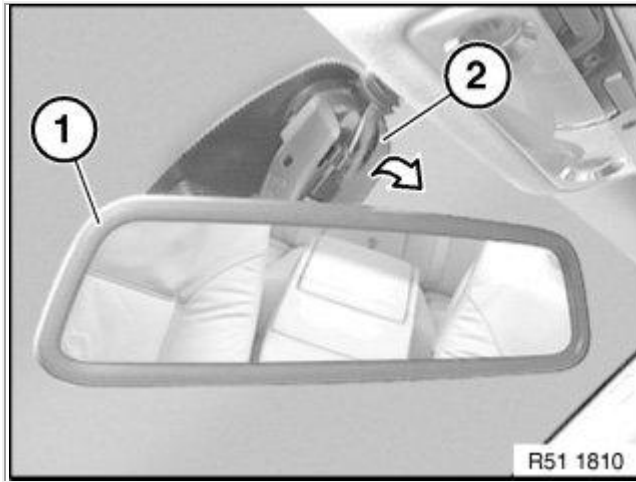


Twist mirror (1) at an angle towards front and left/top.
Swivel right end cap (2) off ball neck in direction of arrow; this detaches the engagement clip (3) from the metal foot.

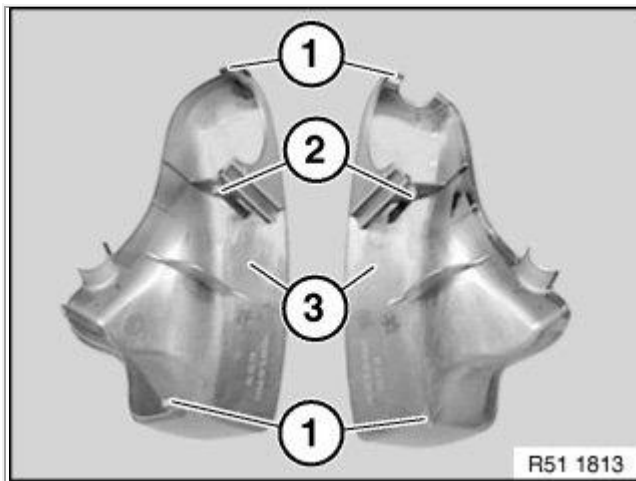

Installation:

Clips (1) and retaining hooks (2) of end caps (3) must not be damaged, replace if necessary.

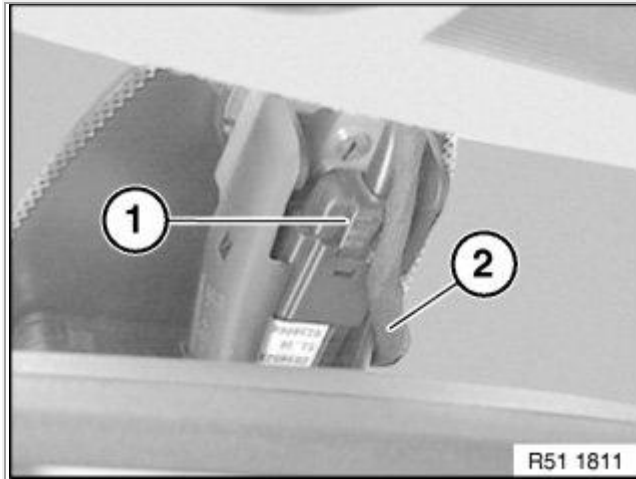


Disconnect plug connection (1).

NOTE: Pay attention to cable guide (2) for rain sensor.

E60 Security version:

Rain sensor is not installed, cable connection is tied back in roofliner.

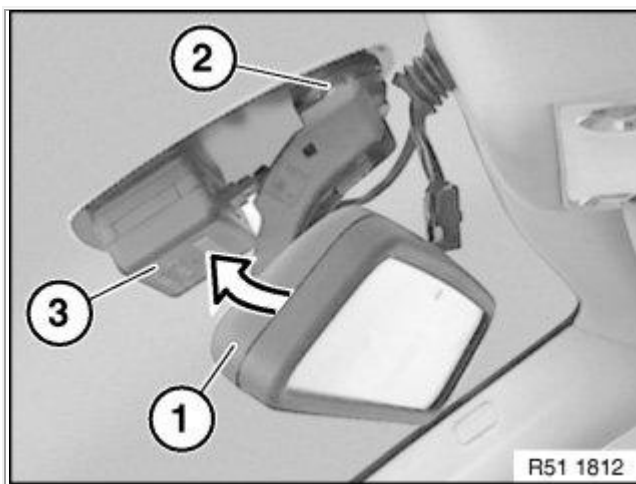


IMPORTANT:

- Risk of damage.

- **Do not pull off rear-view mirror (1) from windscreen against direction of travel and or snap out by turning.**
- **When snapping out, do not damage control unit (3) for rain sensor.**
- **E60 Security version:**
- **Rain sensor is not installed.**

Snap out interior mirror (1) from mirror mount (2) towards front with increasing pressure (not abruptly) and remove.

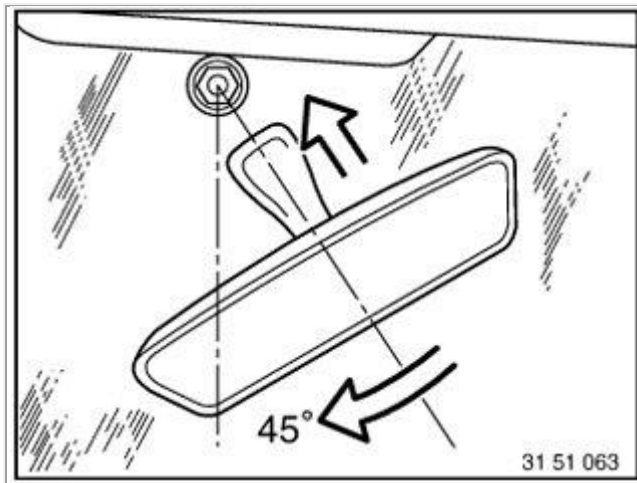

Installation:

1. Twist mirror foot by approx. 45° and fit to mirror mount.
2. Turn mirror foot until it engages on mirror base.