


MODEL 204.0 /2

- 1 Cover  
 2 Electrical connector  
 3 Electrical connector  
 4 Markings

A32 AC housing  
 A32m1 Blower motor

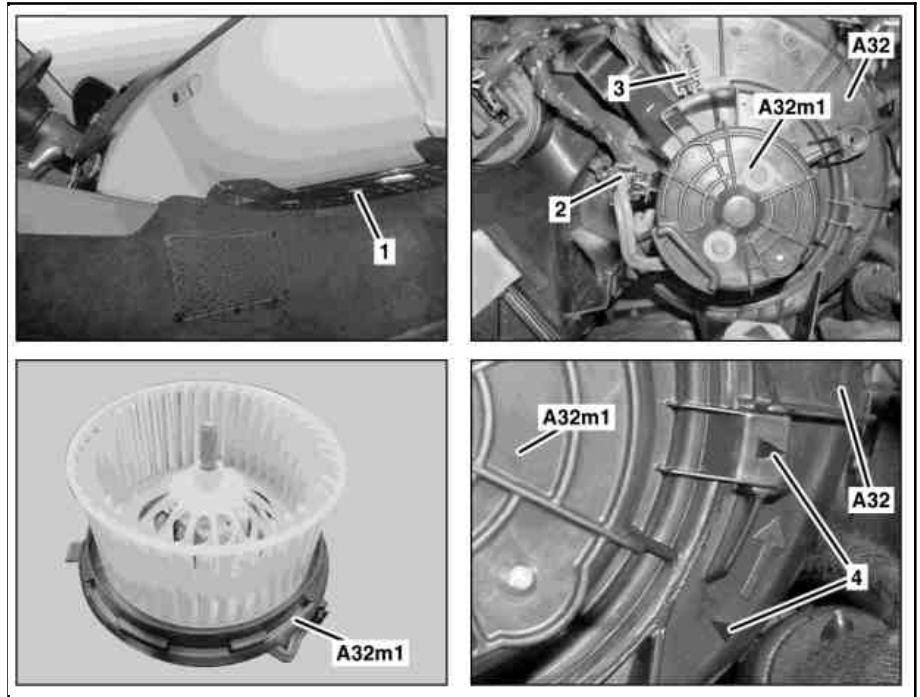

P83.30-4497-06

☒ ☒	Remove/install		
1	Remove cover (1)		
2	Disconnect electrical connector (2) and unclip associated connector from blower motor (A32m1)		
3	Unclip electrical connector (3) from blower motor (A32m1)		
4	Twist blower motor (A32m1) until the markings (4) stand opposite to each other. In the process, the bayonet connection is unlocked	<p><b>i</b> The arrow showing the direction of rotation located between the two markings (4) indicates the direction of rotation for the installation of the blower motor (A32m1).</p>	
5	Remove blower motor (A32m1) downwards and out of the instrument panel	<p><b>i</b> The cramped space available makes it more difficult to remove and install the blower motor (A32m1).</p>	
6	Install in the reverse order		