

1984 Chevrolet Corvette

ELECTRICAL COMPONENT LOCATOR '1984 ELECTRICAL COMPONENT LOCATIONS General Motors Co. -
Electrical Components

ELECTRICAL COMPONENT LOCATOR

1984 ELECTRICAL COMPONENT LOCATIONS General Motors Co. - Electrical Components

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

Component	Location
Antenna Relay	Next to rear hatch.
Anti-Theft Relay	In convenience center. See Fig. 1 .
Engine Cooling Fan Relay	Under brake booster assembly. See Fig. 2 .
Fuel Pump Relay	On left side of firewall. See Fig. 3 .
Interior Light Timer	In instrument panel harness, behind convenience center. See Fig. 4 .
Isolation Relay	On support in front of left wheel well.
Hazard Flasher Relay	In convenience center. See Fig. 1 .
Headlight Actuator Relays	On support in front of left wheel well.
High Speed Blower Relay	On A/C-heater blower assembly. See Fig. 5 .
Horn Relay	In convenience center. See Fig. 1 .
Multi-Warning Buzzer	In convenience center. See Fig. 1 .
Overdrive Relay	On rear of right fender apron.
Power Door Lock Relay	In convenience center. See Fig. 1 .
Rear Hatch Release Relay	At rear hatch release latch.
Speaker Relay	Behind right side of dash.
Starter Interrupt Relay	In convenience center. See Fig. 1 .
Turn Signal Flasher Relay	Behind right side of dash. See Fig. 4 .

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
Cruise Control Module	Built in to LCD instrument center.
Electronic Control Module	Right hand side of the I/P. See Fig. 6 .
Electronic Spark Controller	On A/C-heater blower housing. See Fig. 7 .
Theft Deterrent Control Module	Under right hand side of dash.

SENDING UNITS/SENSORS

SENDING UNITS/SENSORS LOCATION

Component	Location
Coolant Temperature Sensor	On lower front of engine.
ESC Detonation Sensor	On lower right center of engine. See Fig. 8 .
Manifold Absolute Pressure (MAP) Sensor	On left side of firewall. See Fig. 3 .



1984 Chevrolet Corvette

ELECTRICAL COMPONENT LOCATOR '1984 ELECTRICAL COMPONENT LOCATIONS General Motors Co. -
Electrical Components

Oil Pressure Sender	On top rear of engine. See Fig. 9 & 10.
Oil Temperature Sensor	On lower left side of engine. See Fig. 9 .
Oxygen Sensor	At bottom of left exhaust manifold. See Fig. 10 .
Speed Sensor	On left rear of transmission.
Throttle Position Sensor	On throttle body.
Vehicle Elapsed Time Sensor	Behind right side of instrument panel. See Fig. 1 .

MOTORS

MOTORS LOCATION

Component	Location
A/C-Heater Blower Motor	On right side of A/C-heater plenum. See Fig. 5 & 7.
Fuel Pump	In fuel tank.
Power Antenna Motor	In left rear fender well.
Power Seat Motors	Under seat.
Power Window Motors	In lower section of doors.
Windshield Washer Motor	On right side of firewall.
Windshield Wiper Motor	In upper center of firewall.

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

Component	Location
Air Diverter Solenoid	On top front of engine.
Air Switch Solenoid	On top front of engine.
Canister Purge Solenoid	Behind lower left side of front bumper. See Fig. 11 .
EGR Solenoid	On right top center of engine.
Overdrive Solenoid	On left side of transmission.
Rear Hatch Release Solenoid	At rear hatch release latch.
Torque Converter Clutch Solenoid	On left side of transmission.

SWITCHES

SWITCHES LOCATION

Component	Location
A/C Pressure Cycling Switch	On top front of evaporator. See Fig. 5 .
A/C High Pressure Cut-Out Switch	On rear of A/C compressor.
Ambient Temperature Switch	Under instrument panel, at bulkhead connector.
Brake Pressure Switch	On master cylinder. See Fig. 2 .
Brake Switch	On brake pedal bracket.
Clutch Start Switch	On clutch pedal bracket.



1984 Chevrolet Corvette

ELECTRICAL COMPONENT LOCATOR '1984 ELECTRICAL COMPONENT LOCATIONS General Motors Co. -
Electrical Components

Clutch Switch	On clutch pedal bracket.
Comb. Cruise/Stop Light Switch	On brake pedal bracket.
Coolant Fan Temp. Switch	On right rear of engine. See Fig. 8 .
Dimmer Switch	At base of steering column.
Door Ajar Switches	In doors.
Hatch Ajar Switch	In rear compartment, near hatch release.
Manual Overdrive Defeat Switch	In front floor console.
Neutral Switch	On shift lever.
Parking Brake Switch	Under parking brake lever.
Transmission Switches 1st, 2nd & 4th	On left side of transmission.
Transmission Switches 4th (Auto. Trans.)	On left side of transmission.
Torque Conv. Clutch Brake Switch	On steering column support, behind brake pedal.

MISCELLANEOUS COMPONENTS

MISCELLANEOUS COMPONENTS LOCATION

Component	Location
A/C-Heater Blower Resistors	On A/C-heater plenum. See Fig. 5 .
ALDL Connector	Under left side of dash.
Cruise Control Servo Assembly	Behind left front headlight.
Convenience Center	Under center section of dash. See Fig. 1 .
Fuse Block	Under right side of dash. See Fig. 4 .
Fusible Links, Links A & B (Red)	Near starter solenoid. See Fig. 8 .
Fusible Links, Link C (Brown)	Near starter solenoid.
Fusible Links, Link E (Red)	Near battery.
Fusible Links, Links G & H (Red)	Near bulkhead connector.
Headlight Actuators	Next to each headlight assembly.
Power Acc. Circuit Breaker	In fuse block.
Power Window Circuit Breaker	In fuse block.

COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

