



## Headlamp: Adjustments

### Aligning the Head Lamp and Fog Lamp

The head lamps should be aimed with the proper beam-setting equipment, and in accordance with the equipment manufacture's instruction.

**NOTE:** If there are any regulations pertinent to the aiming of the head lamps in the area where the vehicle is to be used, adjust so as to meet those requirements.

Alternately turn the adjusting bolts to adjust the head lamp aiming. If beam-setting equipment is not available, proceed as follows:

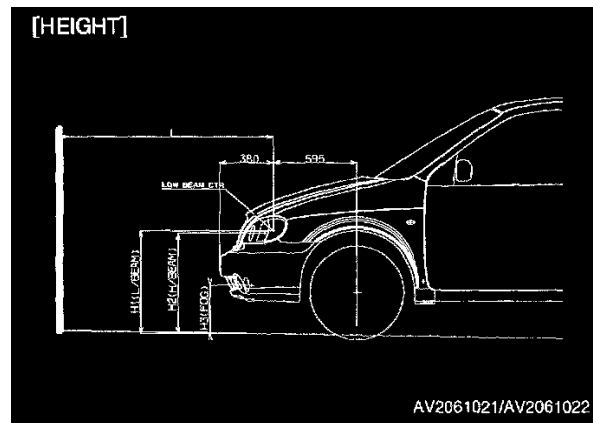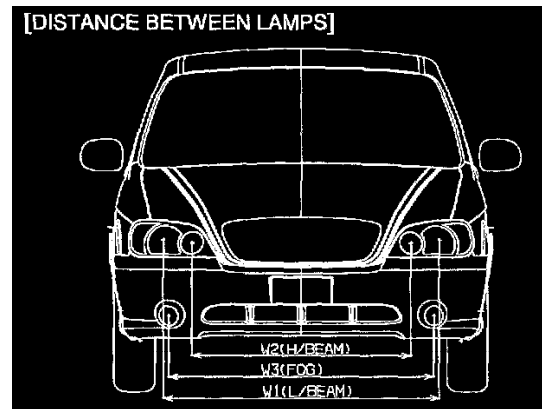

1. Check the points before adjusting the head lamp and the front fog lamp.
  1. Inflate the tires to the specified pressure.
  2. The vehicle should be place on the flat floor.
  3. Remove the load from the vehicle (except driver, fuel, O.V.M tools, spare tire, jack, engine oil, and coolant)
  4. Check the suspension spring. (Press the front and the rear bumpers several times)
  5. Clean lenses.

Lamp spec.	"H1"	"H2"	"H3"	"W1"	"W2"	"W3"	"L"
Halogen	27.16	26.55	13.42	53.81	42.79	51.77	118.1



**Notice**

"H1" Height between head lamp low beam bulb center and ground

"H2" Height between head lamp high beam bulb center and ground

"H3" Height between front fog lamp bulb center and ground

"W1" Distance between the head lamp low beam bulb centers

"W2" Distance between the head lamp high beam bulb centers

"W3" Distance between the front fog lamp bulb centers

2. Head lamp and fog lamp adjustment feature (unit: in)