


How To Manually Reset A Digital Still Camera

This Tutorial explains how to manually reset a Sony® digital still camera back to the original factory settings.

NOTE: In this Tutorial we show the DSC-P150. However, this procedure is applicable to all Sony® digital still cameras.

IMPORTANT: This reset is used to restore the camera to the original factory settings. All user settings and adjustments, such as the time and date will be lost. You can use this procedure to help troubleshoot camera errors.



Turn the camera power off.

NOTE: Please refer to your Operating Instructions for the power procedure of your model.

MPEGMOVIE VX SMART ZOOM
DSC-P150

POWER

Remove the battery from the camera.

NOTE: If the AC power adapter is connected, disconnect the adapter.



Move the **POWER** switch to the **ON** position, or hold down the **POWER** button for 15 seconds.



Reinsert the battery in the camera.

Move the **POWER** switch to the off position or release the **POWER** button.



Power on the camera.



This Concludes The Tutorial On How To Manually
Reset A Digital Still Camera

For additional assistance, click this note to visit the Sony
Support web site:

<http://www.sony.com/support>