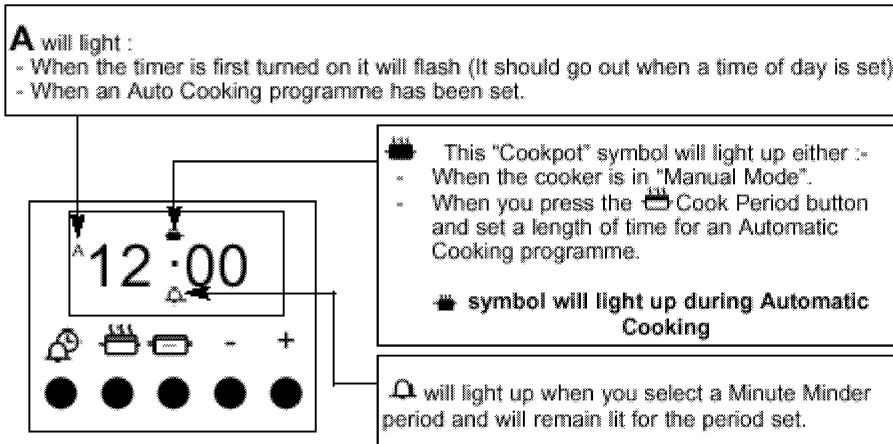


Using the timer

The timer display is in 24 hour clock format.

Ensure that the correct time of day is always set before using your cooker.



MINUTE MINDER

Here you can set a time period of up to 23 hours and 59 minutes that will count down.

When it reaches zero the timer will bleep.

e.g. If you set 20 minutes, the timer will start bleeping 20 minutes later.



COOK PERIOD

Cook period is the actual length of time for which, the timer will switch the oven on as part of an "Automatic Cooking" programme.

e.g. If you set 2 hours, the food will be cooked for 2 hours.



END TIME

The time of day at which you want an automatic cooking programme to end

e.g. If you set a cook period for 2 hours, and end time of 11:00. The timer will switch the oven on at 9:00 and turn the oven off at 11:00. You will hear a bleep at 11:00 to indicate that the automatic cooking program has finished.

Notes

When setting an automatic cooking programme you will need to set the oven control to the required temperature when you set the timer.

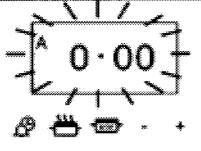
- If an automatic cooking programme has been set the oven(s) will only operate during the pre-programmed time.

+ and -

Used to adjust the various timer function settings.

Used to adjust pitch of audible tone. (See **Clock and automatic timer operation**)

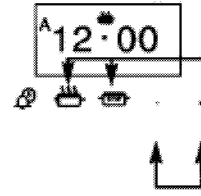
Setting the Time of Day







Step 1 Make sure all oven controls are turned **OFF**.

Step 2 Check the electricity supply to the cooker is turned **ON**.


When switched on the display will show **0.00** and the **A** symbol, both will be flashing.



Step 3 Press & hold in both the  cook period &  end time buttons together.

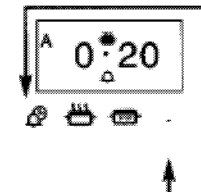
Step 4 With the  cook period &  end time buttons still held in, press either the **+** or **-** buttons to set the correct time of day.

Step 5 Release all the buttons simultaneously.


The time of day is now set and the  symbol will light up to show that the timer is in Manual Mode.



NOTE: To change the time of day repeat steps 3,4 & 5 above.


Setting the Minute Minder




Step 1 Ensure the time of day is set correctly.

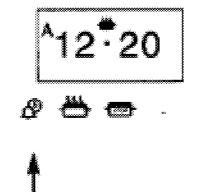
Step 2 Press and hold the  minute minder button.


Step 3 With the  button still held in set the required  minute minder time using **+** and **-** buttons.


A  symbol will light up.

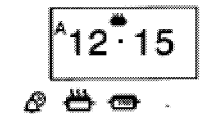
Step 4 Release all buttons and the timer display will revert back to the time of day.

The  symbol will remain lit to signify that a minute minder period has been set.





At the end of the set time a bleeping sound will be heard and the  symbol will go out. The bleeping sound will continue for several minutes unless cancelled (See **Step 5**).


Step 5 To cancel the bleeping sound press the  minute minder button. The time display will revert back to the time of day after the button is released.




To cancel the minute minder before the minute minder period has finished.

Step 1 Press the  minute minder button.

Step 2 Press the **-** button until 0.00 and the  symbol appears in the display window.

Step 3 To cancel the bleeping sound press the  minute minder button.

Note
When the minute minder has been set, the time remaining can be checked at any time by simply pressing the  minute minder button.

Automatic Cooking Programmes

If your appliance has two ovens

The main oven only is programmable.

When the timer has been set for one oven it is possible to use the top oven manually during the same automatic programme.

There are two automatic cooking programmes that can be selected using your timer:

(a) To set the timer to switch the oven ON and OFF automatically.

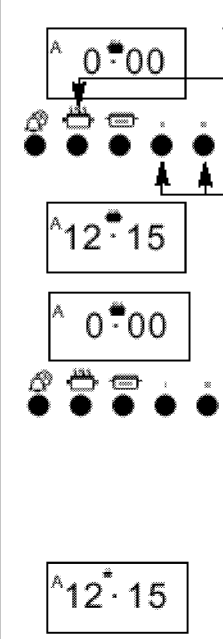
(b) To set the timer to switch on immediately and OFF automatically after a set cook period.



(a) To set the timer to switch the oven ON and OFF automatically.


This allows you to cook at a specific time for a chosen period before the oven switches off automatically.

 
Step 1 Check that the correct time of day is set. If not follow instructions for setting the time of day.


Step 2 Place food onto the correct shelf position in the oven and close the oven door.




Step 3 Press and hold the  cook period button. The display will read 0.00 with the cookpot symbol  lit.

 
Step 4 With the  cook period button still held in set the required cook period using + and - buttons.


Release the buttons and the timer display will revert to the time of day with the **A** symbol and  symbol lit.

Step 5 Press and hold the  end time button. The display will read the earliest possible time for the cook period that you have set above.

 
Step 6 With the  end time button still held in, use the + and - buttons to set the end time. i.e. The time you require the oven to switch off.


Release all the buttons and the timer will revert back to the time of day

The **A** symbol will remain lit to signify that an automatic cooking programme has been set. The  symbol will go out.

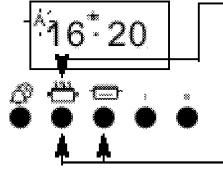
When the auto cook programme starts the  symbol will then light up again.


Step 7 Turn the oven control to the required temperature.






At the end of the automatic cook period the **A** symbol will flash and an intermittent beeping sound will be heard. The  symbol will go out.

The beeping sound will continue for several minutes unless cancelled (see step 8). The **A** symbol will continue to flash until the timer is returned to manual operation (see below).

 
 




Step 8 Press the  cook period button to cancel the beeping sound.

Step 9 Turn the oven control(s) to the OFF position.

Step 10 Press the  cook period and  end time buttons together to return the oven(s) to manual operation. The **A** symbol will go out and the  symbol will light up.

Notes:

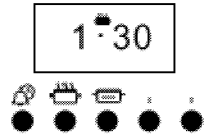
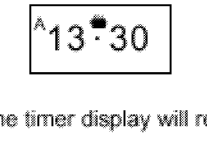




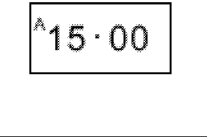

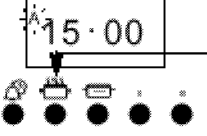

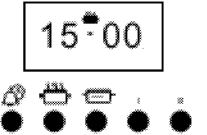




 
When cooking automatically the cook period can be checked at any time by simply pressing the  cook period button and the  end time by pressing the end time button. To cancel the auto cooking programme before or after auto cooking starts, press the  cook period and  end time buttons together. This will return the cooker to manual operation.

(b) To set the timer to switch ON immediately and OFF automatically after a set cook period.

Step 1 Check that the correct time of day is set. If not follow instructions for setting the time of day.

Step 2 Place food onto the correct shelf position in the oven and close the oven door.

Step 3 Turn the oven control to the required temperature.

 	<p>Step 4 Press and hold the  cook period button, the display will read 0.00 and the  symbol will light up.</p> <p>With the  cook period button still held set the required cook period using the + and - buttons, the A symbol will light up. e.g. 1 hour 30 minutes.</p> <p>Note: The cook period is the length of time the food requires to cook.</p> <p>Step 5 Release all buttons.</p> <p>The timer display will revert to the time of day with the A and  symbols remaining lit.</p>
	<p>At the end of the cook period the A symbol will flash and an intermittent beeping sound will be heard. The  symbol will go out. The beeping sound will continue for several minutes unless cancelled (see Step 6). The A symbol will continue to flash until the timer is returned to manual operation (see below).</p>
	<p>Step 6 Press the  cook period button to cancel the beeping.</p>
	<p>Step 7 Turn the oven control(s) to the OFF position.</p> <p>Step 8 Press the  cook period and end time buttons together to return the cooker to manual operation. The A symbol will go out and the  symbol will light up.</p>
<p>When cooking automatically the cook period can be checked at any time by simply pressing the  cook period button. To cancel the auto cooking programme before or after automatic cooking starts, press the  cook period and  end time buttons together. This will return the cooker to manual operation.</p>	