


## Electronic timer

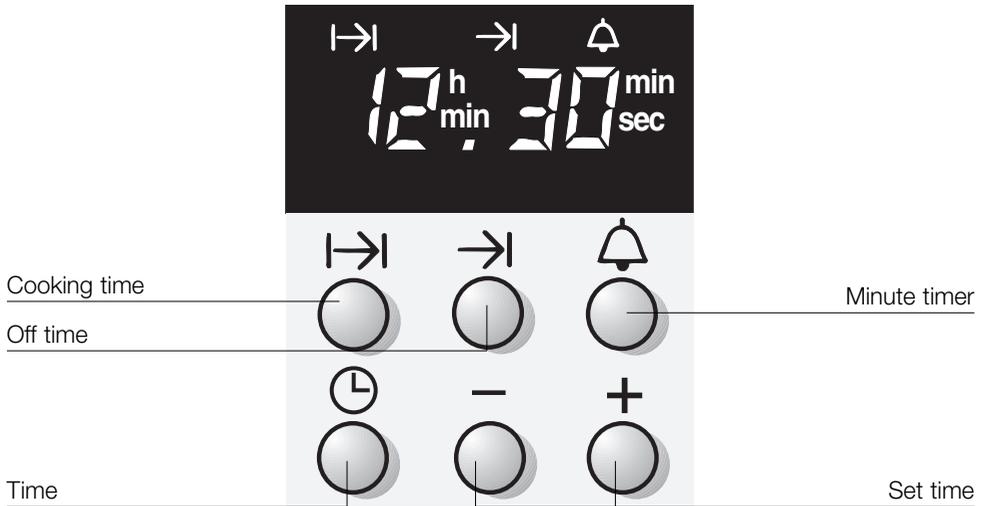

### Notes:

- If you keep the button **-** or **+** pressed down, you can set the time in steps of 10 minutes.
- The time of day is not displayed if you have already set the timer, a duration or an end. Should you wish to know the time, simply press the clock button . The time appears in the display for a few seconds.

### Time of day

- Before you use your appliance for the first time, it is necessary to set the current time on the electronic timer.
- After connecting to the mains, or after a power failure, the display **0.00** will blink.


#### Setting the time of day:

1. Press the clock button .
2. Set the current time with the **-** or **+** button. The time will automatically be taken over after a few seconds.

#### Changing the time (e.g. transition from summer to winter time):

**Caution!** The time of day cannot be changed whilst a duration or an end is set.

1. Press the clock button .
2. Set the current time with the **-** or **+** button.

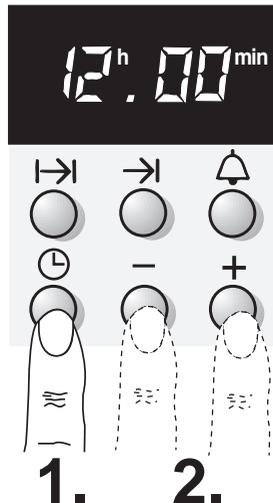

## The alarm

- ❑ The alarm (timer) can be set at any time.  
This applies even if a duration or an end has already been set.
- ❑ The alarm time always counts down visibly in the display.  
The alarm also features a special acoustic signal.  
This enables you to hear when the alarm time or a selected duration has expired.

### Setting procedure:

1. Press the alarm button .
  2. Set the desired alarm time with the - or + button.
- ❑ The selected time is automatically registered after a few seconds. The alarm time begins to count down in the clock display.
  - ❑ **On completion of the selected time**, an acoustic signal sounds and the alarm symbol flashes. It is possible to switch off the signal prematurely by pressing the alarm button .


### Correction:

- ❑ Press the alarm button .
- Change the time with the - or + button.

### Cancelling:

- ❑ Press the alarm button  twice in quick succession.

### Setting:

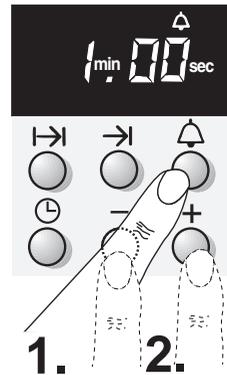

## Automatic timer for the main oven

- ❑ You can switch the oven on and off via the electronic clock.

### Automatic switch off:

- ❑ If you wish to bake or roast food immediately, it is only necessary to set the cooking time.
  1. Select the heating system and the oven temperature.
  2. Press the time button I→I.
  3. Change the recommended cooking time with the - or + button.  
The oven starts after a few seconds.
- ❑ An acoustic signal sounds **when the time expires**. The oven switches off. You may switch off the signal prematurely by pressing the time button I→I.
- ❑ **If the meal is not yet ready**, make a new time setting using the knob.
- ❑ Switch off the function selector **when your meal is ready**.

### Correction:


- ❑ The duration can be changed at any time. Press the cooking time button I→I and correct the duration of cooking time with the - or + button.

### Cancel:


- ❑ Switch off the function selector.

### Notes:

- ❑ The alarm time counts down in the clock display. If you want to know how much longer the meal in the oven will take, simply press the time button I→I. The time remaining is then displayed for a few seconds.
- ❑ You can set any time between 1 minute and 23 hours, 59 minutes.

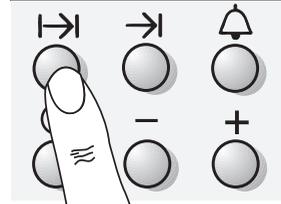

2.

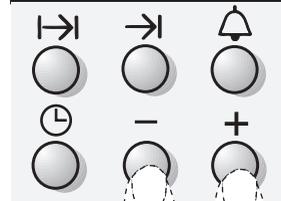

3.

# Electronic timer

## Automatic switch on and switch off:

Please remember that easily spoiled foods must not be allowed to remain in the oven for too long.

Need to be somewhere else – quickly? Don't worry, the food will still be ready at the right time. That's because the oven switches on and off automatically at the desired times.

1. Select the heating system and the oven temperature.
  2. Press the time button  $\rightarrow$ .
  3. Change the recommended cooking time with the - or + button.
  4. Press the end button  $\rightarrow$ . The end time appears in the display. This represents the time when the oven will switch off. Change this to a later time.
  5. Set the new end time with the + button.
- The oven switches on and off automatically. The clock display contains the time remaining until the oven switches on. The duration then begins to count down.
  - An acoustic signal sounds **when the time expires**. The oven switches off. You may switch off the signal prematurely by pressing the time button  $\rightarrow$ .
  - If the meal is not yet ready**, make a new time setting using the knob.
  - Switch off the function selector **when your meal is ready**.

### Correction:

- Before starting the oven, you may change the end time at any juncture. To do this, press the end button  $\rightarrow$ . Change the end time with the - or + button.

### Cancel:

- Switch off the function selector.

### Note:

- The end time will appear for a few seconds if you press the end button  $\rightarrow$ .



2.



3.



4.



5.