


INSTRUMENT CLUSTER REMOVAL/INSTALLATION


1. Disconnect the battery. See BATTERY DISCONNECT .
2. Remove the screws (1) and pull the center finish trim panel finish panel (2) out from the instrument panel.

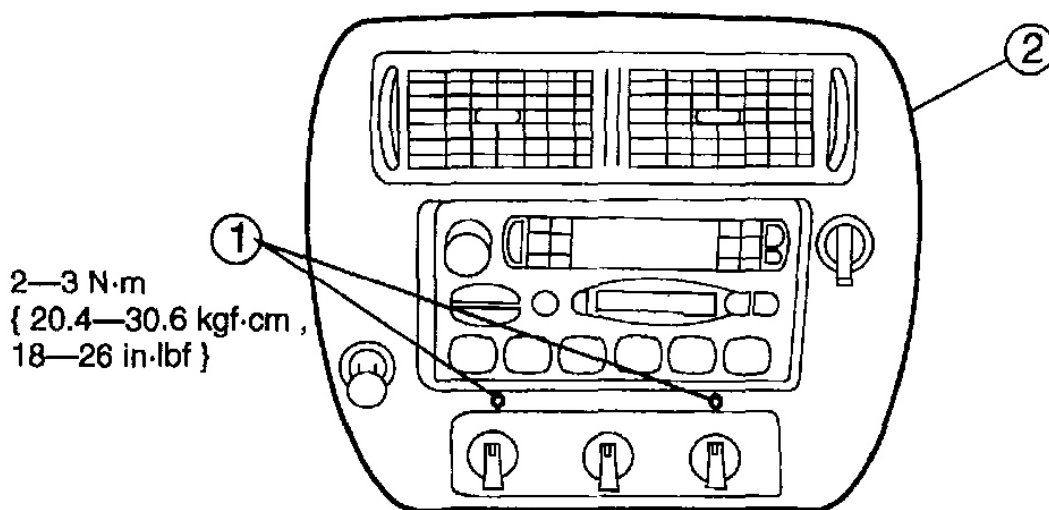

G01926128

Fig. 3: Removing Center Finish Trim Panel Finish Panel
Courtesy of MAZDA MOTORS CORP.


3. Disconnect the electrical connectors and remove the radio and center instrument panel finish panel.
4. Remove the screws (1) and remove the inner hood lock release handle (2).

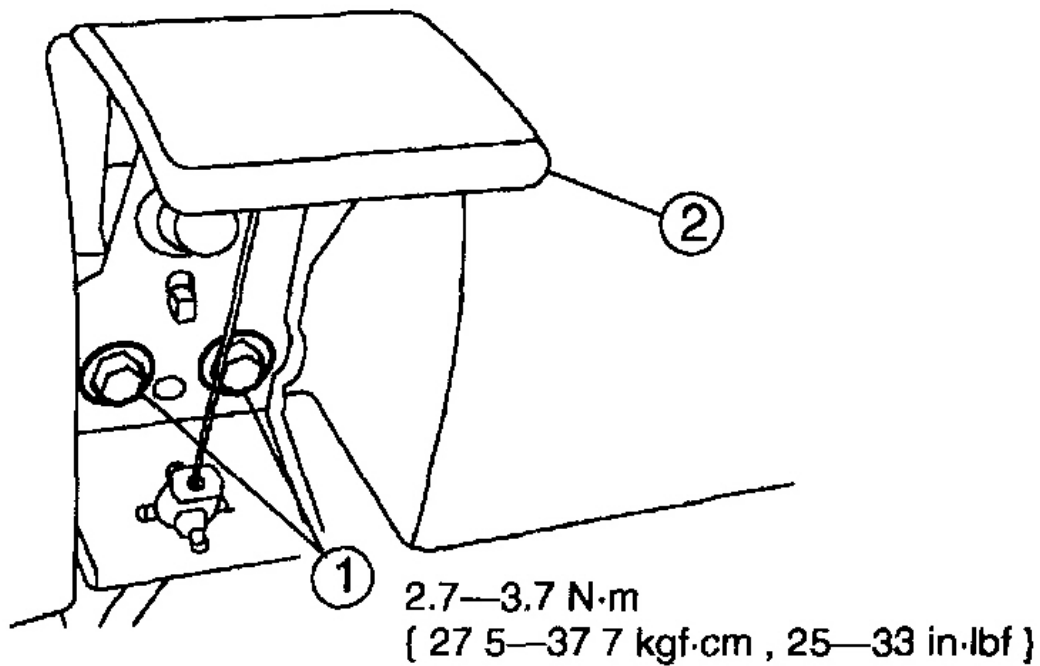

G01926129

Fig. 4: Removing Inner Hood Lock Release Handle
Courtesy of MAZDA MOTORS CORP.

5. Remove the screws (1) and remove the instrument panel steering column cover (2).

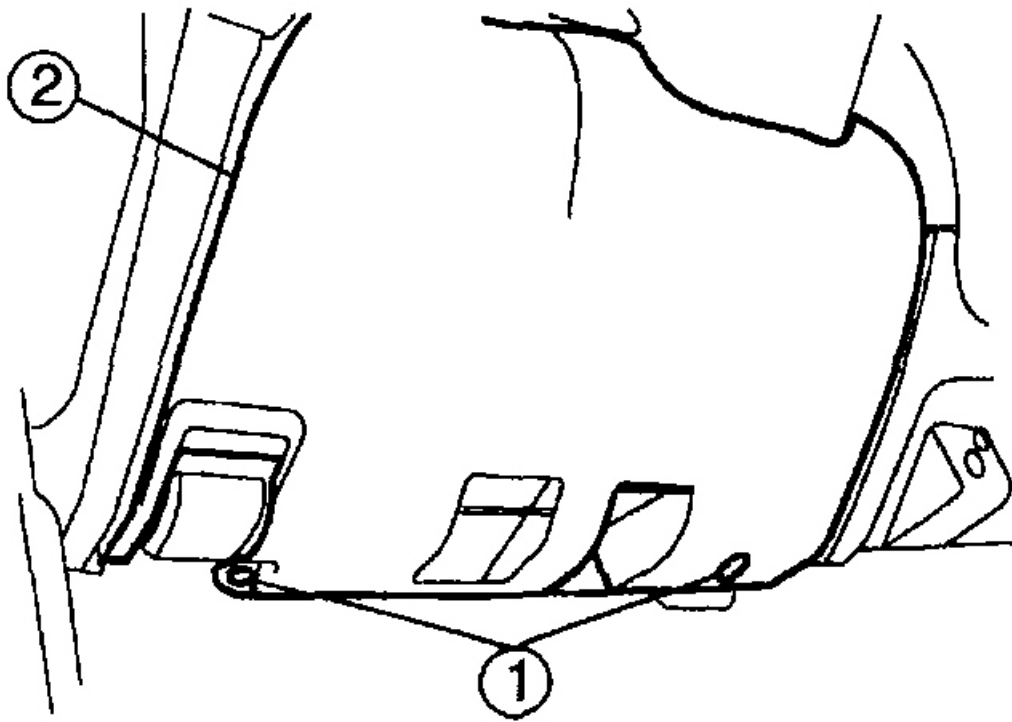

G01926130

Fig. 5: Removing Instrument Panel Steering Column Cover
Courtesy of MAZDA MOTORS CORP.

6. Remove the four screws (1) and remove the instrument panel steering column opening cover reinforcement (2).


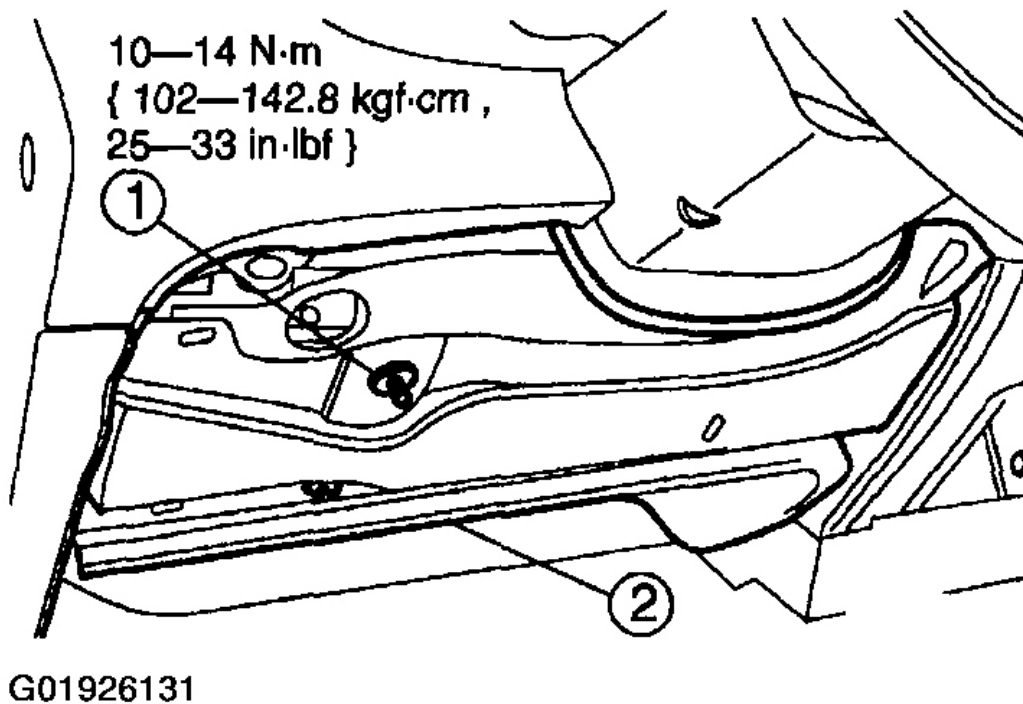


Fig. 6: Removing Instrument Panel Steering Column Opening Cover Reinforcement
Courtesy of MAZDA MOTORS CORP.


7. If equipped, position the column gear shift lever aside.
8. Remove the screws (1) and pull out the instrument cluster finish panel (2).

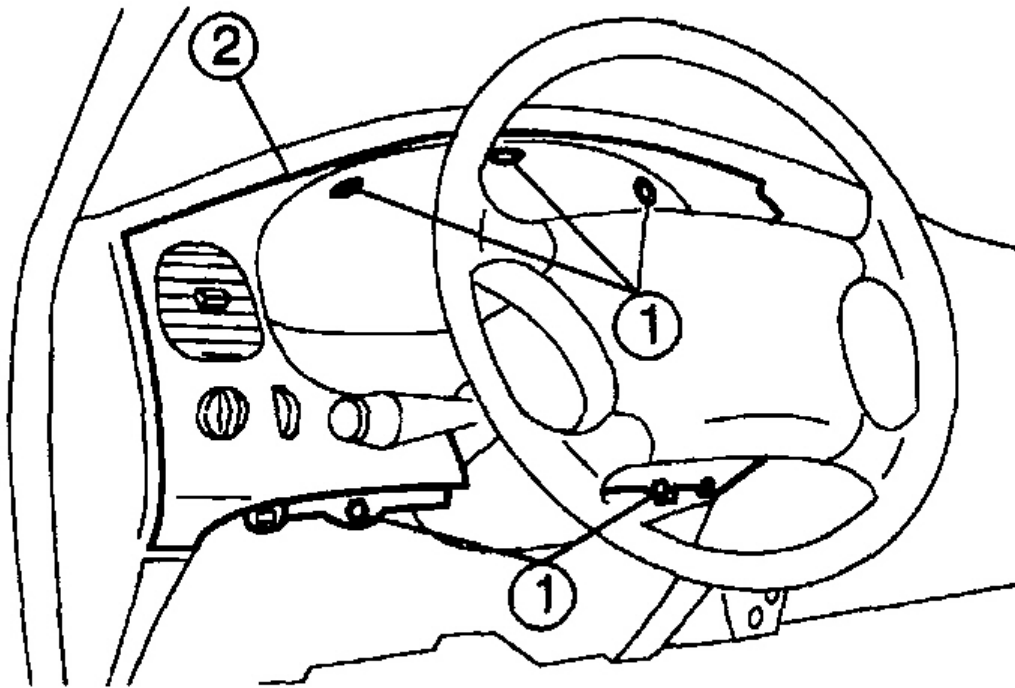

G01926132

Fig. 7: Removing Instrument Cluster Finish Panel
Courtesy of MAZDA MOTORS CORP.


9. Disconnect the connectors (1) and pull out the instrument cluster finish panel (2).

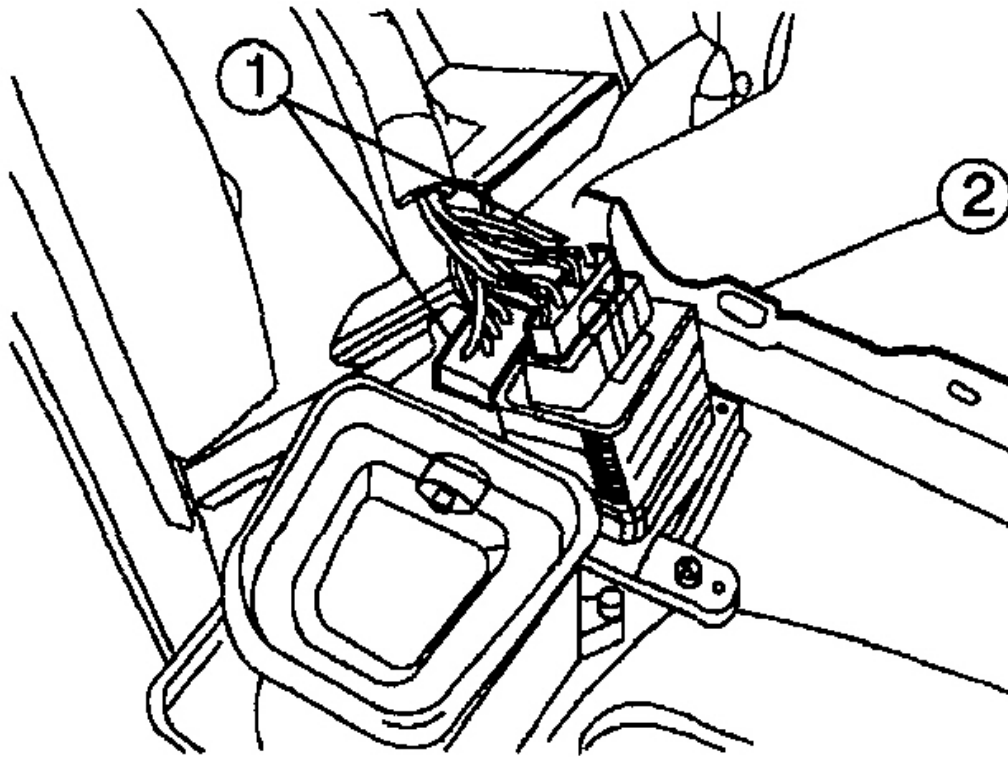

G01926133

Fig. 8: Disconnecting Connectors
Courtesy of MAZDA MOTORS CORP.


10. Remove the instrument cluster screws (1).

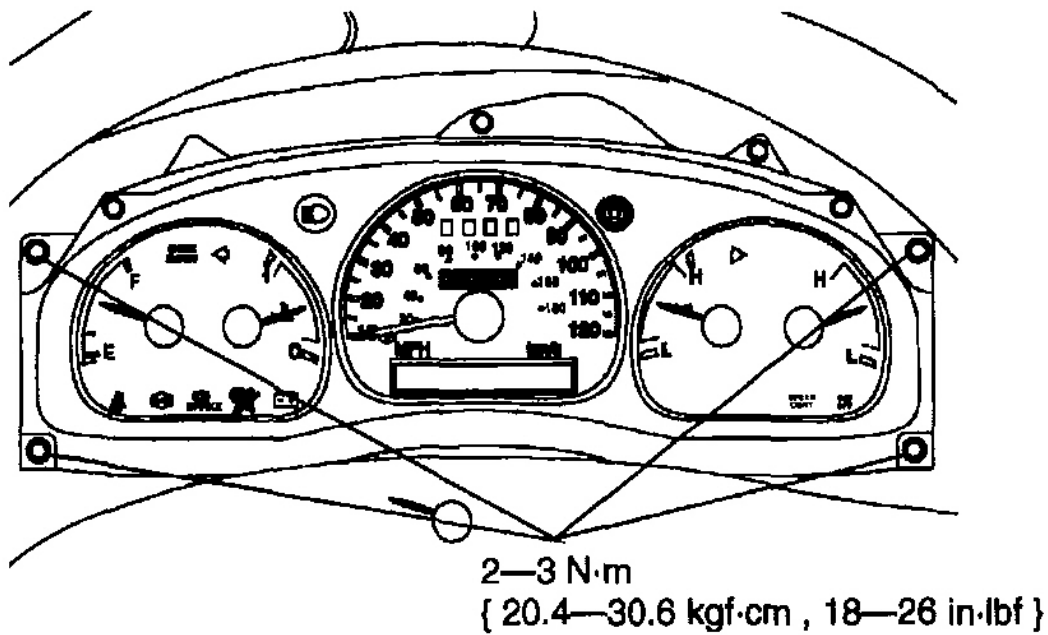

G01926134

Fig. 9: Removing Instrument Cluster Screws
Courtesy of MAZDA MOTORS CORP.


11. If equipped with an automatic transmission, pull out the cluster and remove the transmission range indicator.

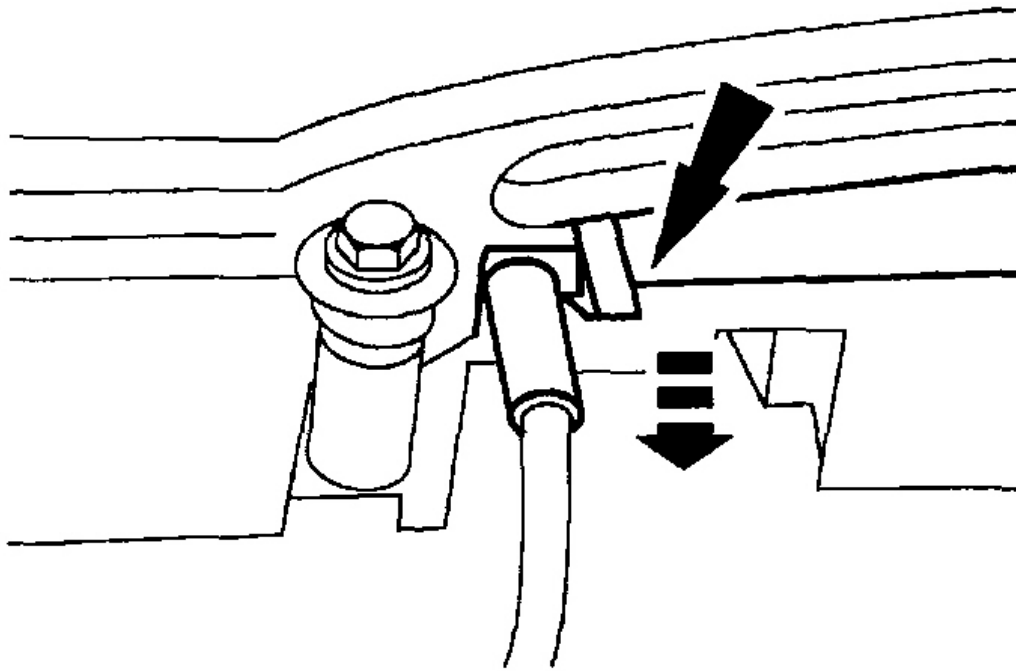

G01926135

Fig. 10: Removing Transmission Range Indicator
Courtesy of MAZDA MOTORS CORP.

12. Disconnect the electrical connectors (1) and remove the instrument cluster (2).

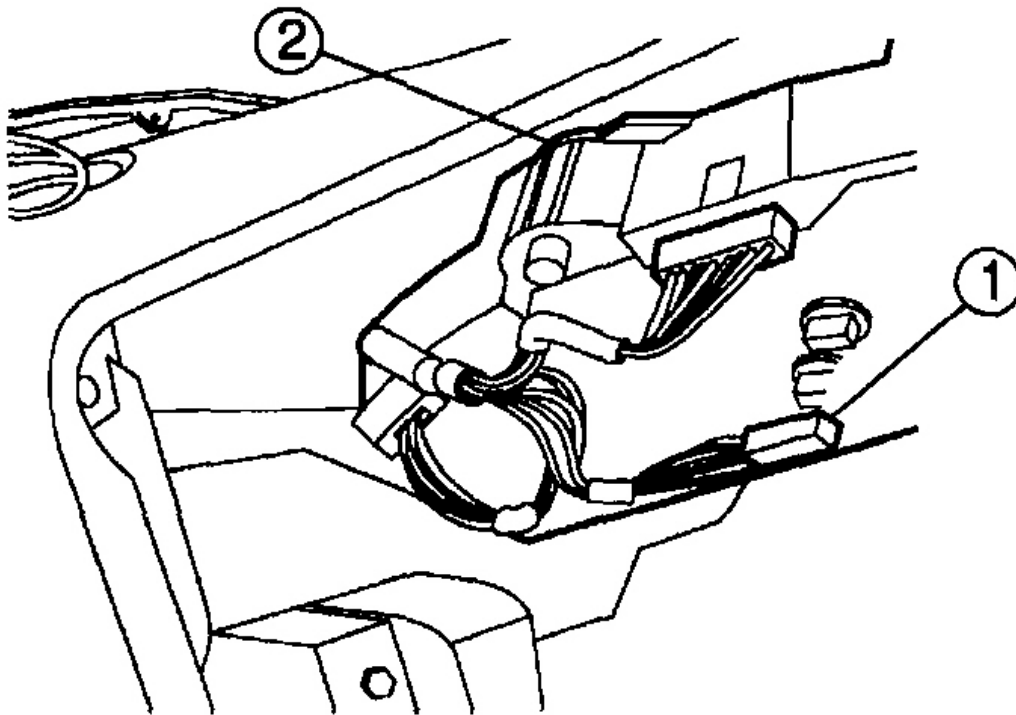

G01926136

Fig. 11: Removing Instrument Cluster
Courtesy of MAZDA MOTORS CORP.

NOTE:

- When the battery is disconnected and reconnected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive strategy. The vehicle may need to be driven 16 km (10 mi) or more to learn the strategy.

13. Install in reverse order of removal.