


 Applies To: **See VEHICLES AFFECTED**
**October 8, 2002**

## Side-To-Side Looseness in the Driver's 8-Way Power Seat

### SYMPTOM

The driver's seat feels loose.

### PROBABLE CAUSE

Excessive clearance in the seat base.

### VEHICLES AFFECTED

1998–02 Accord 2-Door: ALL

1999–02 Accord 4-Door: ALL

1999–01 Odyssey: ALL

2002 Odyssey:

From VIN 2HKRL1...2H500001 thru  
2HKRL1...2H584345

2003 Pilot:

From VIN 2HKYF1...3H500001 thru  
2HKYF1...3H501296

### CORRECTIVE ACTION

Install shims on the seat base.

### PARTS INFORMATION

Shims:

P/N 81599-S84-999, H/C 7325301  
(package of 8 shims)

### WARRANTY CLAIM INFORMATION

**In warranty:** The normal warranty applies.

Operation Number: 749002

Flat Rate Time: 0.2 hour

Failed Part: P/N 81660-S87-A53  
H/C 6912711

Defect Code: 061

Contention Code: B99

Skill Level: Repair Technician

**Out of warranty:** Any repair performed after warranty expiration may be eligible for goodwill consideration by the District Parts and Service Manager or your Zone Office. You must request consideration, and get a decision, before starting work.

### DIAGNOSIS

Diagnose the type of driver's seat looseness by moving the seat to the midpoint position. The horizontal switch on the side of the seat adjusts the seat bottom. Pull up or push down on the front of the switch to move the


seat bottom's front edge up or down to the midpoint position. Pull up or push down on the rear of the switch to move the seat bottom's rear edge up or down to the midpoint position.

Sit in the driver's seat, and move from side to side while resting against the seat-back.

- If the seat moves side to side, go to REPAIR PROCEDURE.
- If the seat moves other than side to side, continue troubleshooting.


### REPAIR PROCEDURE

1. Raise the front and rear of the driver's seat bottom to the fully vertical position, and move the seat fully forward.
2. At each side of the seat base, loosen the two rear inboard T-30 Torx bolts several turns.

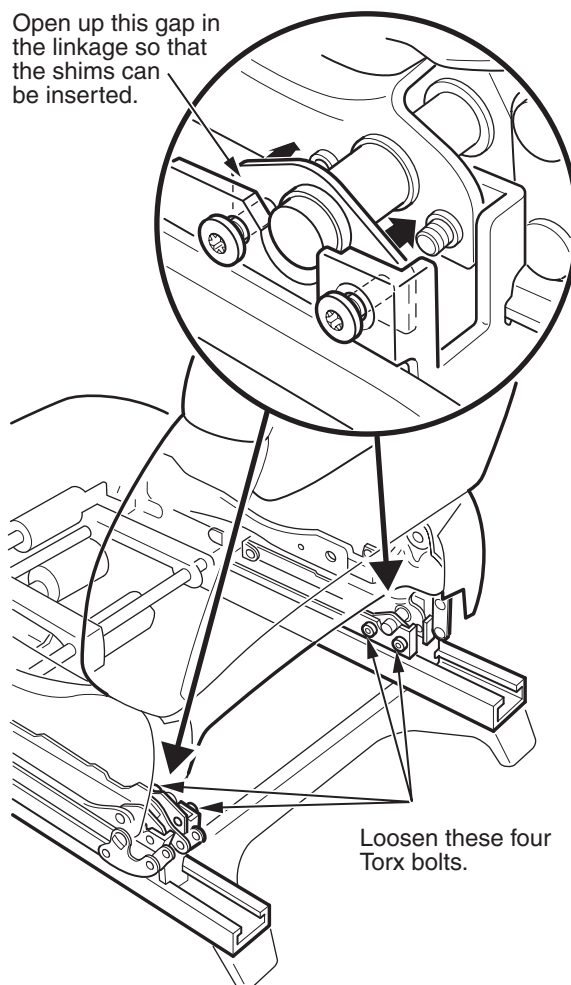

3. Push on the loosened bolts to show the clearance in the linkage. Install shims on one side or both sides of the seat base linkage, as needed. Rock the seat-back from side to side to assist with the installation of the shims.

**NOTE:** Use as many shims as necessary to eliminate the clearance but no more than four shims per side. Do not force the shims into place.

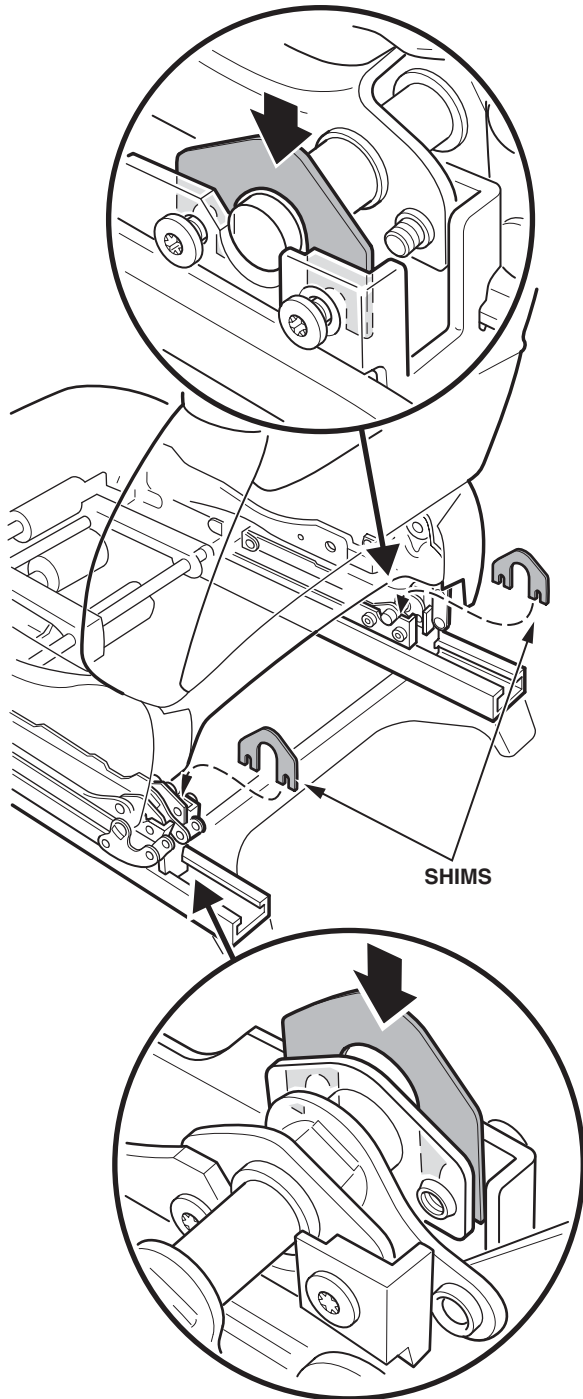

4. Torque the four T-30 Torx bolts to 10 N·m (7.4 lb-ft).
5. Move the seat assembly back to the midpoint position, and check for side-to-side looseness.