

## REMOVAL AND INSTALLATION

### Door Latch

#### Material


Item	Specification
Multi-Purpose Grease Spray XL-5	ESB-M1C93B

#### Removal


- NOTE:** LH side shown, RH side similar.  
Remove the door trim panel. For additional information, refer to Section 501-05.

- Position the watershield aside.


- Disconnect the exterior door handle actuating rod.

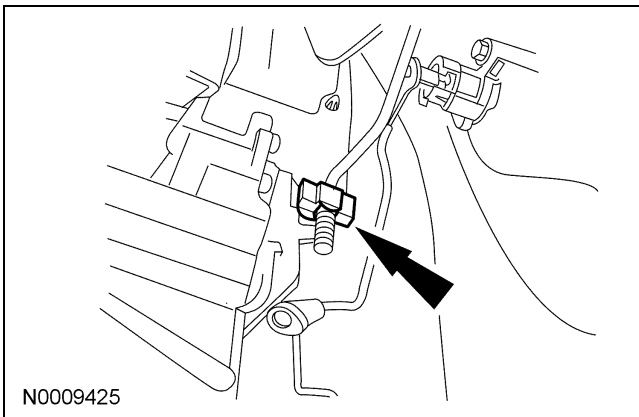


- Remove the 3 door latch bolts.
- Disconnect the manual lock rod.

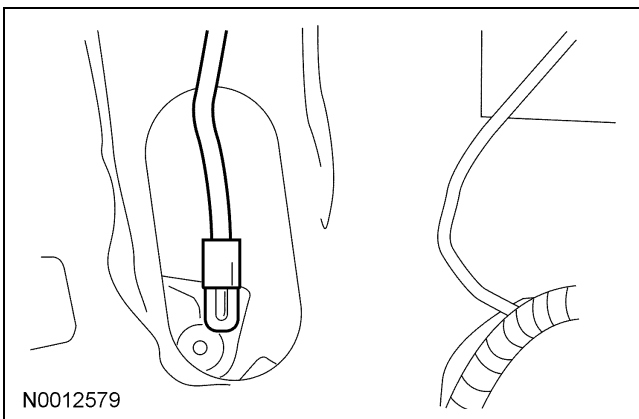

- If equipped, disconnect the door lock cylinder actuating rod.

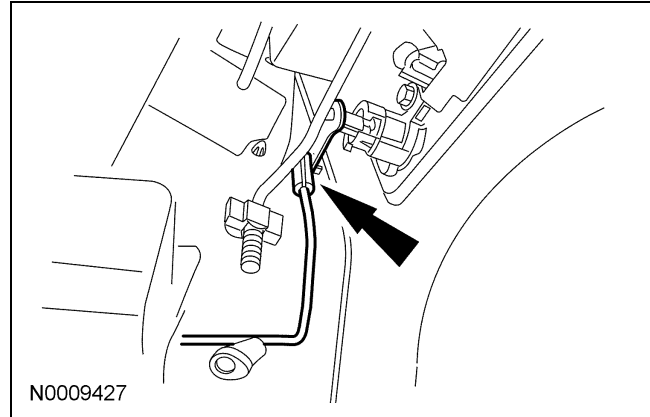


- Disconnect the 2 wiring harness electrical connectors.

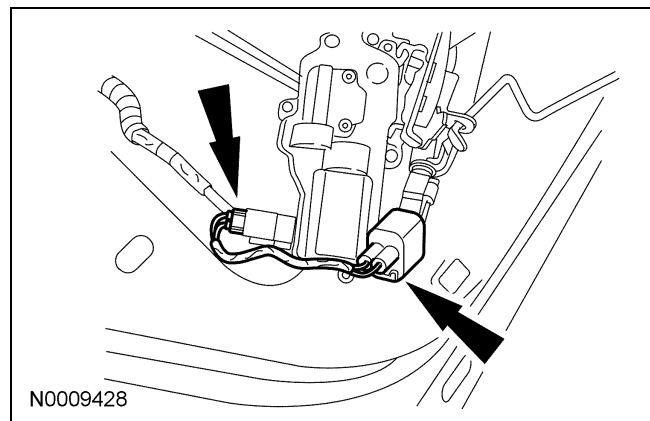

- Remove the cable cover.
  - Release the clip.
  - Remove the pin-type retainer.
- ⚠ CAUTION:** Make sure the interior door handle actuating cable does not kink or damage to the cable may occur.

Disconnect the interior door handle actuating cable.

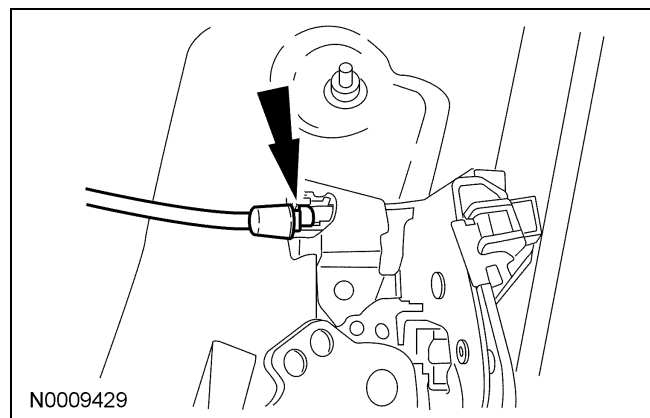


**REMOVAL AND INSTALLATION (Continued)**


10. Remove the door latch.

**Installation**


1. Position the door latch inside the door.
2. Connect the interior door handle actuating cable.

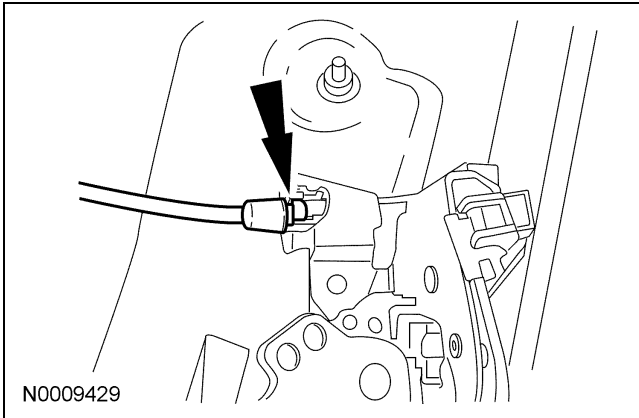


3. Connect the cable cover.
4. Connect the 2 wiring harness electrical connectors.

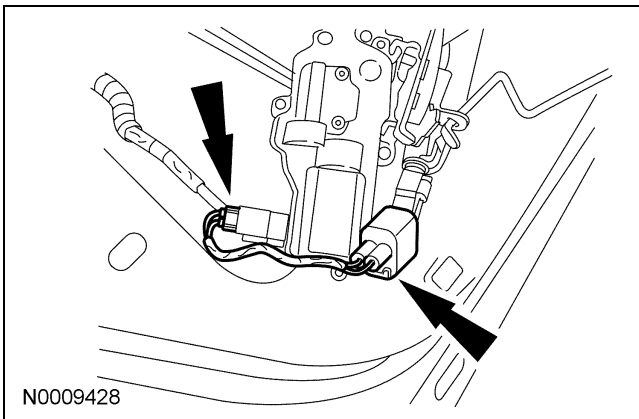


5. If equipped, connect the door lock cylinder actuating rod.

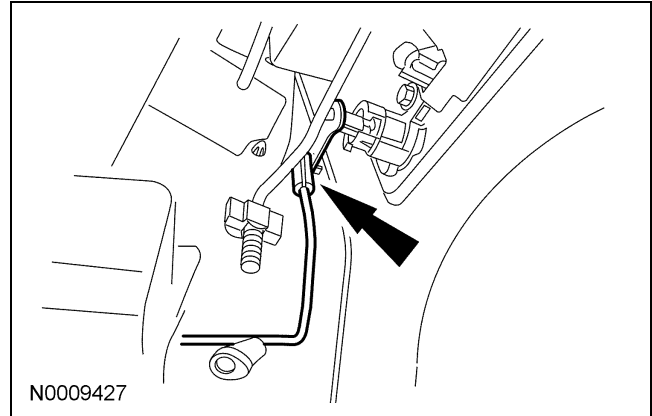

6. Connect the manual lock rod.

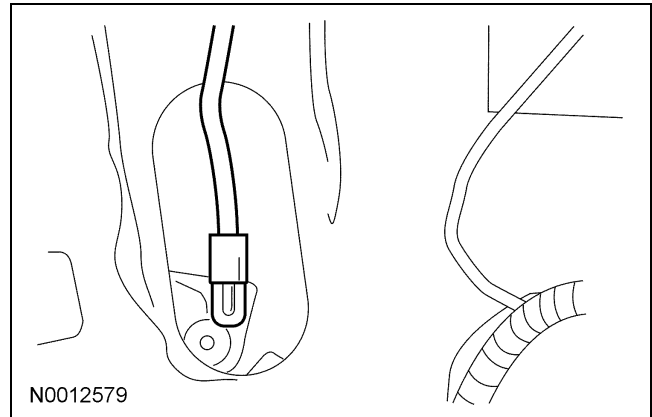

7. Install the 3 door latch bolts.
  - Tighten to 12 Nm (9 lb-ft).
8. **NOTE:** Push upward on the exterior door handle actuating rod and make sure the door latch is in a neutral position when installing the rod into the retaining clip to make sure the exterior door handle is correctly positioned. Connect the exterior door handle actuating rod into the clip.

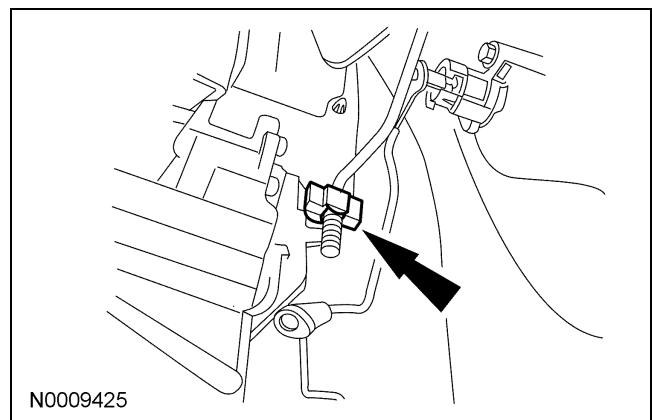

---

**REMOVAL AND INSTALLATION (Continued)**

9. Reseal the watershield.
  10. Install the door trim panel. For additional information, refer to Section 501-05.
-