


## Air Cleaner Housing: Service and Repair

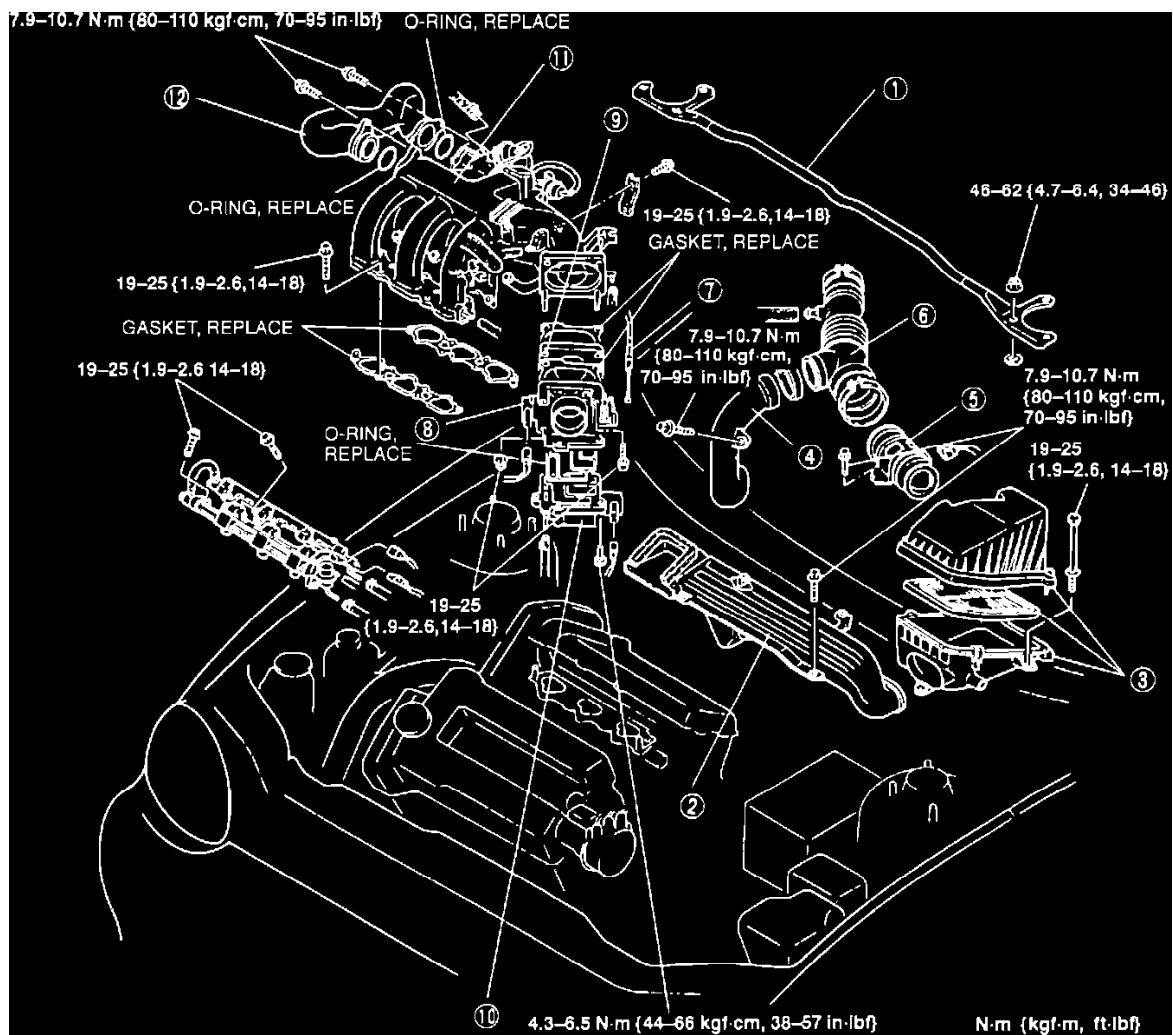

### Intake System R&R

1. Disassemble as needed to remove air cleaner housing.
2. Inspect parts and replace as needed.
3. Install in reverse order of removal.

### COMPONENTS

1. Strut bar
2. Fresh air duct
3. Air cleaner housing
4. Resonance duct
5. Volume air flow sensor
6. Air intake hose
7. Accelerator cable
8. Throttle body
9. Spacer
10. BAC valve
11. Intake manifold
12. Air intake pipe