

ALLDATA  
Online

[Home](#) | [Account](#) | [Contact ALLDATA](#) | [Log  
Out](#) | [Help](#)

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#) Component Search:

[Conversion Calculator](#)

**1994 Saab 900 S Sedan L4-2290cc 2.3L DOHC**

[Vehicle Level](#)  [Instrument Panel, Gauges and Warning Indicators](#)  [Locations](#)

Locations

[Notes](#)

Main Instrument Display Panel: Component Location

**COMPONENT LOCATION VIEW**

## Main Instrument Display Panel: Component ID

### COMPONENT ID

- 2 Generator, far down on the right-hand side of the engine.
- 10 Lights switch, on dashboard between the steering wheel and driver's door.
- 16 Instrument lighting rheostat, in switch assembly between the steering wheel and driver's door.
- 22A Main fuse board on short side of dashboard by the driver's door.
- 27 Direction indicator lamps, LH, in front and rear light clusters.
- 28 Direction indicator lamps, RH, in front and rear light clusters.
- 42 Brake fluid warning switch in the brake fluid reservoir.
- 43 Handbrake switch under the centre console adjacent to the handbrake.
- 44 Oil pressure sensor 4-cyl: below intake manifold  
V6: on engine oil pump body.
- 45 Coolant temperature sensor on the left-hand side of the engine.
- 46 Fuel level sensor in the fuel tank.
- 54 Door switch at bottom of door opening.

- 161 Rear fog light switch in switch assembly between steering wheel and driver's door.
- 216 ACC control module in centre of dashboard.
- 228B Filament monitor, headlamps, on main relay board in the engine bay.
- 289 Anti-theft alarm control module under left-hand front seat.
- 331 Airbag control module under the centre console behind the handbrake.
- 342A Main fuse board in the engine bay.
- 267 Radio and cassette player in centre of
- 353 dashboard.
- 416 EXH relay on main relay board in the dashboard.
- 430 Trionic control module behind side trim on right-hand side.
- 445 Data link connector under dashboard by the steering wheel.

(H16-1)

- 500 ICE control module  
LHD: above main relay board in dashboard  
RHD: behind main relay board in dashboard
- 502 Transmission control module (TCM) in cabin on right-hand side of bulkhead partition.
- 505 Control module, M2.10.1, behind side trim on right-hand side.
- 506 WINTER switch on centre console beside the selector lever.
- 507 TCS control module under the right-hand front seat.
- 508 Cruise Control system control module in engine bay on the right-hand side below the windshield.
- 510 Control module, M2.8.1, behind side trim on right-hand side.
- 540 Main instrument display panel on the dashboard.
- 541 SID unit in centre of dashboard.
- 547 ABS control module integrated with the brake unit behind the battery.

2-Pin Connector

H2-5 Under the rear seat adjacent to the fuel pump.

4-Pin Connectors

H4-7 Under the rear seat adjacent to the fuel pump.

H4-8 Brown connector on left-hand side of the engine below the cable conduit.

33-Pin Connectors

H33-2 Black connector on bracket below the left-hand A pillar.

H33-3 Blue connector on the bracket below the left-hand A pillar.

H33-4 On the bulkhead partition behind the glove box.

Grounding Points

G33S Grounding point, connector bracket (Signal) below the left-hand A pillar.

G33P Grounding point, connector bracket (Power) below the left-hand A pillar.

G34P Grounding point, control module bracket below the right-hand A pillar.

