


Door Trim Panel (76.34.01)

Removal


1. Remove door escutcheon.
 1. Holding door handle in the open position, remove the escutcheon securing screw cover.
 2. Slacken and remove the escutcheon securing screw, remove escutcheon from door casing and return door handle to closed position.

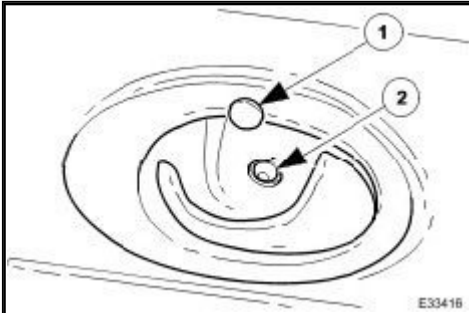

Zoom

Sized for Print

2. Remove trim mat from rear of door pocket and slacken and remove the securing screw.

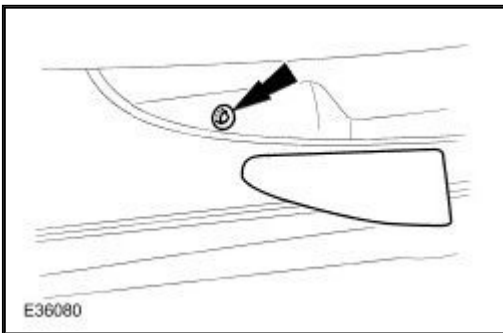


Zoom

Sized for Print

3. Position door switch pack for access.
 1. Using a suitable plastic hook, release plastic stud and remove trim from front of door pocket.
 2. Slacken and remove screw securing switch pack to door casing and position switch pack for access.




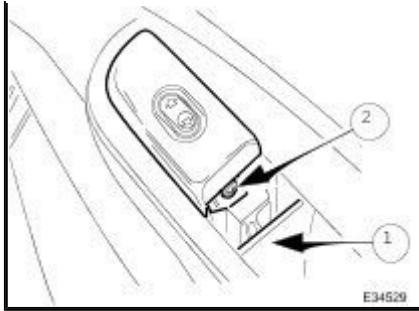

Zoom

Sized for Print

4. Slacken and remove screw securing casing to door bracket.

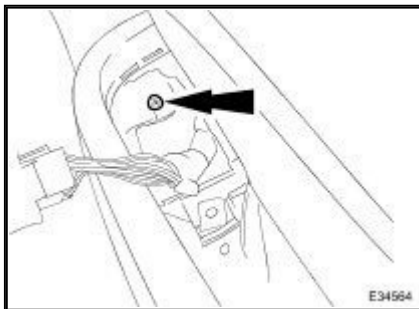


Zoom

Sized for Print

5. Remove door casing for access to multiplugs.

1. Release eight studs securing the casing to the door.
2. Position the casing for access and disconnect the door switch pack and puddle lamp multiplugs.

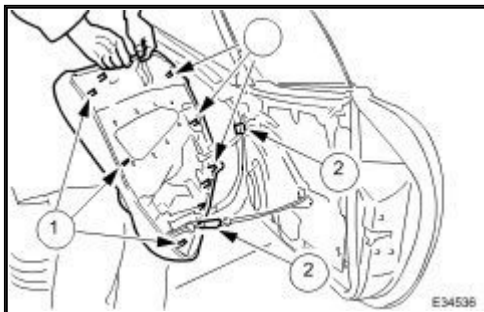


Zoom

Sized for Print

6. Remove door casing from [vehicle](#) and detach switch pack.
 7. Remove puddle lamp lens.
1. Move puddle lamp lens securing tab downwards.

2. Slide lens downwards to release it from the lamp assembly.
3. Slacken and remove two screws securing the puddle lamp assembly to the casing and remove puddle lamp from casing.

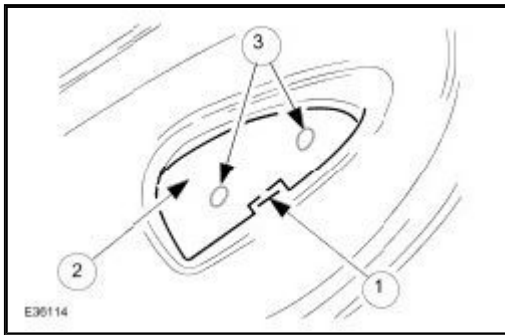

Zoom

Sized for Print