



## Selector Cable Adjustment

The cable has a sliding clamp at the transmission end; the bolt needs to be slackened.

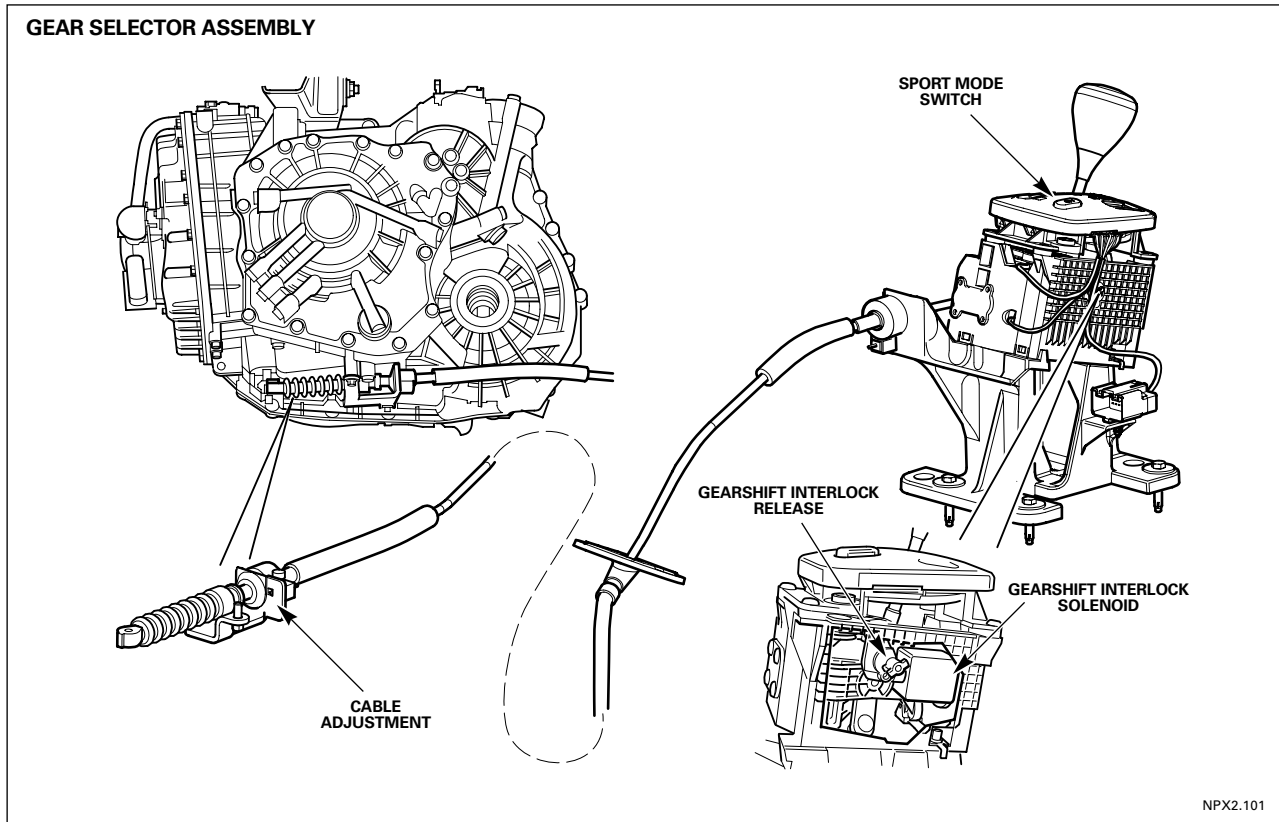

1. Position the transmission in neutral.
2. Position the selector lever in neutral.
3. Fit the cable at both ends (if they have been removed).
4. Ensure that the selector and transmission linkage are not moved.
5. Lock the bolt on the clamp.
6. Try the selector around the J-gate – ensure that it selects each position smoothly and that each LED illuminates in each position.
7. If the LED does not illuminate in one of the positions, or if the engine will not start in P or N, recheck the adjustment.

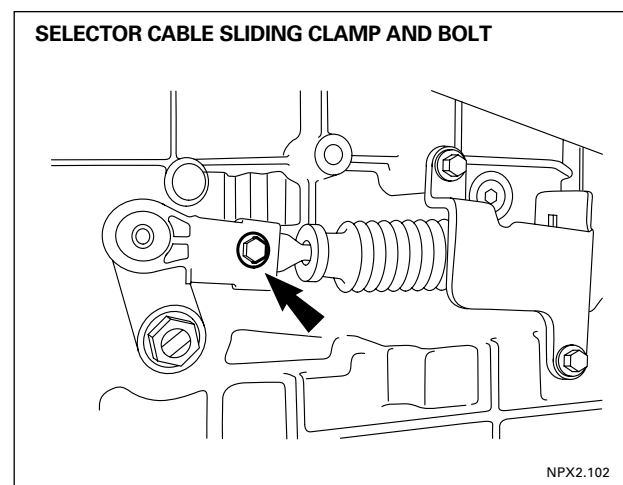

**NOTE:** If there is a concern with selecting manual fourth, try adjusting the cable with the lever positioned 2 mm towards the D position.