


## RELAY LOCATIONS

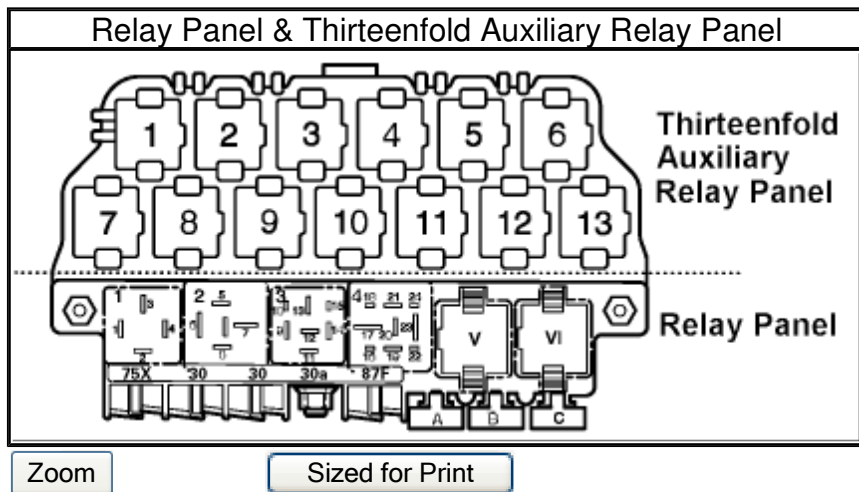

**Relay location on the thirteen position auxiliary relay panel, above relay panel:**

- 1 - Auxiliary Emergency Flasher Relay (404)
- 2 - Relay for Motor Remote Unlock Rear Lid (79)
- 3 - Starting Interlock Relay (53) (185) (465)
- 4 - Fog Light Relay (53)
- 5 - Control Module for Multi-function Steering Wheel (450)
- 6 - Control Module for Multi-function Steering Wheel (450)
- 7 - Daytime Running Lights Change-over Relay (173), from April 1999
- 8 - Daytime Running Lights Change-over Relay (173), through March 1999
- 9 - Dual Horn Auxiliary Relay (53)
- 10 - Glow Plug Relay (180)
- 10 - Warning Lamp Auxiliary Relay (200)
- 11 - Park/Neutral Position (PNP) Relay (175)
- 12 - Power Supply (Terminal 30, B+) Relay (109)

**Relay Panel:**

- 1 - Dual Horn Relay (53)

- 2 - Load Reduction Relay (18) (100)
- 4 - Fuel Pump (FP) Relay (409)
- V - Wiper/Washer Intermittent Relay (192) (377) (389)
- VI - Wiper/Washer Intermittent Relay (192) (377) (389)

**NOTE** Number in parentheses ( ) indicates production control number stamped on relay housing.