


REMOVAL


1. Disconnect the [battery](#) ground cable.
2. Remove the accessory drive belt.
3. Remove the generator electrical connector cover.

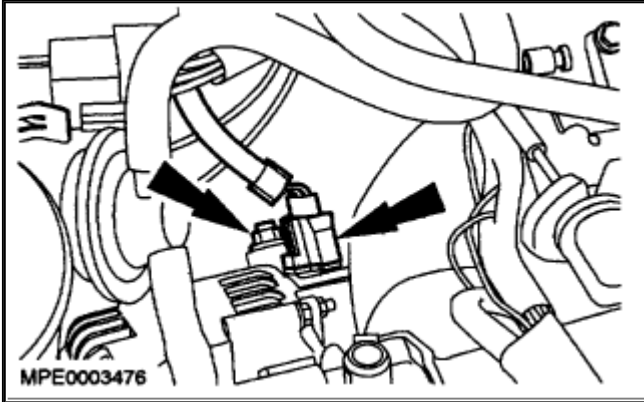

Zoom

Sized for Print

4. Disconnect the generator electrical connectors.

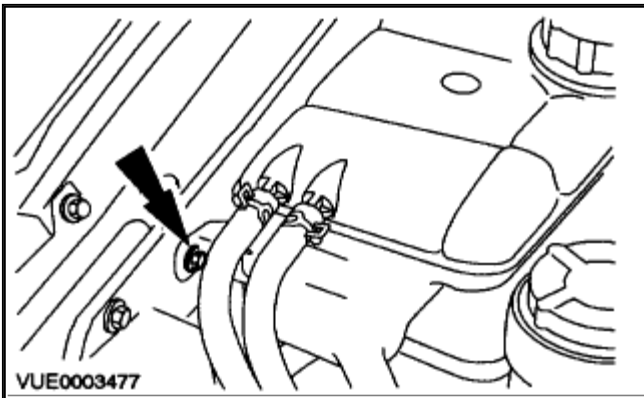


Zoom

Sized for Print

5. Remove the coolant expansion tank bolt.




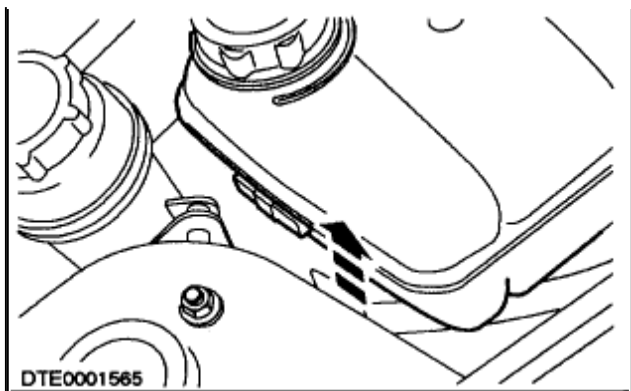

Zoom

Sized for Print


6. Detach the coolant expansion tank from the clip and secure to one side.

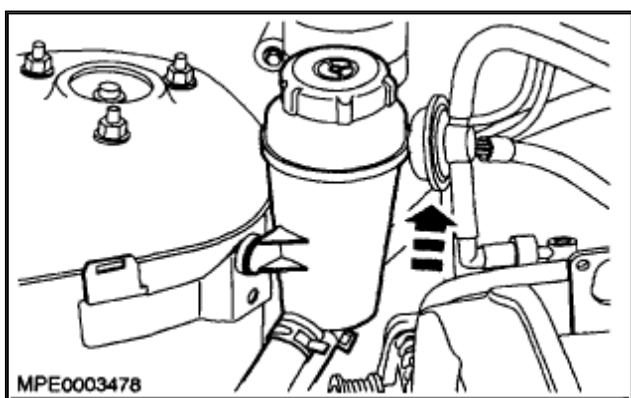

Zoom

Sized for Print


7. Detach the power steering reservoir and secure to one side.

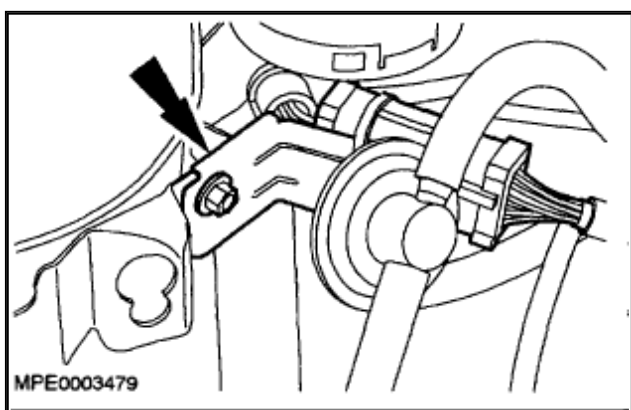

Zoom

Sized for Print


8. Detach the engine wiring loom bracket and secure to one side.

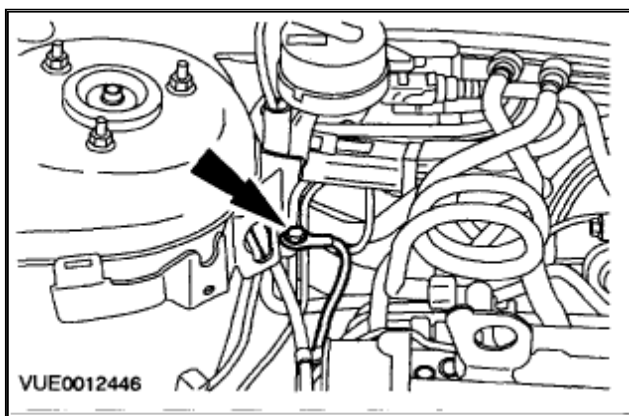

Zoom

Sized for Print


9. Detach the ground cable.

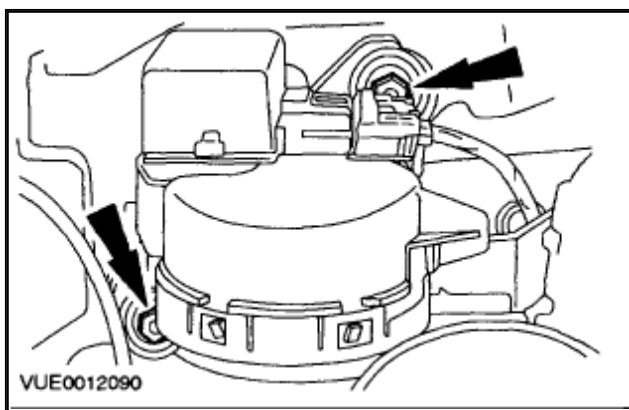

Zoom

Sized for Print


10. Detach the evaporative emission canister purge valve and secure to one side.

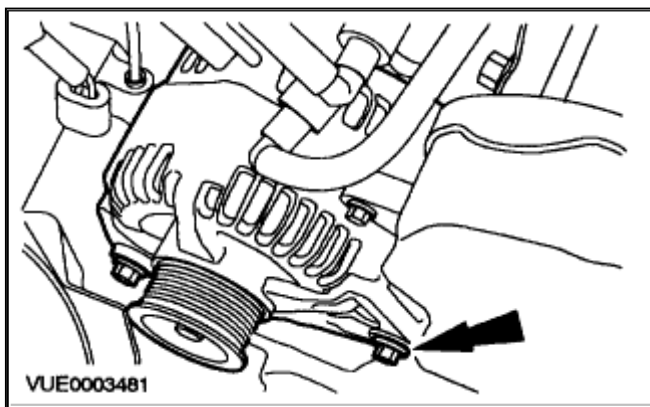

Zoom

Sized for Print


11. Remove the bolt.

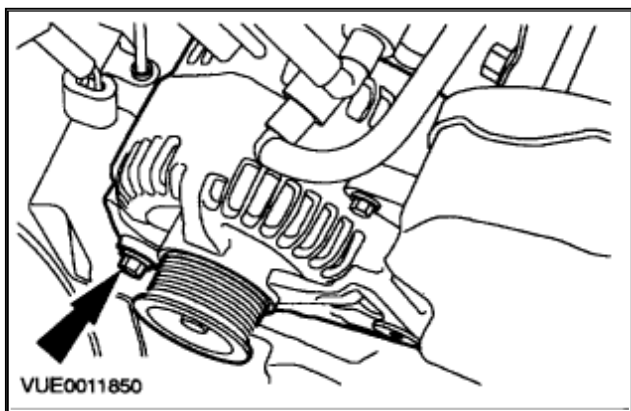

Zoom

Sized for Print

12. Unscrew the bolt fully. **NOTE:** The bolt must be fully disengaged from the bracket although it is not possible to remove the bolt at this stage.

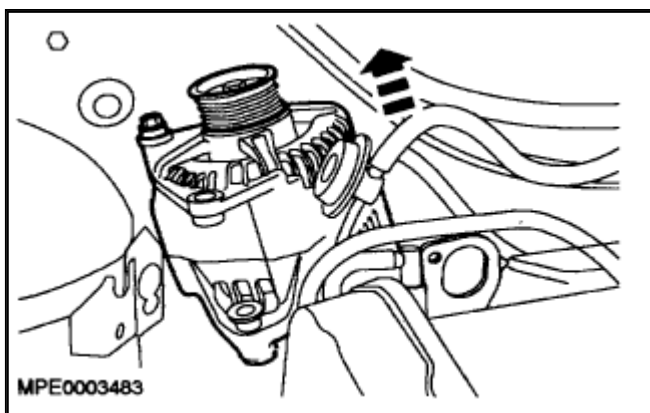

Zoom

Sized for Print

13. Remove the generator.