

Key Ring Transmitter Programming (Manual Procedure)

- Insert Ignition Key
- Hold Headlamp Stalk Switch active (headlamps ON)
- Turn Ignition Key to position I (Auxiliary)
- Flash Headlamp Switch: 3 times for 1997 MY vehicles or 4 times for 1998 MY vehicles
- Confirmation chirp will sound and LED will flash once to indicate “Learn Mode” has been entered
- Activate each Remote Transmitter by pressing any button on the transmitter once – a chirp will sound for each Remote Transmitter signal received (LED will flash); allow 15 seconds maximum between each press
- Switch ignition off – confirmation chirp will sound to indicate “Learn Mode” has been exited (system will automatically “time out” after 15 seconds)