


## FRONT FOG LIGHT ADJUSTMENT


1. Adjust the tire air pressure to the specification.
2. Position the unloaded vehicle on a flat, level surface.
3. Seat one person in the driver's seat.
4. Position the vehicle **3 m {10 ft}** in front of a white screen.

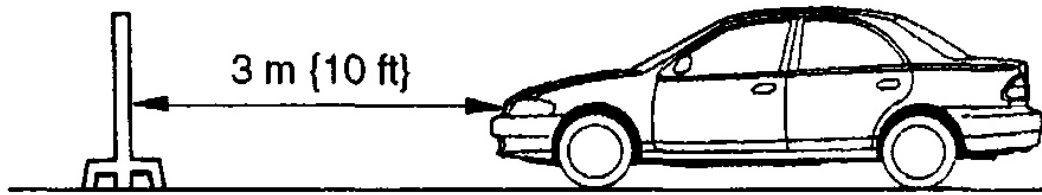

G01915337

**Fig. 21: Positioning Vehicle In Front Of Vertical Wall**  
Courtesy of MAZDA MOTORS CORP.

5. While adjusting one fog light, mask the other.
6. Start the engine to charge the battery.
7. Turn the front fog light on.
8. Peel off the mud guard.
9. Loosen the screw or bolts for the aim adjustment.
10. Move the front fog light in the direction of the arrows indicated in the figure and adjust the center of the front fog light to the position.

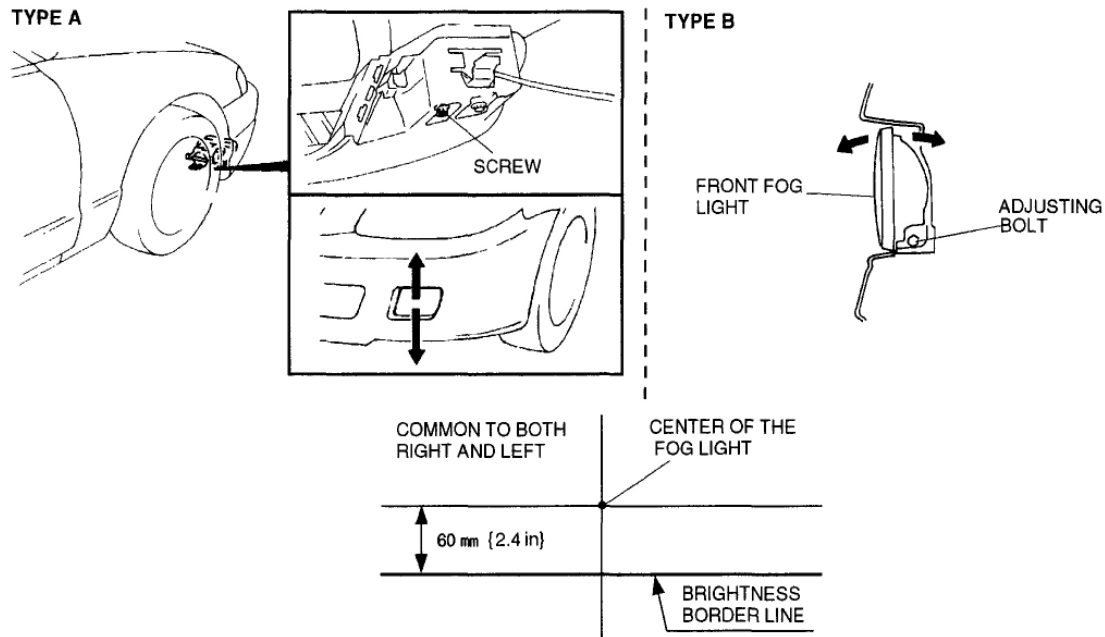

G01915338

**Fig. 22: Moving Front Fog Light And Adjusting Center Of Front Fog Light To Position**  
Courtesy of MAZDA MOTORS CORP.

11. Tighten the front fog light adjusting screw or bolts.