


1998 Toyota Camry LE Sedan L4-2164cc 2.2L DOHC MFI

Vehicle Level → Engine, Cooling and Exhaust → Engine → Service and Repair → Removal ←


Removal

[Notes](#)

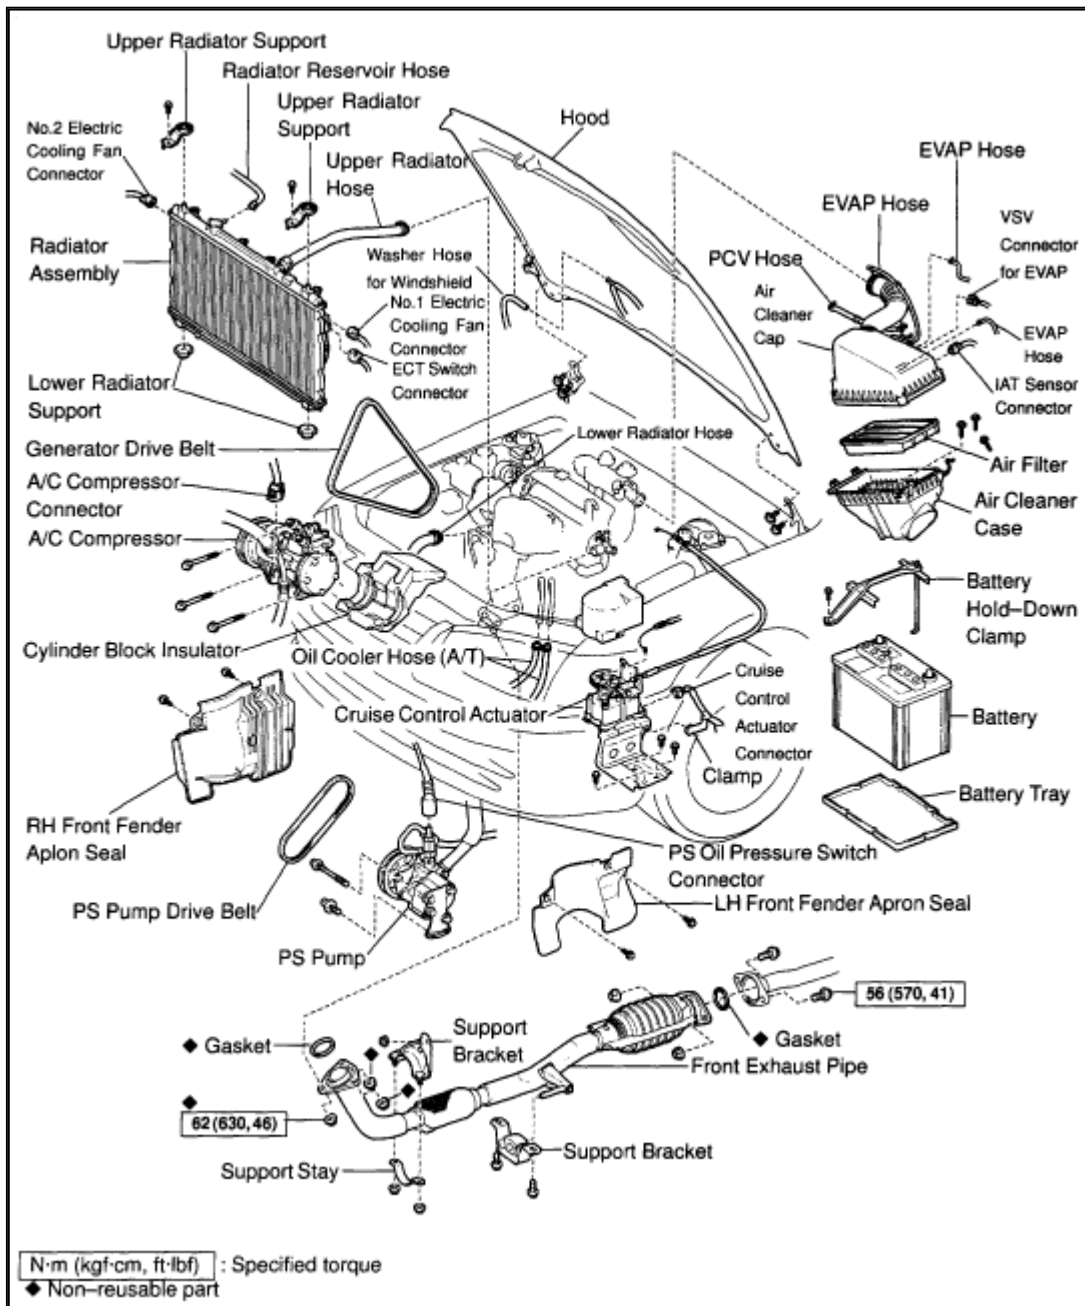


Zoom

Sized for Print

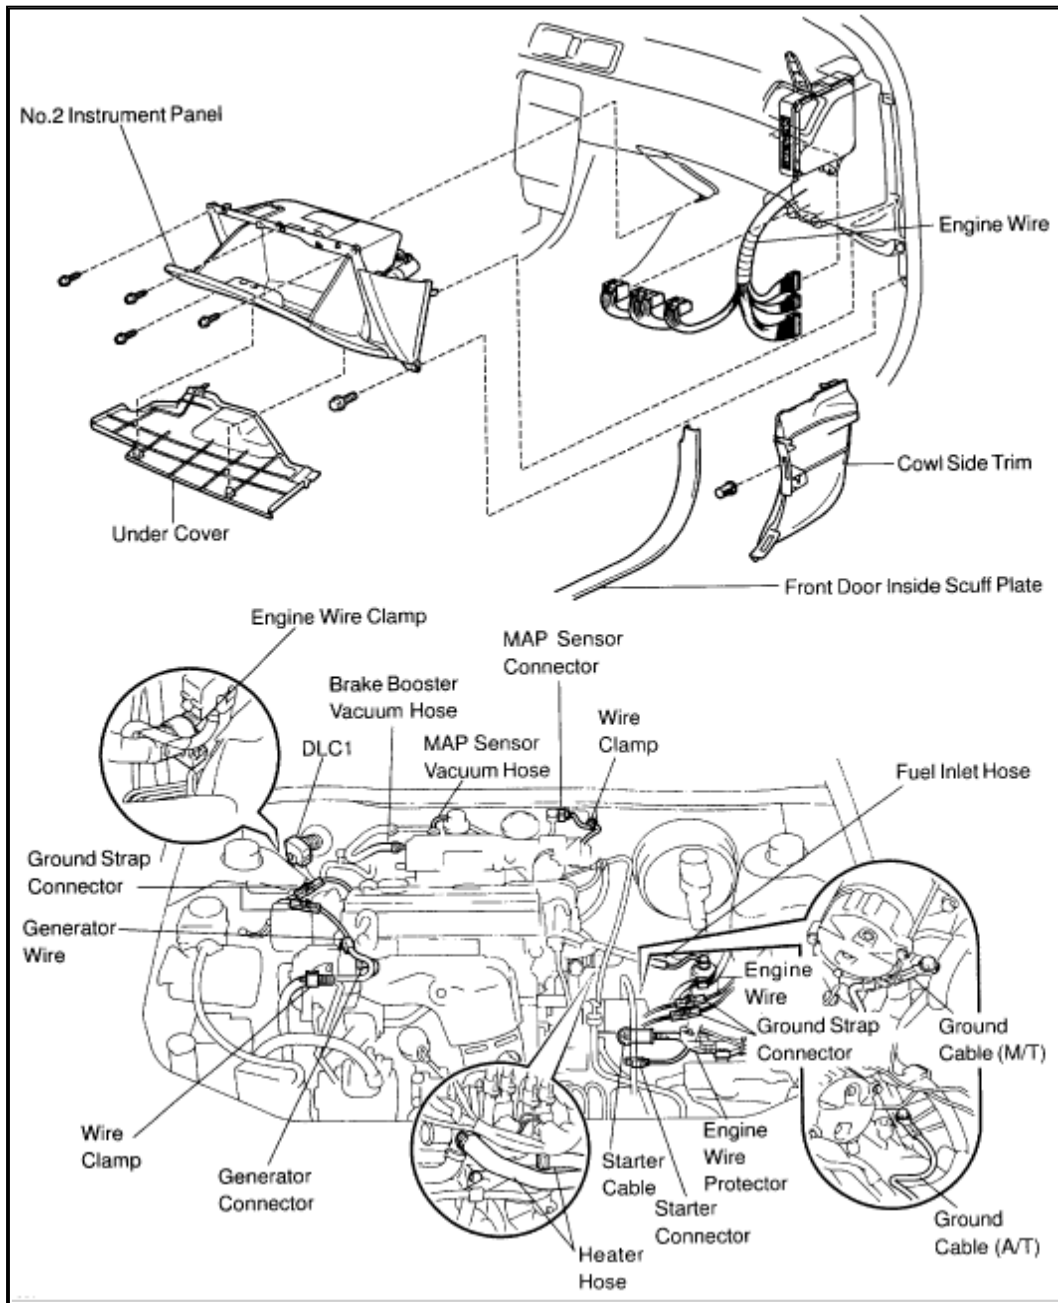


Zoom

Sized for Print

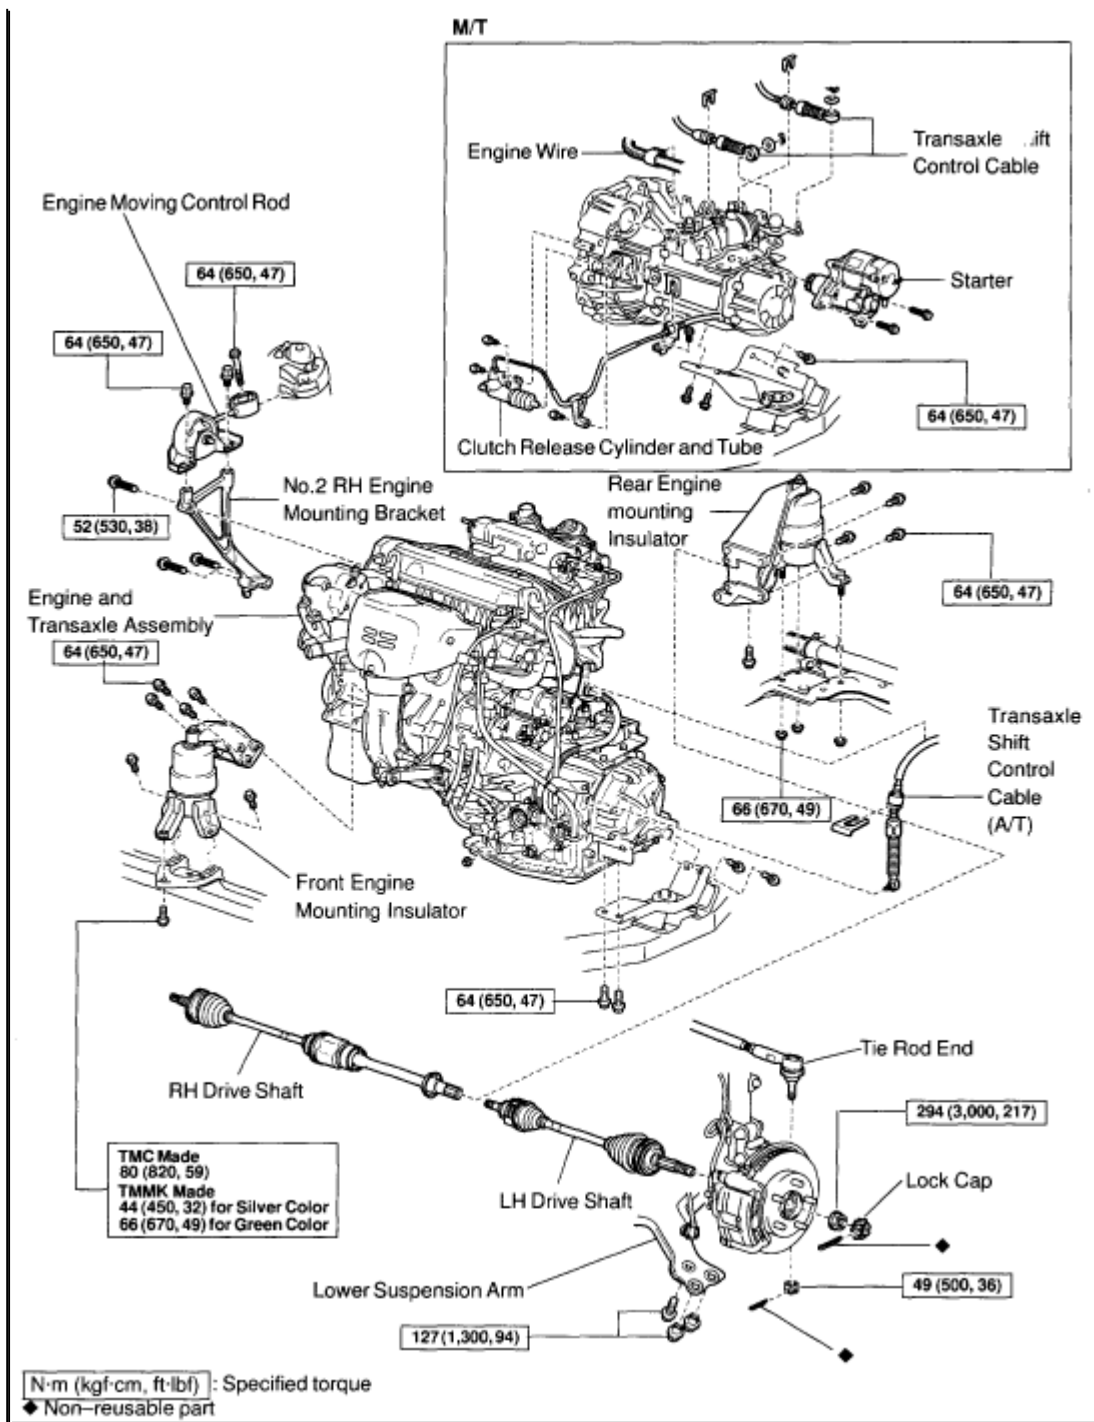


Zoom

Sized for Print

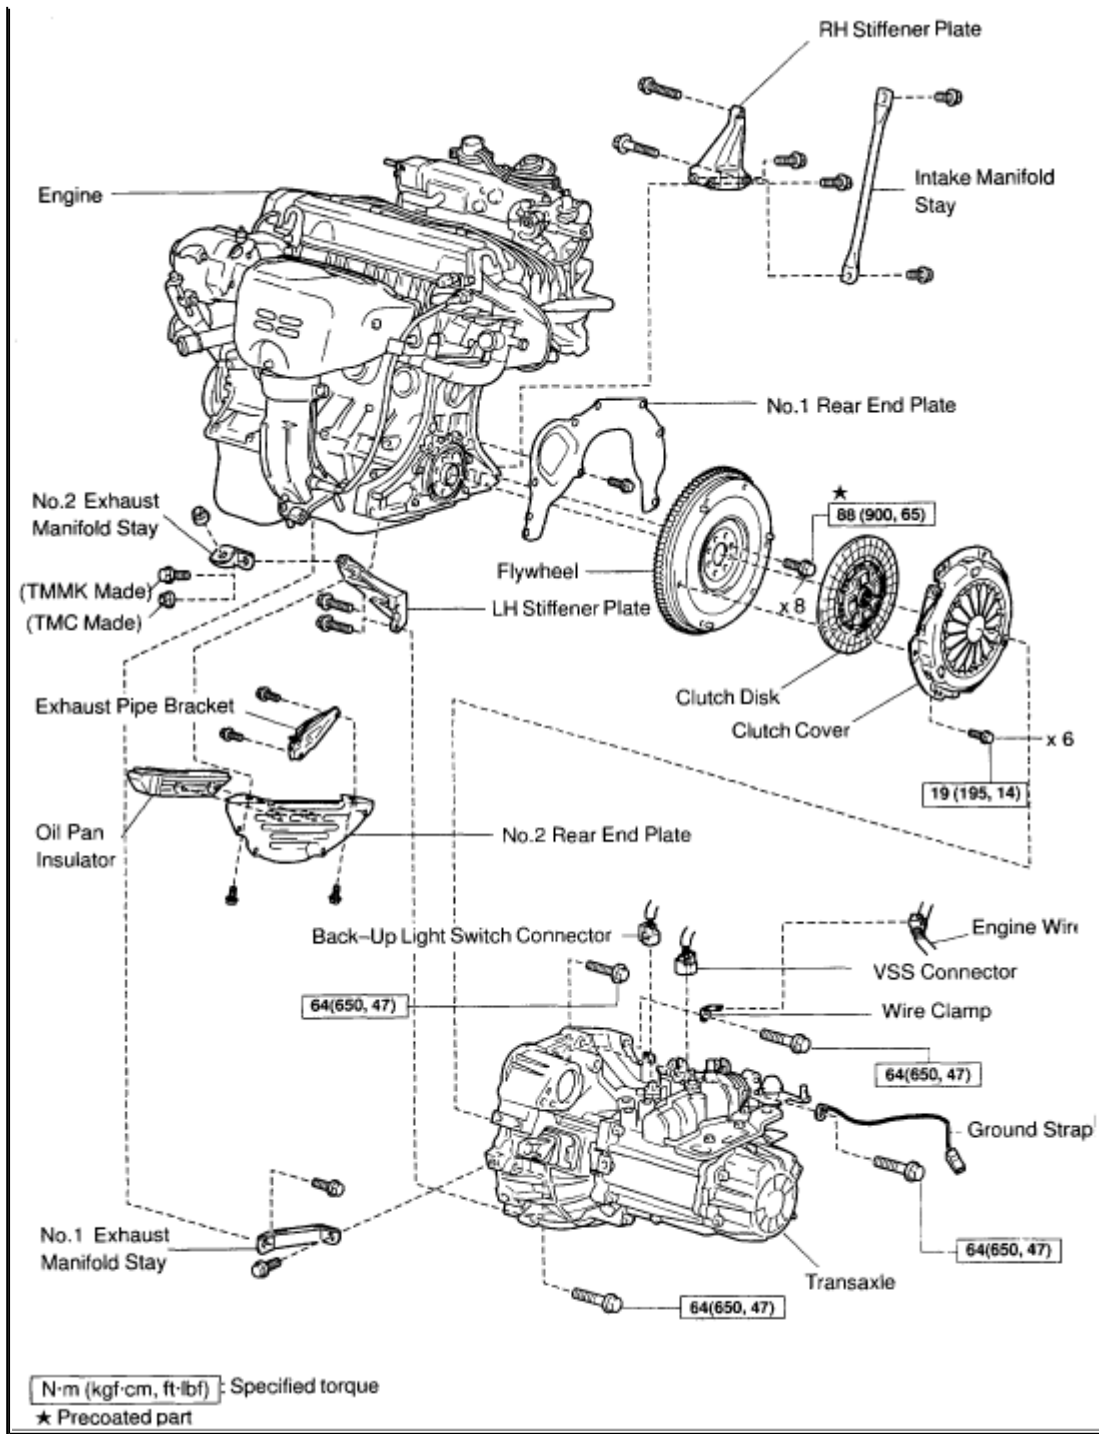

Zoom

Sized for Print

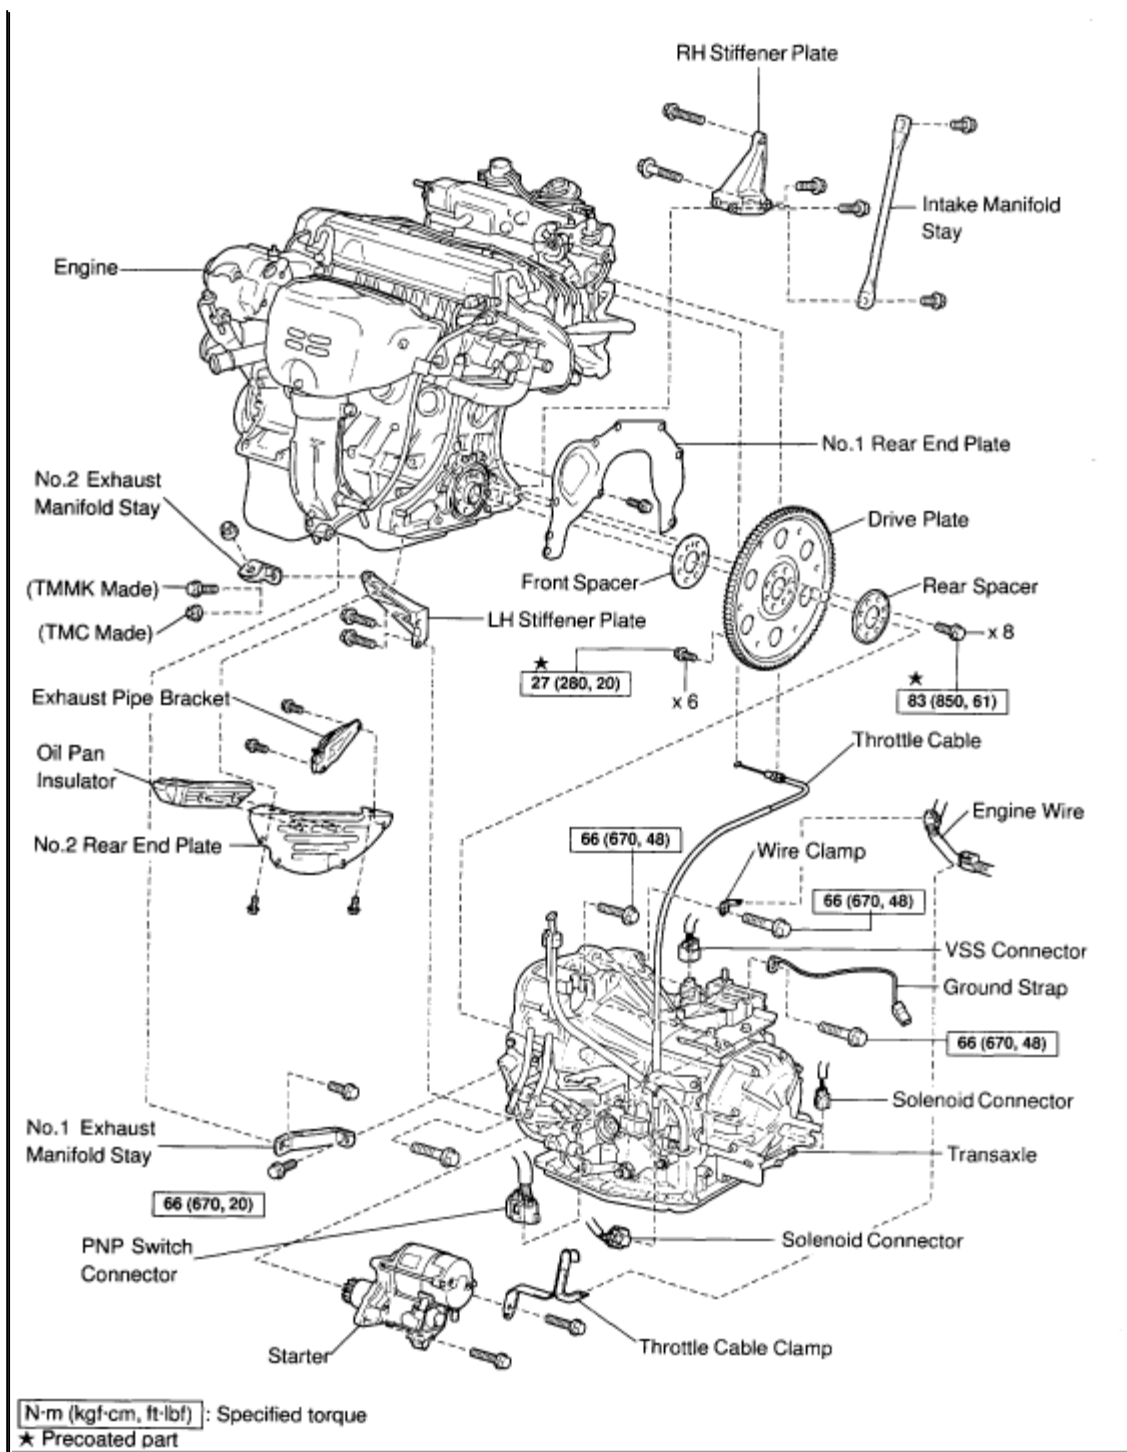

Zoom


Sized for Print

## REMOVAL

1. Remove hood.
2. Remove front fender apron seals.
3. Drain engine coolant.



4. Drain engine oil.
5. Disconnect accelerator cable.
6. Remove air cleaner cap.
  - a. Disconnect the Intake Air Temperature (**IAT**) sensor connector.
  - b. Disconnect the Vacuum Switching Valve (**VSV**) connector for the Evaporative Emission (**EVAP**)
  - c. Disconnect the cable and hoses:
    - PCV hose from cylinder head cover
    - EVAP hose from throttle body
    - EVAP hose from VSV
  - d. Disconnect the 2 clamps, and disconnect the air cleaner cap from the air cleaner case.
  - e. Loosen hose clamp, and disconnect the air cleaner hose from the throttle body.
  - f. Remove the air cleaner cap and hose assembly.
7. Remove air cleaner case.
  - a. Remove the air filter.
  - b. Remove the 3 bolts and air cleaner case.
8. Remove battery and tray.
9. Remove cruise control actuator.
10. Remove [radiator](#).

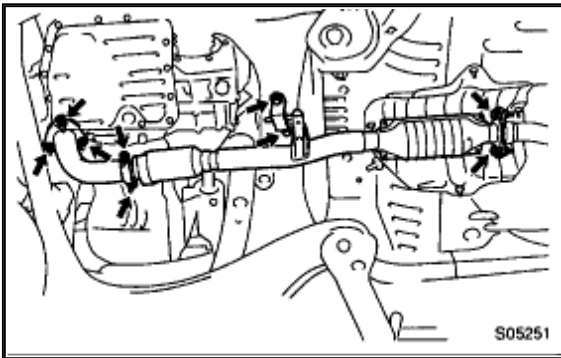[Zoom](#)[Sized for Print](#)

11. Remove front [exhaust pipe](#).
  - a. Remove the 2 bolts holding the support stay to the support bracket.
  - b. Remove the 2 bolts holding the support bracket to the front frame.
  - c. Remove the 2 bolts and 2 nuts holding the front [exhaust pipe](#) to the center exhaust pipe.
  - d. Remove the 3 nuts holding the front [exhaust pipe](#) to the [exhaust manifold](#).
  - e. Remove the front [exhaust pipe](#) and 2 gaskets.

f. Remove the nut and support bracket.

12. Disconnect connectors, wires, cables, clamps and hoses.


- Generator wire
- Generator connector
- Wire clamp from generator
- Starter cable
- Starter connector
- DLC1 from bracket
- Engine wire clamp from bracket on RH fender apron
- MAP sensor connector
- Wire clamp from bracket for MAP sensor
- 2 ground strap connectors from RH fender apron
- 2 ground strap connectors from LH fender apron
- Engine wire protector clamp from battery bracket
- Engine wire from clamp on [fuel filter](#)
- Ground cable from transaxle
- Brake booster vacuum hose from [intake manifold](#)
- [Heater hose](#) from water outlet
- Heater hose from water bypass pipe
- Fuel inlet hose from [fuel filter](#)
- MAP sensor vacuum hose from gas filter on [intake manifold](#)

13. Disconnect engine wire from cabin.

a. Remove the under cover.

b. Disconnect these connectors:

- 3 Engine Control Module (**ECM**) connectors
- 3 cowl wire connectors from connectors on bracket

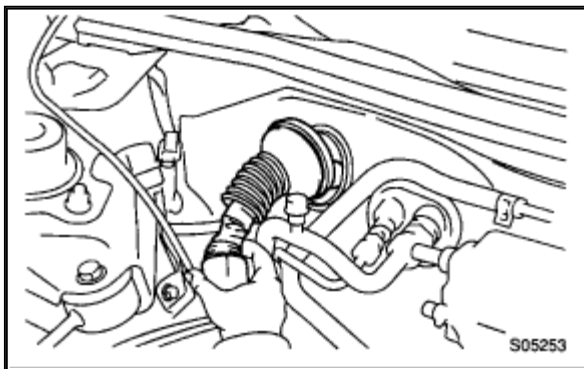


Zoom

Sized for Print

c. Disconnect the grommet from the cowl panel, and pull out the engine wire.

14. Remove drive shafts.
15. Disconnect transaxle control cable(s) from transaxle.
16. M/T: Remove starter.
17. M/T: Disconnect clutch release cylinder and tube from transaxle.
18. Disconnect A/C compressor from engine.
  - a. Disconnect the A/C compressor connector.
  - b. Remove the [drive belt](#).

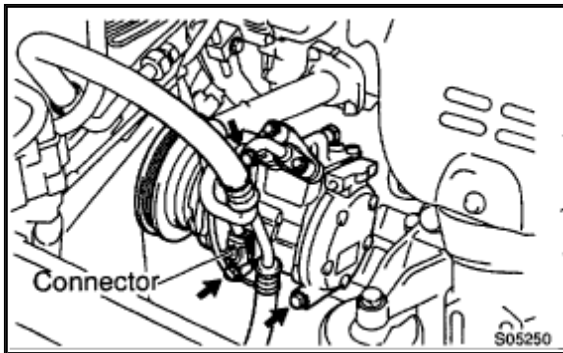


Zoom

Sized for Print

- c. Remove the 3 bolts and disconnect the A/C compressor from the engine.
- d. Remove the cylinder block insulator.

19. Disconnect PS pump from engine

- a. Disconnect the PS [oil pressure switch](#) connector.

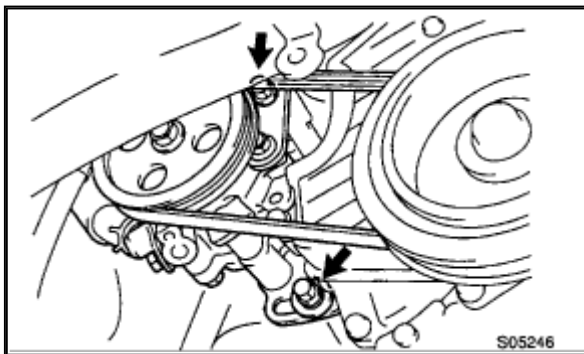


Zoom


Sized for Print

- b. Loosen the 2 bolts, and remove the [drive belt](#).
- c. Remove the 2 bolts, and disconnect the PS pump from the engine.

 20. Remove bolts holding transaxle to LH engine mounting insulator.






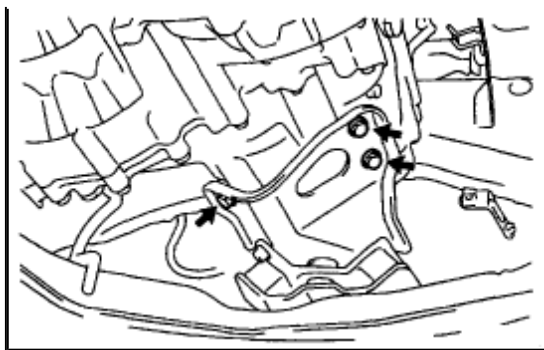

Zoom

Sized for Print

M/T: Remove the 3 bolts.

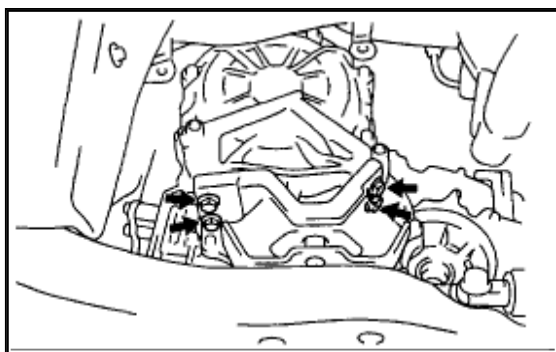


Zoom

Sized for Print

A/T: Remove the 4 bolts.

21. Remove nuts holding rear engine mounting bracket to front frame.

a. Remove the 2 hole plugs.

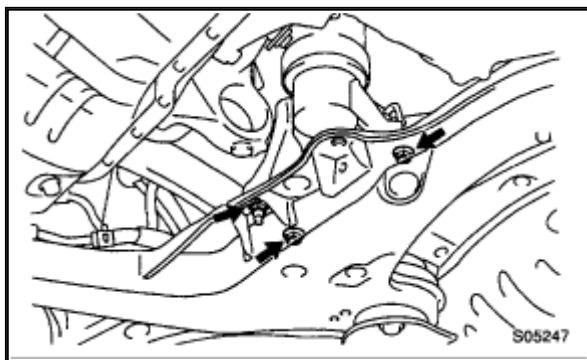


Zoom

Sized for Print

b. Remove the 3 nuts.

22. Remove bolts holding front [engine mounting insulator](#) to front frame.

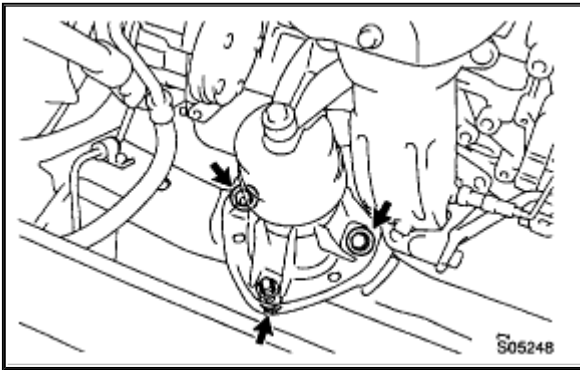


Zoom

Sized for Print

Remove the 3 bolts.

23. Attach engine sling device to engine hangers.

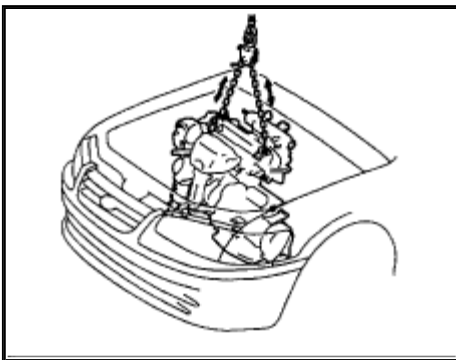

Zoom


Sized for Print

Attach the engine chain hoist to the engine hangers.

**CAUTION:** Do not attempt to hang the engine by hooking the chain to any other part.

24. Remove engine moving control rod.



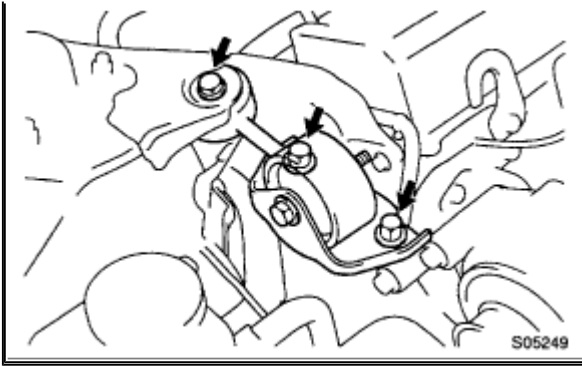


Zoom

Sized for Print

Remove the 3 bolts and control rod.


25. Remove engine and transaxle assembly from vehicle.

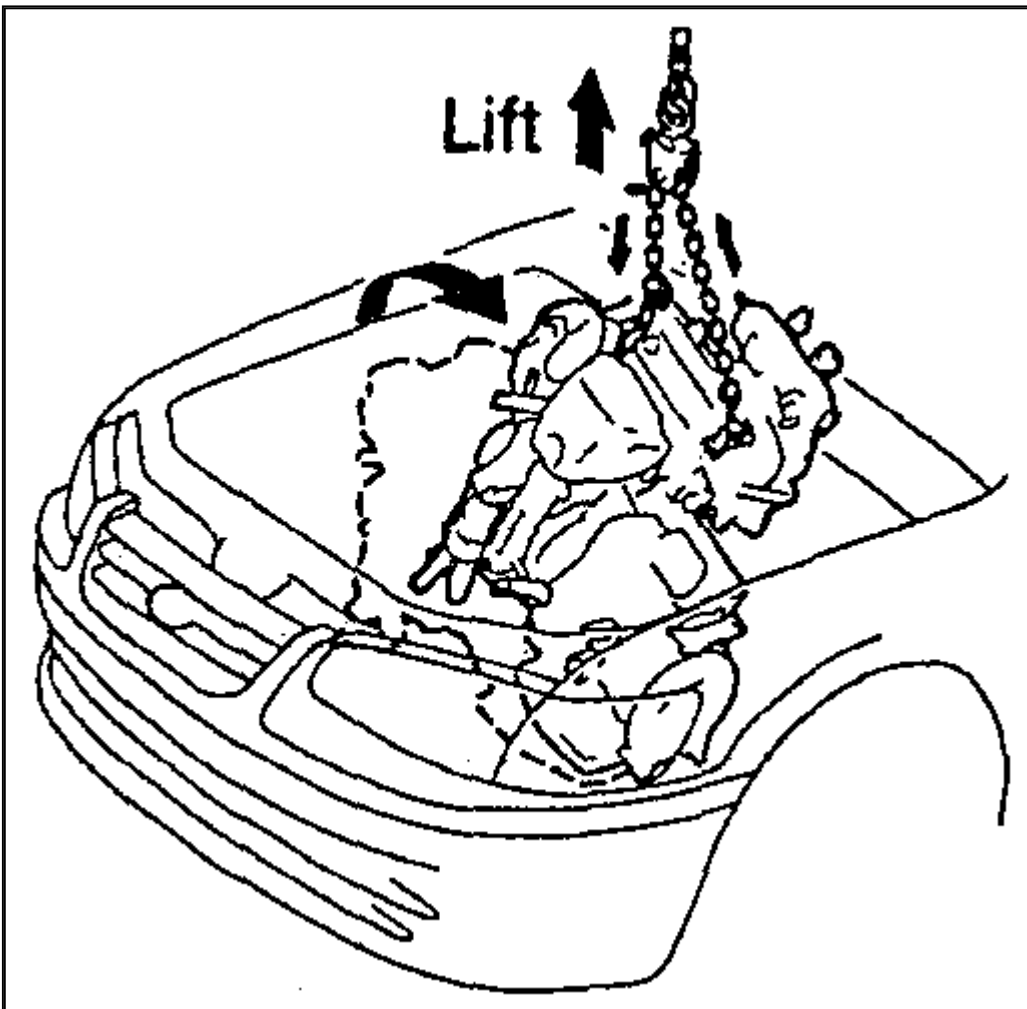

Zoom

Sized for Print

- a. Lift the engine out of the vehicle slowly and carefully. **NOTICE:** Make sure the engine is clear of all wiring, hoses and cables.
  - b. Place the engine and transaxle assembly onto the stand.
26. Remove front [engine mounting insulator](#) from engine. Remove the 4 bolts and mounting insulator.
  27. Remove rear [engine mounting insulator](#) from engine. Remove the 4 bolts, the mounting insulator.
  28. Remove No.2 RH engine mounting bracket from engine. Remove the 3 bolts and mounting bracket.
  29. A/T: Disconnect throttle cable from throttle body.
  30. A/T: Remove starter.
  31. Disconnect connectors. Disconnect the connectors:
    - VSS connector
    - M/T: Back-up light switch connector
    - A/T: PNP switch connector
    - A/T: 2 solenoid connectors
  32. Remove No.1 [exhaust manifold](#) stay. Remove the 2 bolts and manifold stay.

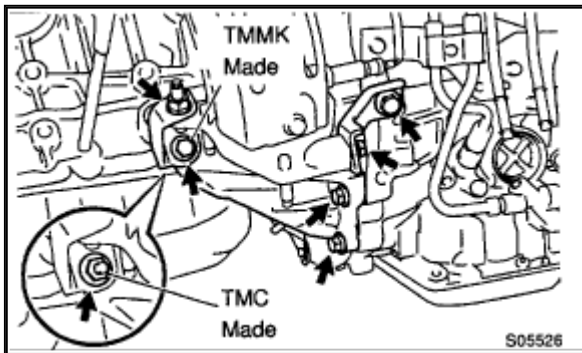


Zoom

Sized for Print

33. Remove No.2 [exhaust manifold](#) stay and LH stiffener plate.
  - a. TMC Made: Remove the 2 nuts and manifold stay.
  - b. TMMK Made: Remove the bolt, nut and manifold stay.
  - c. Remove the 2 bolts and stiffener plate.
34. Remove [intake manifold](#) stay. Remove the 2 bolts and [intake manifold](#) stay.




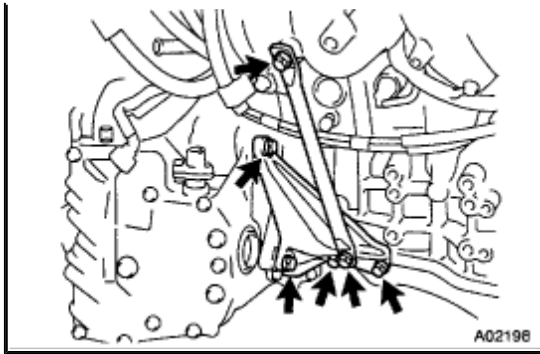

Zoom

Sized for Print

35. Remove RH stiffener plate. Remove the 4 bolts and stiffener plate.

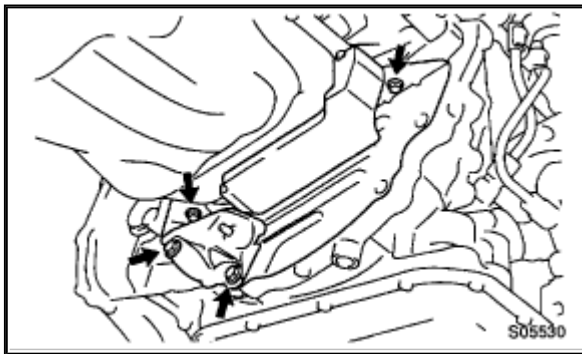


Zoom

Sized for Print

36. Remove [exhaust pipe](#) bracket, [oil pan](#) insulator and No.2 rear end plate.

- a. Remove the 2 bolts and [exhaust pipe](#) bracket.
- b. Remove the 2 bolts, [oil pan](#) insulator and rear end plate.

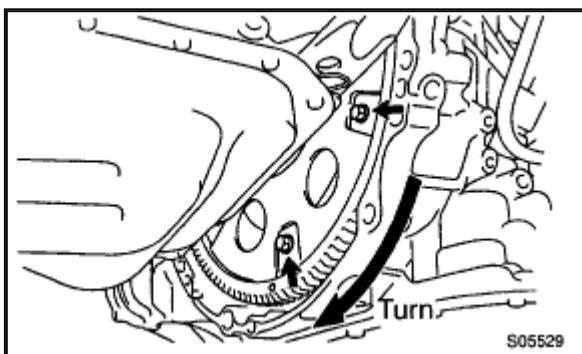


Zoom

Sized for Print

37. A/T: Remove torque converter clutch bolts.




- a. Turn the crankshaft pulley bolt to gain access to each bolt.
- b. Hold the crankshaft pulley bolt with a wrench, and remove the 6 bolts.

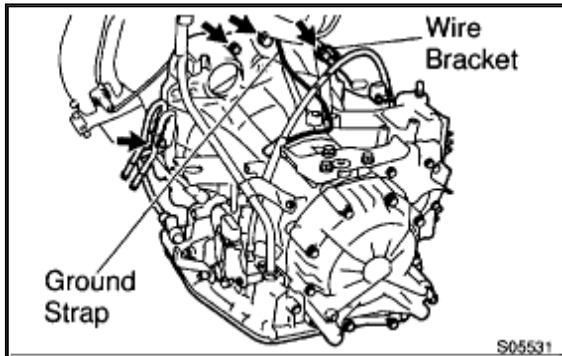

Zoom

Sized for Print

38. Remove transaxle.

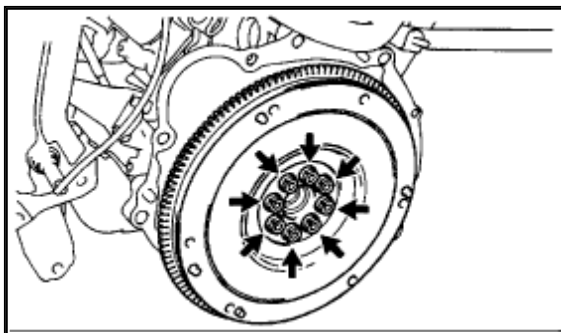

Zoom

Sized for Print

- a. Remove the 4 bolts, ground strap and wire bracket.
- b. Remove the transaxle together with the torque converter clutch (A/T) from the engine.

39. M/T: Remove clutch cover and disc.
40. M/T: Remove flywheel. Remove the 8 bolts and flywheel.
41. A/T: Remove drive plate. Remove the 8 bolts, front spacer, drive plate and rear spacer.
42. Remove No.1 rear end plate. Remove the bolt and end plate.