


Synchronize Transmission Signal Of Radio Remote Control

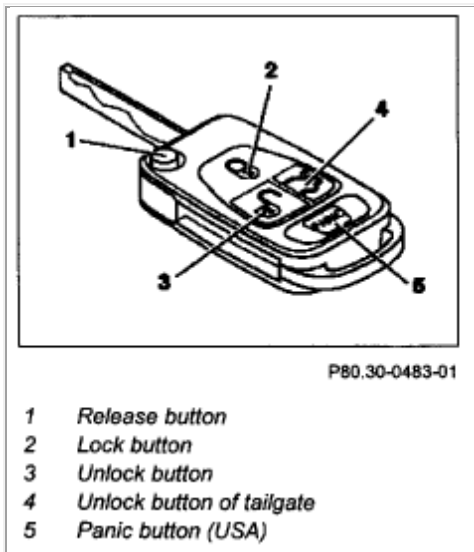

NOTE: If it is not possible to lock or unlock the vehicle, a synchronization of the locking system can be necessary. The reading-in process must be carried out within **10 seconds**.

- 1 Insert remote control key into ignition switch and rotate in position 2
- 2 Remove key and press lock button (2) and hold pressed, while simultaneously pressing the unlock button (3) five times.
- 3 Release buttons and then press one of the two buttons once