


ENGINE 272.920 in MODEL 203.052 /252 /752
ENGINE 272.940 in MODEL 203.054 /254, 209.354 /454
ENGINE 272.960 in MODEL 203.056 /256 /756, 209.356 /456
ENGINE 272.970 in MODEL 203.087 /287
ENGINE 272.941 in MODEL 203.092 /292
ENGINE 273 in MODEL 209

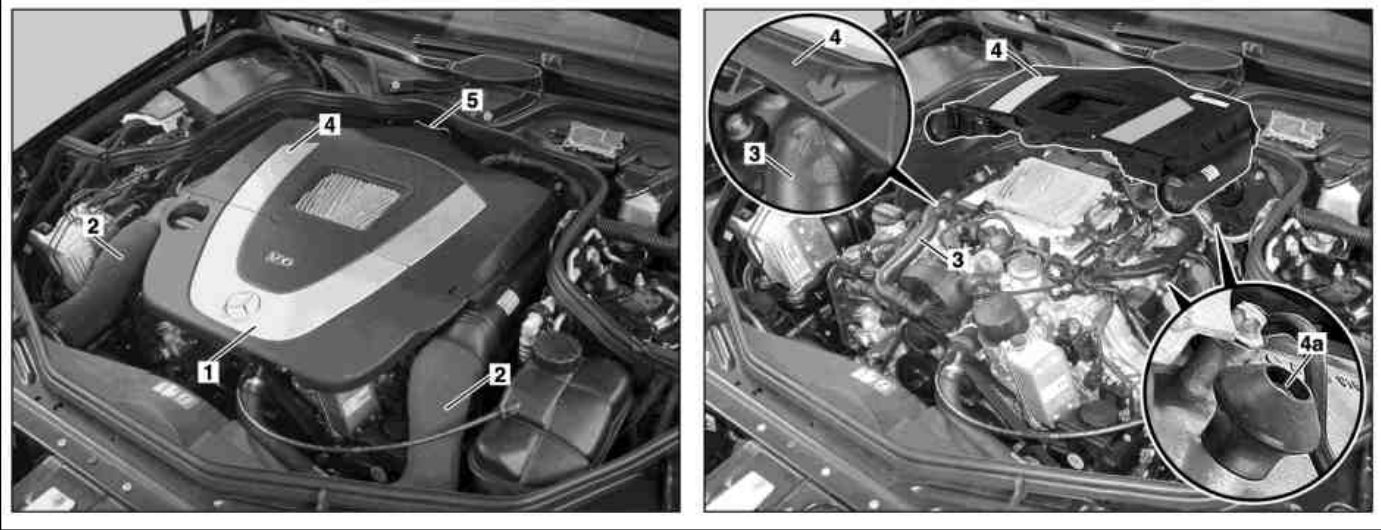

P09.10-2113-08

- | | | |
|-----------------------------|-----------------------------|-------------------|
| 1 Front engine cover | 3 Hose | 4a Bracket |
| 2 Intake air duct | 4 Air filter housing | 5 Clamp |

		Removing/installing	
⚠	Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/ rear-end door or sliding roof. Open engine hood and raise to vertical position	AS00.00-Z-0011-01A
1		Model 203 Model 209	AR88.40-P-1000P AR88.40-P-1000Q
2		Pull off the front engine cover (1) towards the top.	
3		Remove left and right suction fan duct (2)	
4		Remove air pump hose (3) at air filter housing (4)	i Installation: The arrows on the hose (3) and the air filter housing (4) must point towards each other.
5		Lever off clamp (5) from the air filter housing (4)	
6		Detach the air filter housing (4) upwards from the mounts (4) at the left and right cylinder head cover	(!) In order to avoid scratches and damage, the air filter housing (4) must be put down on a padded base. i Installation: Apply liquid lubricant to the mounts (4a) on the left and right cylinder head cover. Lubricant
7		Install in reverse order	*BR00.45-Z-1002-06A

Repair materials

Number	Designation	Order number
BR00.45-Z-1002-06A	Lubricant	A 000 989 01 60