


91-503 Removal and installation of belt buckle (front seats)

Preliminary work:
Seat removed (91-100/91-110).

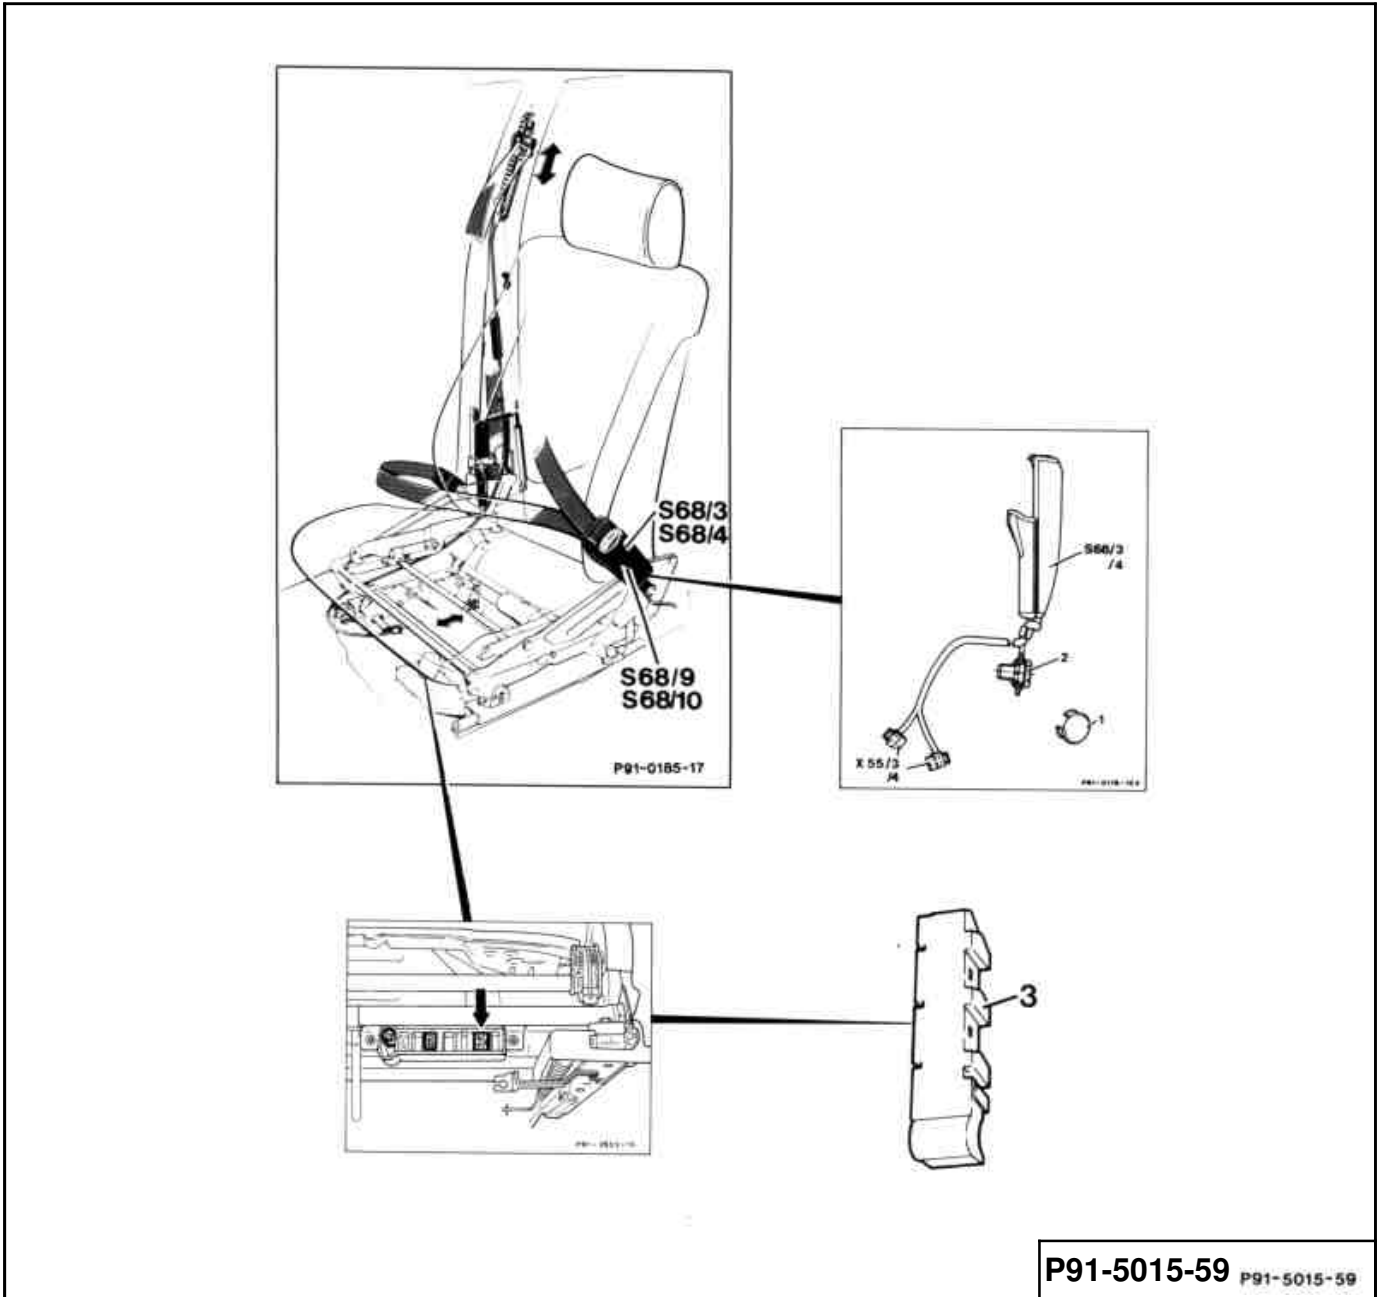

P91-5015-59 P91-5015-59

Removal

Cable duct, cable straps and insulating straps on bottom of seat open.

Cover (3) press off.

Plug connectors (arrows) remove.

Cover (1) press out with wedge.

Screw (2) on belt buckle screw out and remove belt buckle together with wire.

Reinstall in opposite order.