


Vacuum and Vapor Hose Diagrams

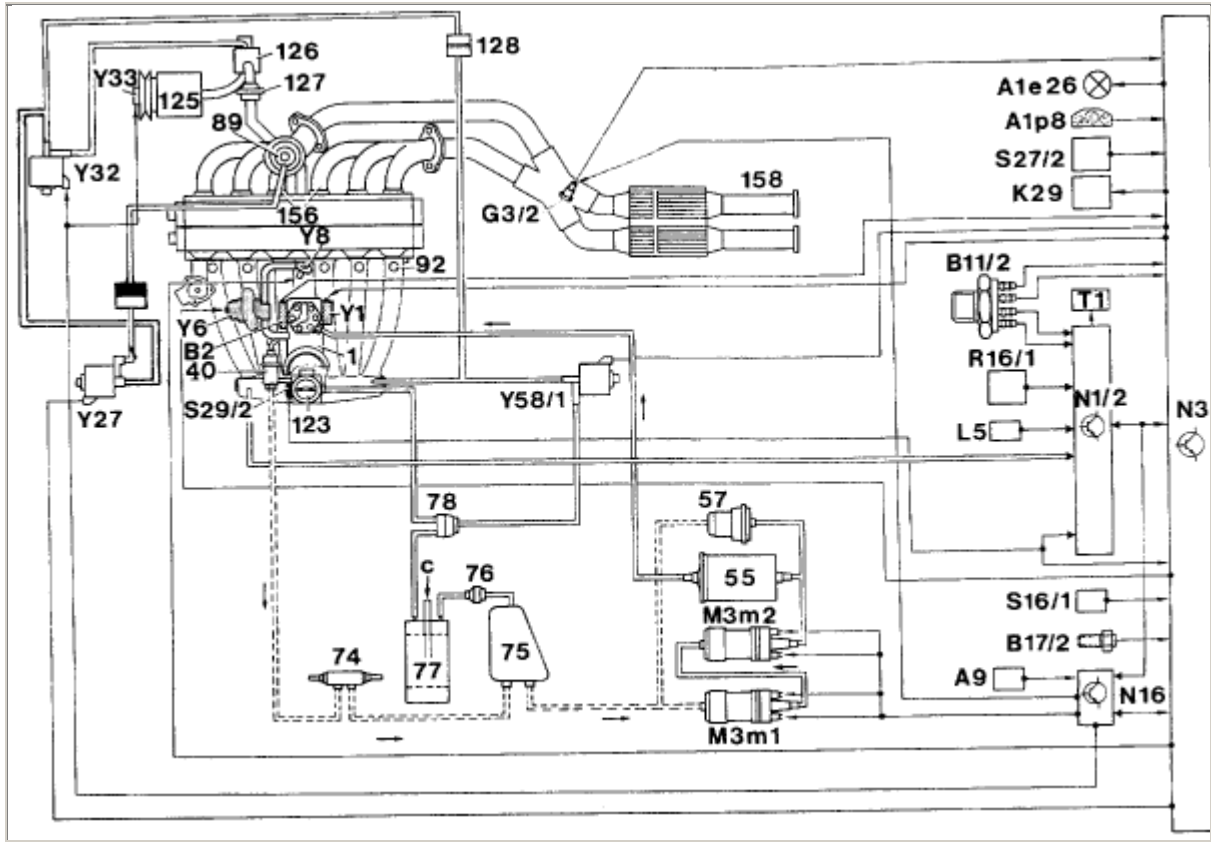

Function diagram, CIS-E Injection system

- 1 Mixture regulator
- 40 Diaphragm pressure regulator
- 55 Fuel filter
- 57 Fuel pressure accumulator
- 74 Fuel cooler
- 75 Fuel tank
- 76 Vent valve
- 77 Charcoal canister
- 78 Purge valve
- 89 EGR valve

92 Fuel injector
123 Throttle body
125 Air pump
126 Air cutoff valve
127 Check valve (air injection)
128 Check valve (vacuum)
156 Exhaust manifold
158 Catalytic converter
A1e26 CHECK ENGINE" warning lamp
A1p8 Electronic speedometer
A9 A/C compressor
B2 Air flow sensor position indicator
B11/2 Coolant temperature sensor
B17/2 Intake air temperature sensor (CIS-E)

G3/2 Heated O2-sensor

K29 Transmission shift point relay
L5 Crankshaft position sensor
M3m1 Fuel Pump 1
M3m2 Fuel Pump 2
N1/2 Electronic ignition control unit (EZL)
N3 CIS-E control unit
N16 Engine systems control unit (MAS)
R16/1 Reference resistor (EZL)
S16/1 Starter lock-out backup lamp switch
S29/2 Throttle valve switch full load/idle
T1 Ignition coil
Y1 Electrohydraulic actuator (EHA)
YB Idle speed air valve
Y8 Start valve

Y27 EGR switchover valve
Y32 Air injection switchover valve
Y33 Electromagnetic air pump clutch
Y58/1 Purge switchover valve
c Vent