


77-425 Removal, installation and adjustment of limit switch for top in top compartment

Operation no. of operation texts and work units
or standard texts and flat rates

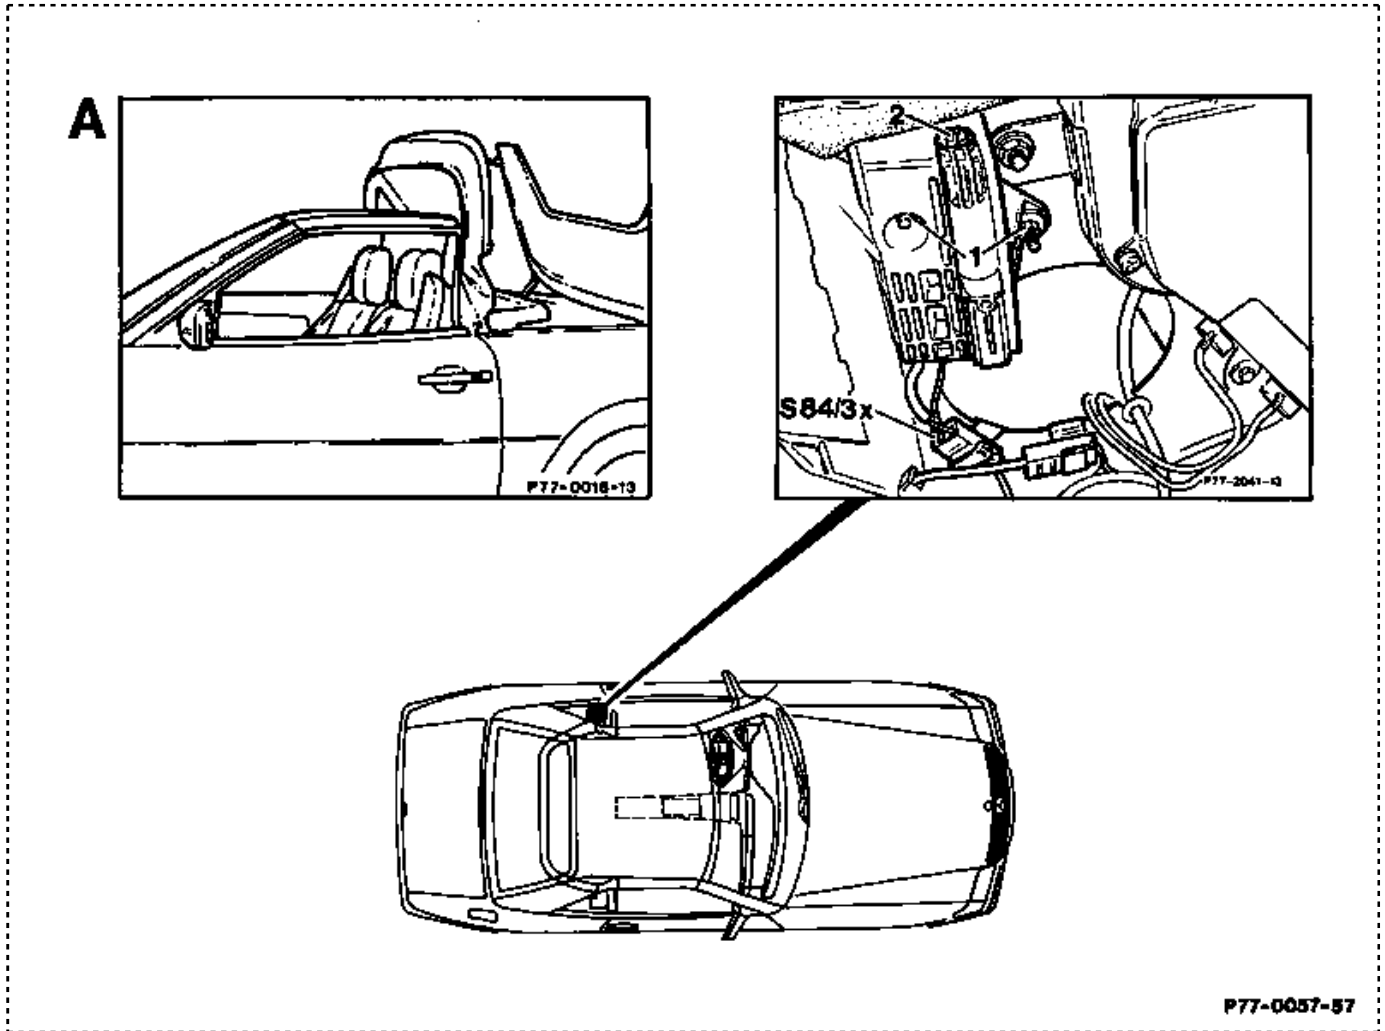

Removal

- | | |
|-------------------------------|---|
| Top | move to position A with top switch or manual actuation. |
| Plug connector (S84/3x) | unclip and disconnect |
| Nuts (1) | screw out |
| Limit switch (S84/3) | remove together with cable |

Installation

Install in opposite order

Adjustment

Limit switch (S84/3) should actuate when the upper part (seal) of the top is level with the trunk lid in the retracted state.

Turn screw (2) to right:

Limit switch (S84/3) switches later

Turn screw (2) to left:

Limit switch (S84/3) switches earlier