


Mirror, Power—Outside Rear View**Removal and Installation**

1. Remove the front door trim panel (23942). Refer to [Section 01-05](#). Peel back the water shield if necessary to gain access to the mirror wiring connector.
2. Disconnect the wiring connector. Remove rear view mirror mounting hole cover (17K709) located above the front door trim panel (inside window sail cover) by using a flat blade screwdriver to carefully pry off.
3. Remove the three nuts retaining the outside rear view mirror (17682) to the front door (20124).
4. Pull outside rear view mirror away from the front door while guiding the wiring out of the front door.
5. To install, reverse Removal procedure. Tighten nuts to 6-8 Nm (54-70 lb-in).

Glass, Outside Mirror**Removal**

NOTE: Power mirror and manual mirror glass replacement procedure ar similar.

1. Push in on the bottom of the glass until it stops.
2. Protect the mirror body with a rag or similar material at the top and insert a flat blade screwdriver between the mirror body and glass.

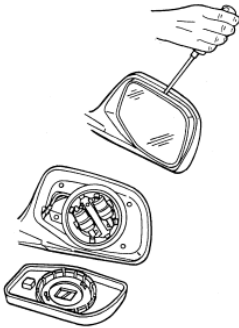

N11333-C

3. Pry on the glass until it snaps loose from motor assembly. Disconnect the heater wires from the glass, if equipped.
4. Remove the screwdriver and continue to pull the glass by hand until it is completely unsnapped from the motor assembly.

Installation


1. Make sure the rubber gasket on the motor is properly installed on the motor assembly.
2. Reconnect heater wires to glass.
3. Position the glass assembly in the mirror, and push on the center of the glass to snap it in place. Push on glass until it is fully seated.

Trim Cover**Removal and Installation**

1. Remove the rear view mirror mounting hole cover, located above the front door trim panel by using a flat blade screwdriver to carefully pry off. Care should be taken not to scratch paint.
2. To install, snap rear view mirror mounting hole cover into place. Be careful not to damage clips.

Mirror Control**Removal and Installation**

1. Remove driver front door trim panel with mirror switch pigtail still attached to harness.
2. Reach around front door trim panel and disconnect switch harness from the main wire harness.
3. Using a small flat blade screwdriver, pry the outside rear view mirror control switch up from the front door trim panel.
4. Remove outside rear view mirror control (17B676).

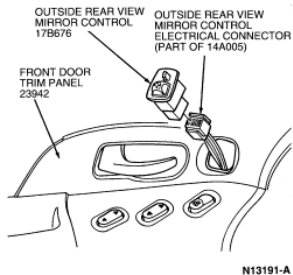


5. To install, reverse Removal procedure.

Mirror Motor

Removal and Installation

1. Remove the glass assembly as outlined.
2. Remove the four screws retaining the motor to mirror.
3. Pull motor away from the outside rear view mirror.
4. Slide gasket off motor.
5. Remove cover plate from the back of the motor.
6. With the plate removed, note the wire connections. Disconnect the wires from motor.
7. Remove motor.

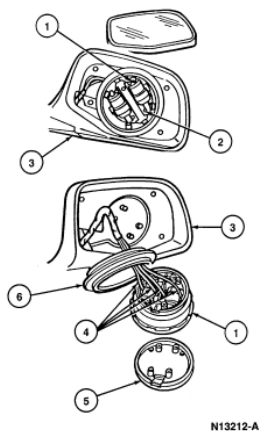

Item	Part Number	Description
1	17D696	Power Mirror Motor
2	—	Screws (4 Req'd)
3	17682	Outside Rear View Mirror
4	—	Power Mirror Motor Wiring
5	—	Power Mirror Motor Cap (Part of 17D696)
6	—	Rubber Gasket (Part of 17D696)

8. To install, reverse Removal procedure. The UP position of the motor is shown on the back.

