
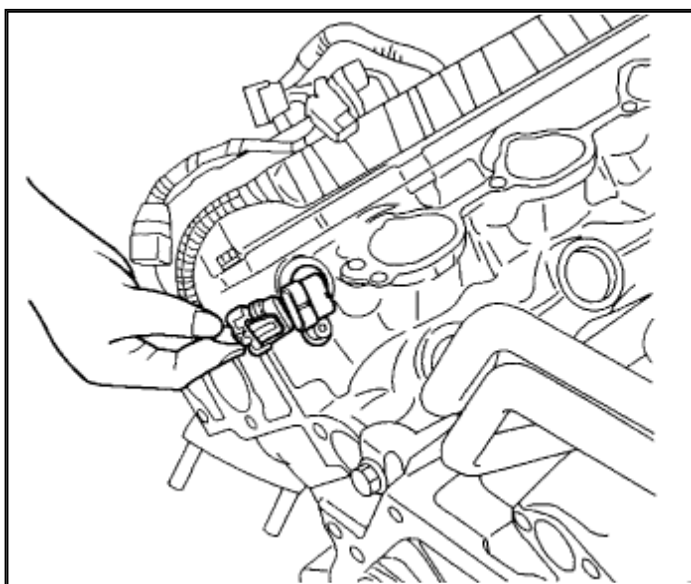


1998 Isuzu Truck Rodeo LS 2WD V6-3.2L

[Vehicle Level](#) → [Powertrain Management](#) → [Computers and Control Systems](#) → [Camshaft Position Sensor](#)
→ [Service and Repair](#) → [Removal Procedure](#) ←

Removal Procedure

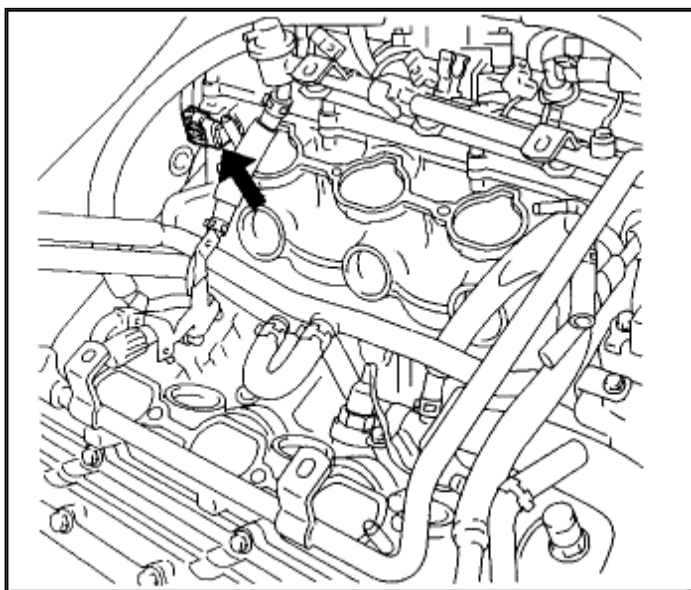

1. Disconnect the negative battery cable.
2. Remove the engine cover.
3. Remove the common chamber assembly. Refer to Common Chamber in Engine Mechanical.
4. Disconnect the electrical connector to the CMP sensor.
5. Remove the CMP retaining bolt from the side of left cylinder head.
6. Remove the CMP sensor from the cylinder head.

© 2010 ALLDATA LLC. All rights reserved.

[Terms of Use](#)