

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)

Component Search:

  [Conversion Calculator](#)**2002 Isuzu Truck Axiom 2WD V6-3.5L**[Vehicle Level](#) → [Transmission and Drivetrain](#) → [Automatic Transmission/Transaxle](#) → [Fluid - A/T](#) → [Service and Repair](#) ←**Service and Repair****Changing Transmission Fluid**

There is no need to change the transmission fluid unless the transmission is used under one or more of the following heavy duty conditions.

- A. Repeated short trips
- B. Driving on rough roads
- C. Driving on dusty roads
- D. Towing a trailer

If the vehicle is used under these conditions, change the fluid every **20,000 miles (32,000 km)**.

1. Place a large drain pan under the oil pan.
2. Remove the transmission oil drain screw (2) and drain fluid.
3. Tighten drain screw (2). Torque: **38 Nm (28 ft. lbs.)**
4. Remove the transmission overfill screw (1) and fill transmission through overfill screw opening, using DEXRON-III ATF.


Note: Add transmission fluid until it flows out over the overfill screw opening.

5. Let engine idle until a fluid temperature between **32°C (90°F) and 57°C (135°F)** is reached.
6. Add transmission fluid until it flows out over the overfill screw opening, then close the overfill screw (1). Torque: **38 Nm (28 ft. lbs.)**

Note: To prevent fluid leaks, the overfill screw and oil drain screws gasket must be replaced each time these screws are removed.

Note: Check transmission fluid temperature with scan tool.



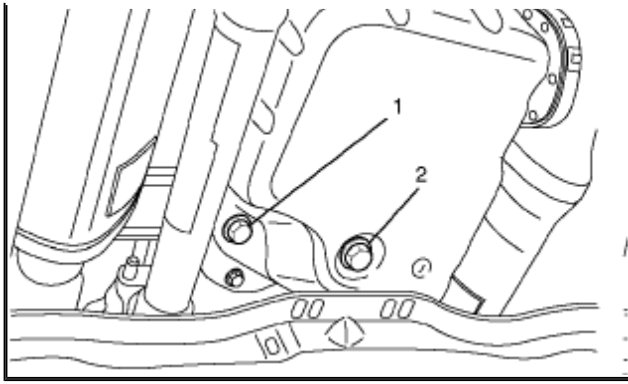

Zoom

Sized for Print

7. Reset "Oil Life Monitor" data by using Tech 2. Refer to Tech 2 OBD II Connection in Transmission Control System (4L30-E).

© 2010 ALLDATA LLC. All rights reserved.
[Terms of Use](#)