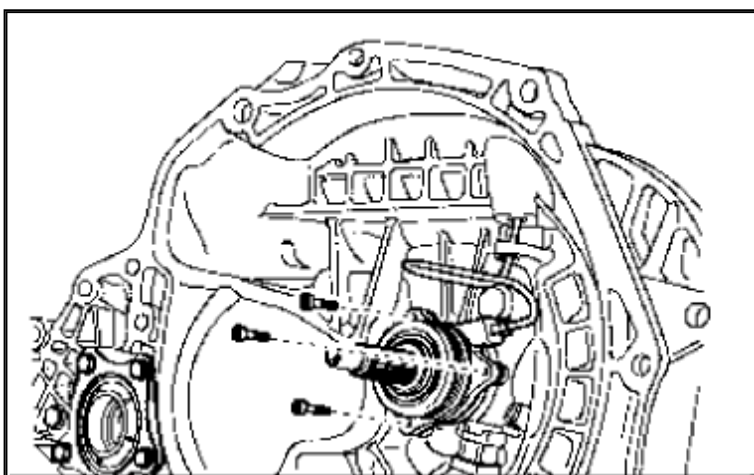


[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)

Component Search:

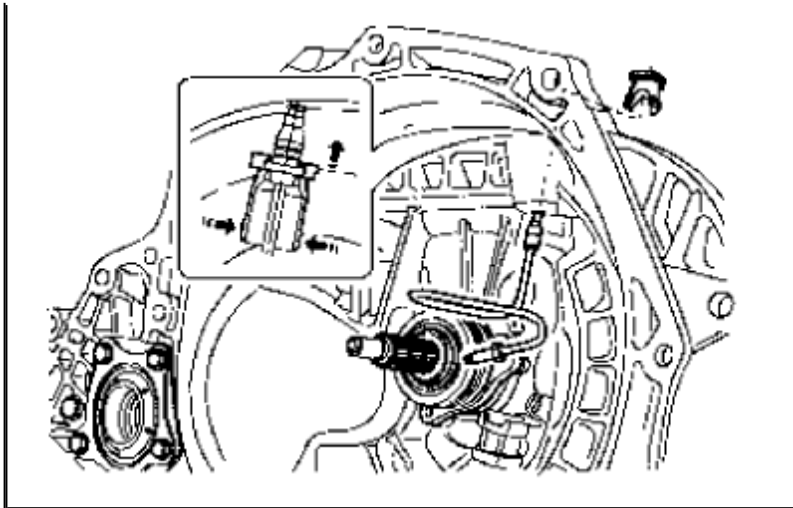
 2004 Suzuki Forenza L4-2.0L[Vehicle Level](#) → [Transmission and Drivetrain](#) → [Clutch](#) → [Clutch Slave Cylinder](#) → [Service and Repair](#) ←**Service and Repair****Concentric Slave Cylinder Removal and Installation**
Removal

1. Remove the transaxle from the vehicle.
2. Remove the concentric slave cylinder retaining bolts.

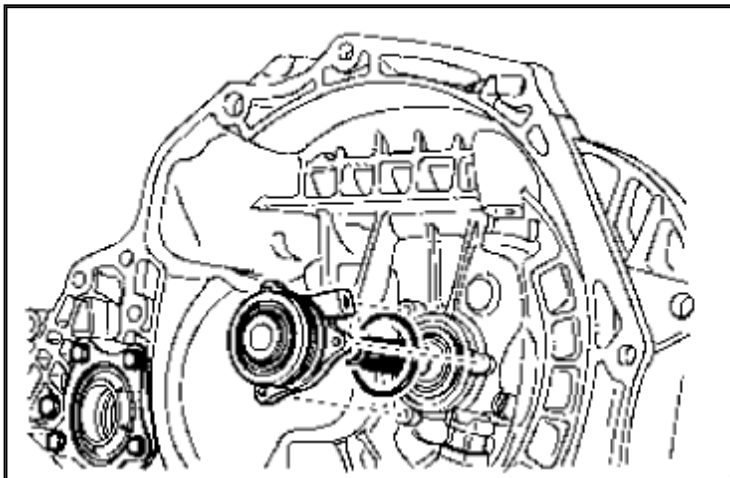


3. Disconnect the concentric slave cylinder pipe from the concentric slave cylinder.
4. Remove the bushing from the concentric slave cylinder pipe in the transaxle housing.



[Zoom](#)[Sized for Print](#)

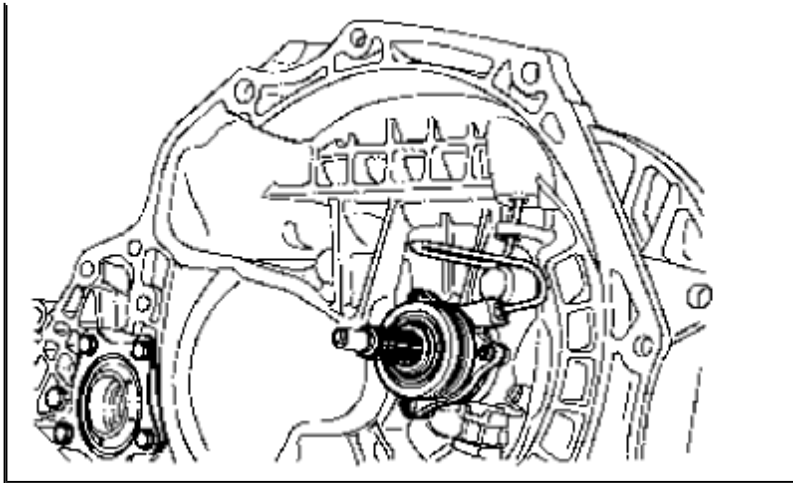
5. Remove the concentric slave cylinder pipe.

[Zoom](#)[Sized for Print](#)

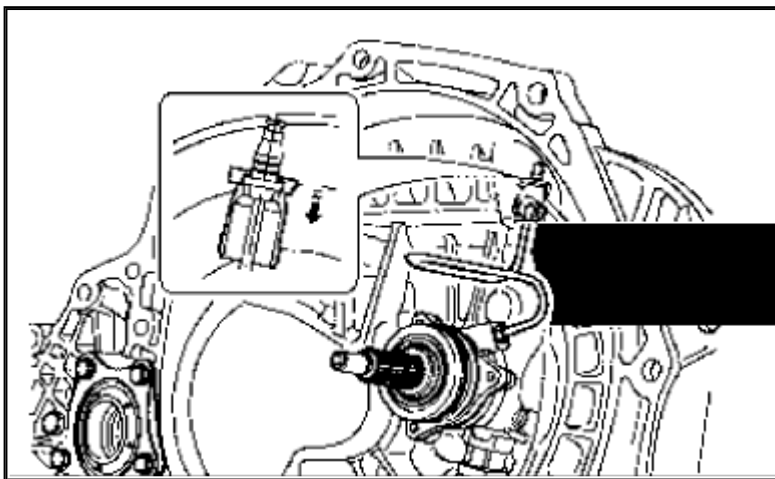
6. Remove the O-ring and the concentric slave cylinder.

Installation

1. Install the concentric slave cylinder and the pipe.
2. After installing the pipe screw provisionally, tighten the concentric slave cylinder retaining bolts.
 - Tighten the concentric slave cylinder retaining bolts to **7 Nm (62 inch lbs.)**.

[Zoom](#)[Sized for Print](#)

3. Tighten the pipe screw.
 - Tighten the pipe screw to **15 Nm (11 ft. lbs.)** .
4. Install the bushing onto the transaxle housing.
5. Connect the pipe with bushing.

[Zoom](#)[Sized for Print](#)

6. Install the transaxle into the vehicle.