


Select Vehicle | New TSBs | Technician's Reference | Component Search:  Conversion Calculator**2004 GMC Truck Envoy 2WD V8-5.3L VIN P**[Vehicle Level](#) → [Body and Frame](#) → [Tailgate](#) → [Service and Repair](#) → [Procedures](#) ←

Procedures

Opening the Endgate When There Is an Electrical Failure

Removal Procedure

1. Lower the end gate window out of the roof rear header seal.
2. Remove the end gate [trim panel](#).
3. Remove the end gate inner reinforcement panel.

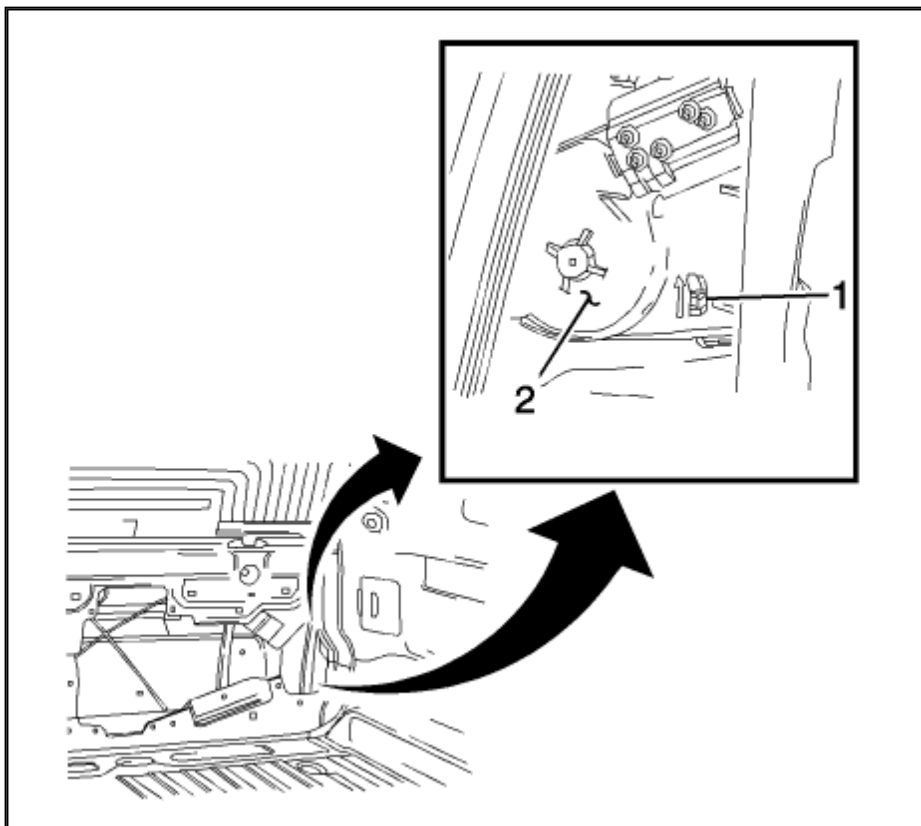

4. Locate the manual release lever (1), located on the upper and lower left latches (2).
5. Slide the manual release levers (1) upward to swing open the end gate.
6. Diagnose and repair the end gate latches.

Installation Procedure

1. Install the end gate inner reinforcement panel.
2. Install the end gate [trim panel](#).
3. Check for proper operation of the end gate latches and window.

© 2010 ALLDATA LLC. All rights reserved.

[Terms of Use](#)