

2006 Ford Truck F 250 2WD Super Duty V8-6.0L DSL Turbo VIN P

[Vehicle Level](#) → [Powertrain Management](#) → [Fuel Delivery and Air Induction](#) → [Variable Boost Control Solenoid](#) → [Service and Repair](#) ←


Service and Repair

TURBOCHARGER VARIABLE VANE HYDRAULIC CONTROL VALVE

Removal and Installation


1. **CAUTION:** Make sure the [ignition switch](#) is in the OFF position prior to working on the electronic engine controls.

Turn the [ignition switch](#) to the OFF position.

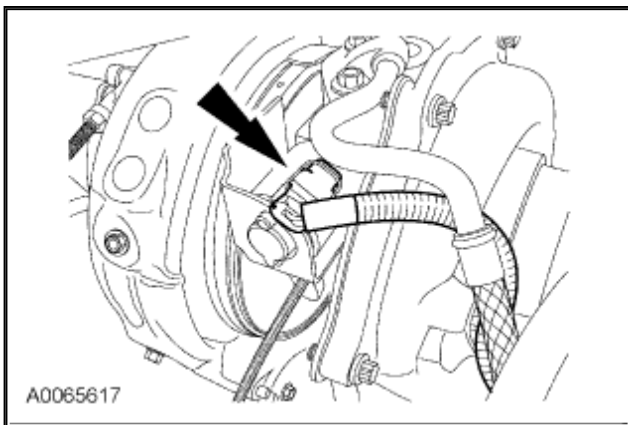

2. Disconnect the [turbocharger](#) variable vane hydraulic control valve electrical connector.



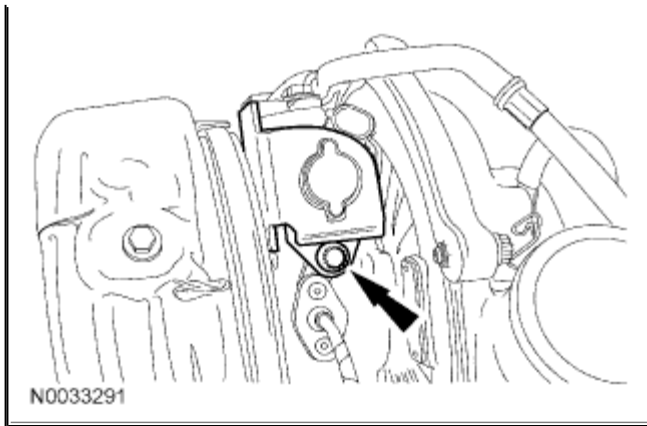

Zoom

Sized for Print

3. Remove the bolt, bracket and the [turbocharger](#) variable vane hydraulic control valve.
 - To install, tighten to **24 Nm (18 lb-ft)** .
4. **CAUTION: Do not use the retaining bolt to draw the valve into the housing or damage to the valve can occur.**

NOTE: Inspect the O-ring seals to make sure they are not twisted or distorted.

To install, reverse the removal procedure.

- Apply clean engine oil to the O-ring seals prior to installing.

© 2010 ALLDATA LLC. All rights reserved.

[Terms of Use](#)