

Select Vehicle | New TSBs | Technician's Reference | Component Search:




 Conversion Calculator

2002 Ford Truck Expedition 2WD V8-4.6L SOHC VIN W

[Vehicle Level](#) → [Engine, Cooling and Exhaust](#) → [Engine](#) → [Timing Chain](#) → [Service and Repair](#) → [Romeo Engine](#) ←

Romeo Engine

Timing Drive Components - Romeo Engine

 ST1329-A	Aligner, Camshaft 303-380 (T91P-6256-A)
 ST1334-A	Aligner, Camshaft Pulley 303-413 (T92P-6256-A)
 ST1335-A	Holding Tool, Crankshaft 303-448 (T93P-6303-A)

Special Tool(s)

Material
Empty table body


Material	
Item	Specification
Hydraulic Chain Tensioner Retaining Clip	1L3Z-6P250-AA

Zoom Sized for Print


Removal

CAUTION: Since the engine is not free-wheeling, timing procedures must be followed exactly or [piston](#) and valve damage can occur.

1. Remove the engine front cover.

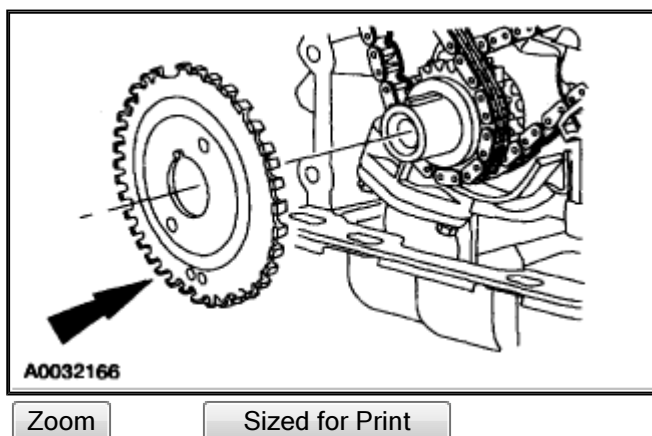


2. Remove the crankshaft sensor ring from the [crankshaft](#).

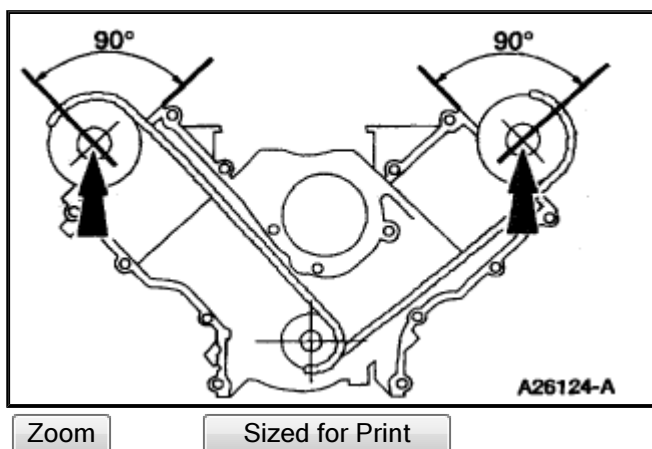

3. Rotate the [crankshaft](#) until the timing mark on the RH camshaft sprocket is


approximately at the 11 o'clock position and the timing mark on the LH camshaft sprocket is approximately at the 12 o'clock position.

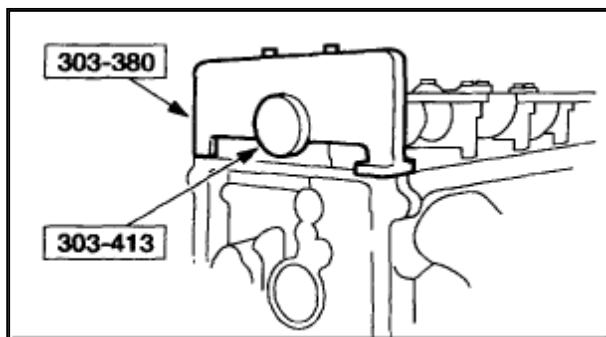

Zoom

Sized for Print

4. Install the special tools on the [camshaft](#).

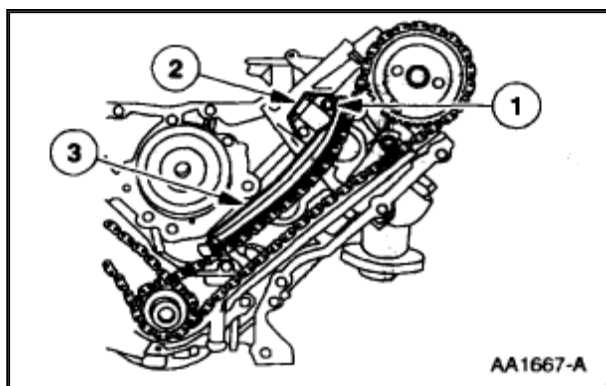


Zoom

Sized for Print

5. Remove the timing chain tensioning system from both timing chains.

- 1 Remove the bolts.
- 2 Remove the [timing chain tensioners](#).
- 3 Remove the [timing chain tensioner](#) arms.




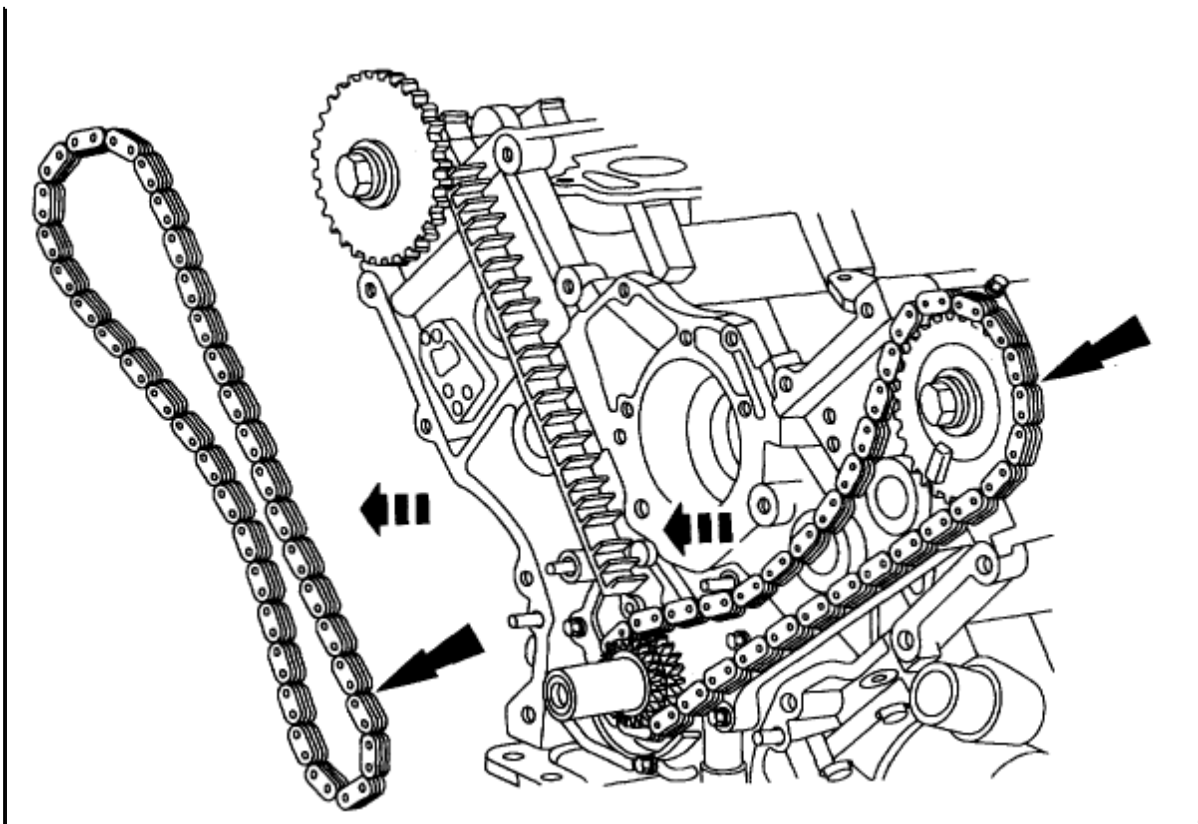

Zoom

Sized for Print

6. Remove the timing chains and crankshaft sprocket.

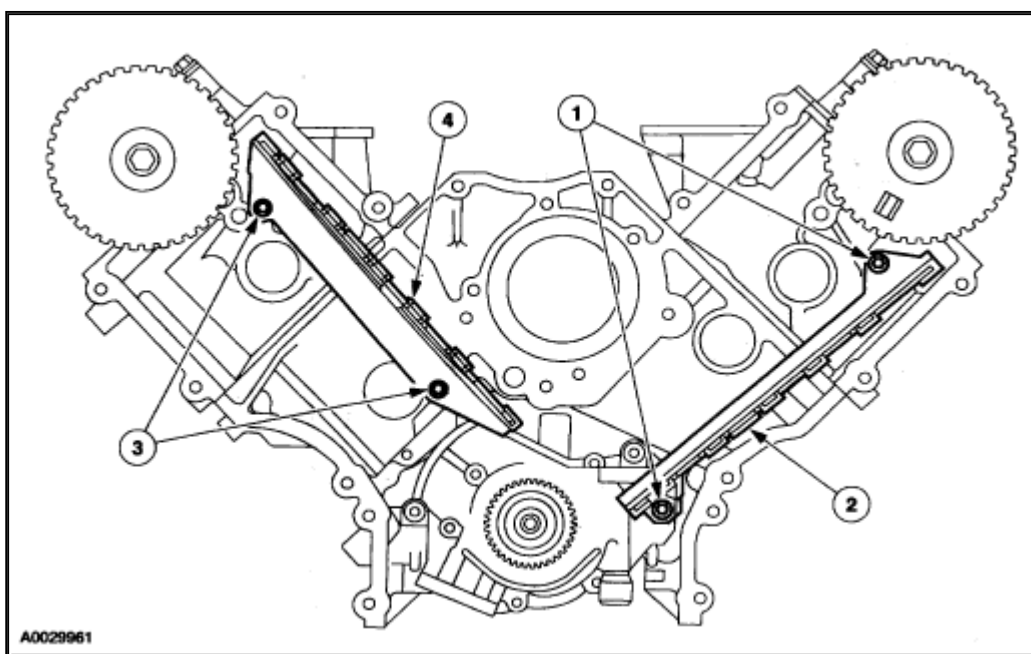

A0029961


Zoom

Sized for Print

7. Remove the [timing chain guides](#).

- 1 Remove the bolts.
- 2 Remove the LH [timing chain guide](#).
- 3 Remove the bolts.
- 4 Remove the RH [timing chain guide](#).

Installation

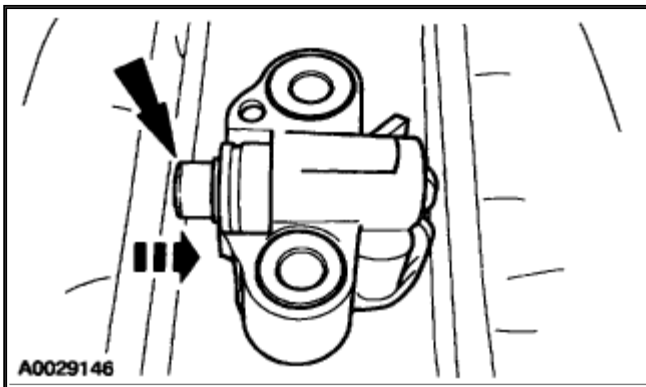


Zoom

Sized for Print

1. **CAUTION:** Timing and procedures must be followed exactly or damage to valves and pistons will result.

Compress the tensioner plunger, using a vise.

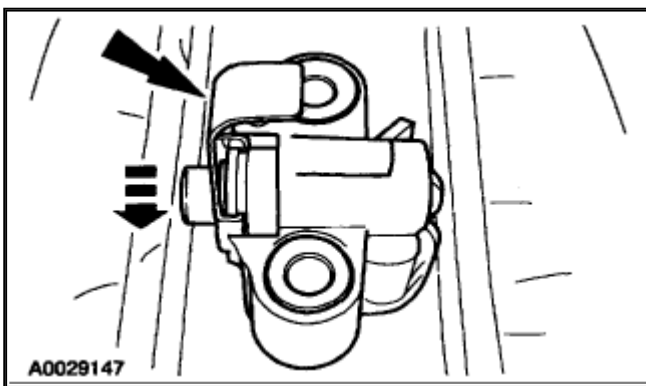


Zoom


Sized for Print

2. Install a retaining clip on the tensioner to hold the plunger in during installation.




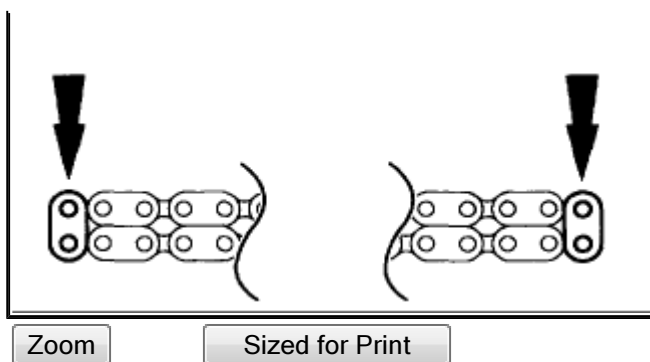

3. If the copper links are not visible, mark one link on one end and one link on the other end, and use as timing marks.

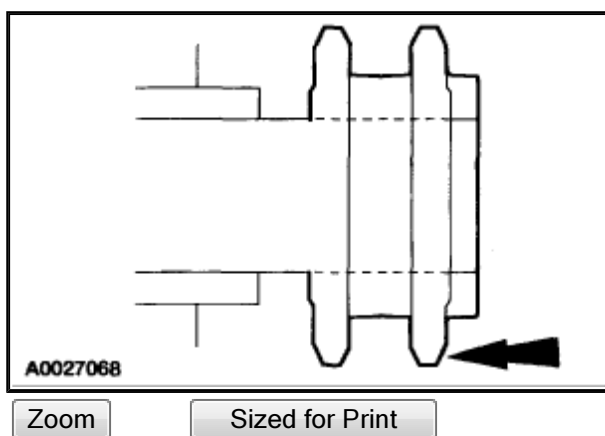


4. Install the crankshaft sprocket, marking sure the flange faces forward.

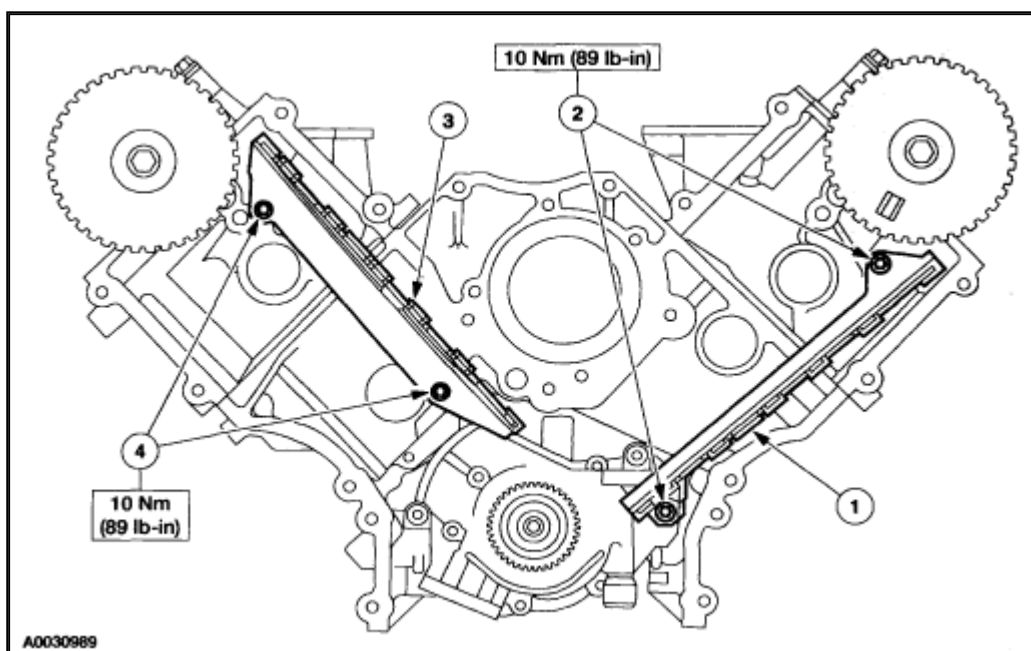

[Zoom](#)[Sized for Print](#)

5. install the [timing chain guide](#).

- 1 Position LH [timing chain guide](#).
- 2 Install and tighten the bolts.
- 3 Position the RH [timing chain guide](#).
- 4 Install and tighten the RH bolts.

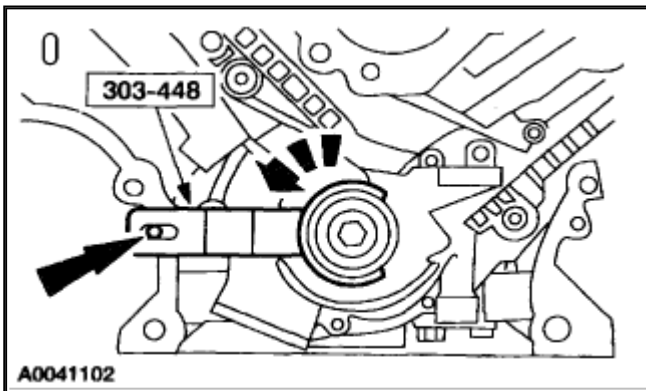[Zoom](#)[Sized for Print](#)


6. **CAUTION:** Unless otherwise instructed, do not rotate either the [crankshaft](#) or the camshafts, when the timing chains are removed and the cylinder heads are installed. Severe [piston](#) and valve damage will occur.

NOTE: The [number one cylinder](#) is at Top Dead Center (**TDC**) when the stud on the engine block fits into the slot in the handle of the special tool.

Using the special tool, position the [crankshaft](#) so the [number one cylinder](#) is at TDC.

- Remove the special tool.



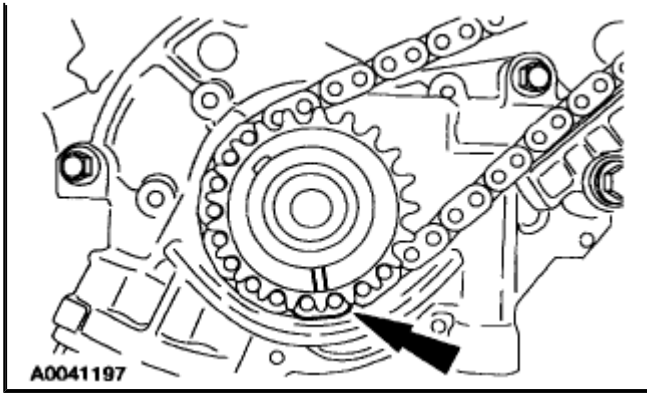


Zoom

Sized for Print

8. Position the LH (inner) timing chain on the crankshaft sprocket, aligning the copper (marked) link with the timing mark on the sprocket.




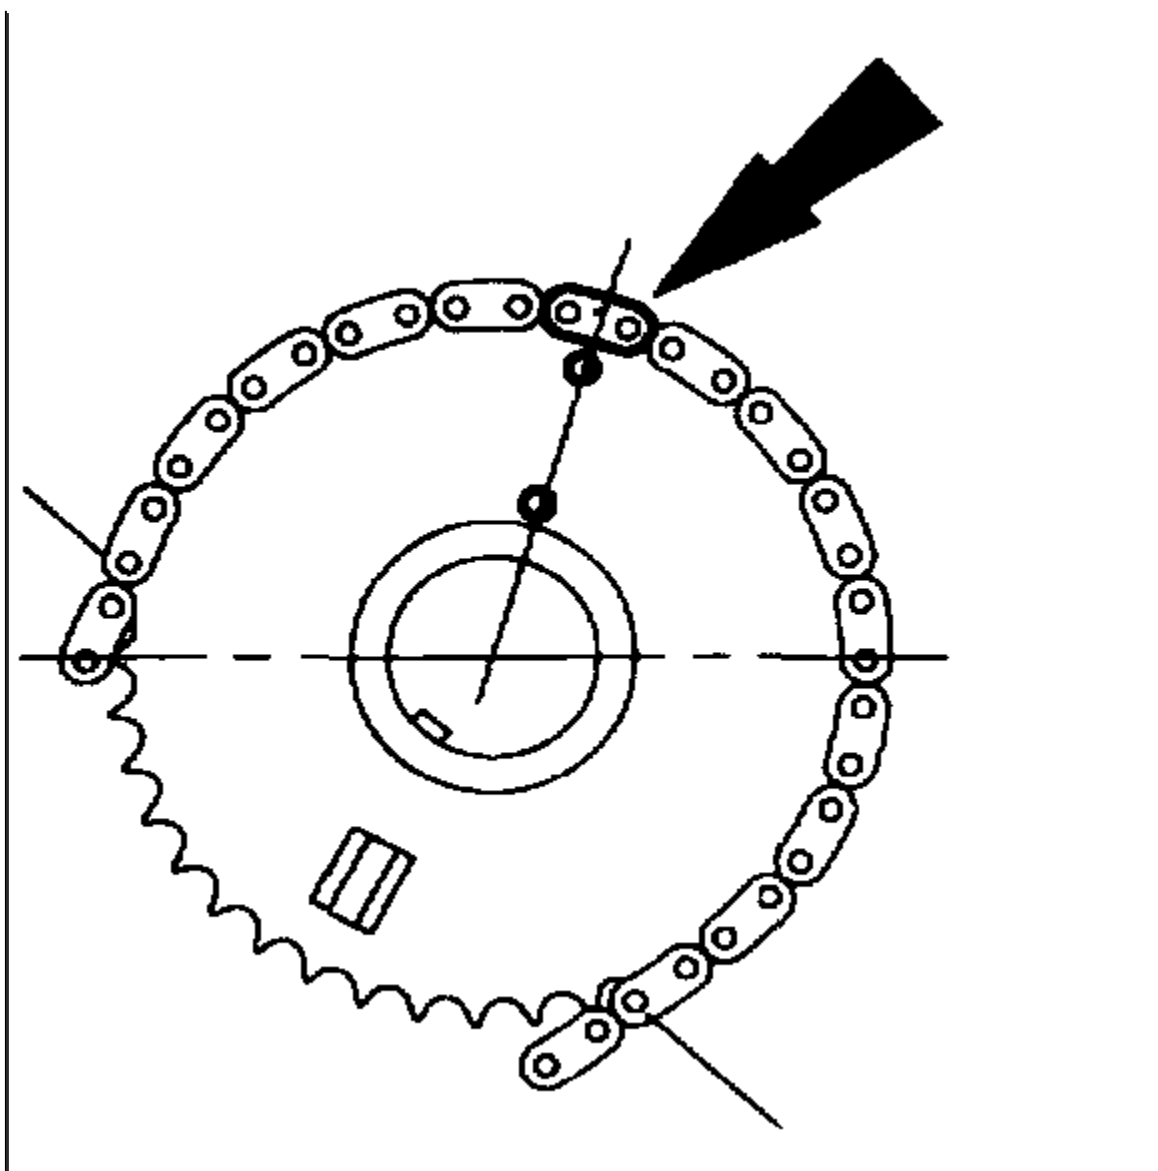

Zoom

Sized for Print

9. Install the LH timing chain on the camshaft sprocket, aligning the copper (marked) link with the timing marks on the sprocket.

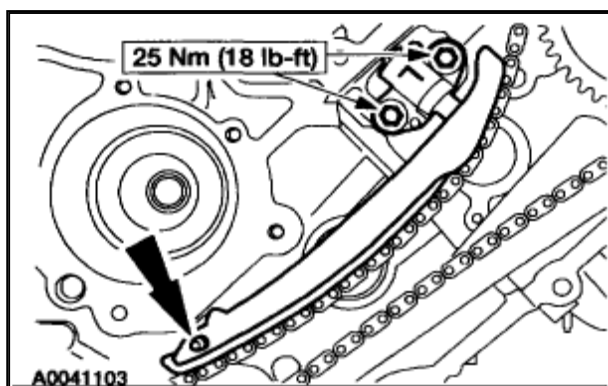


Zoom

Sized for Print

- 10. **NOTE:** The LH [timing chain tensioner](#) arm has a bump near the dowel hole for identification.


Position the LH [timing chain tensioner](#) arm on the dowel pin and install the LH timing chain tensioner.

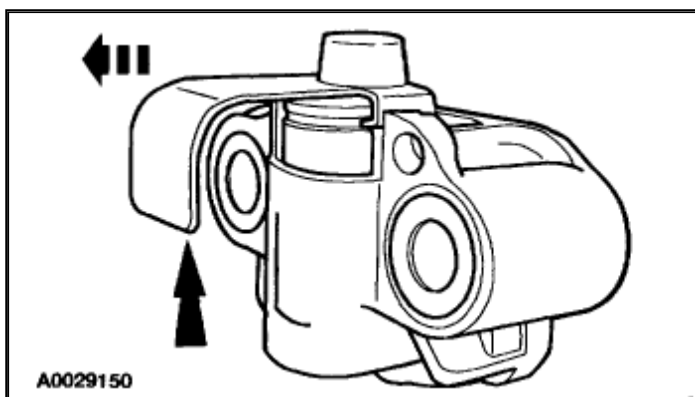

Zoom

Sized for Print


- 11. Remove the retaining clip from the LH [timing chain tensioner](#).

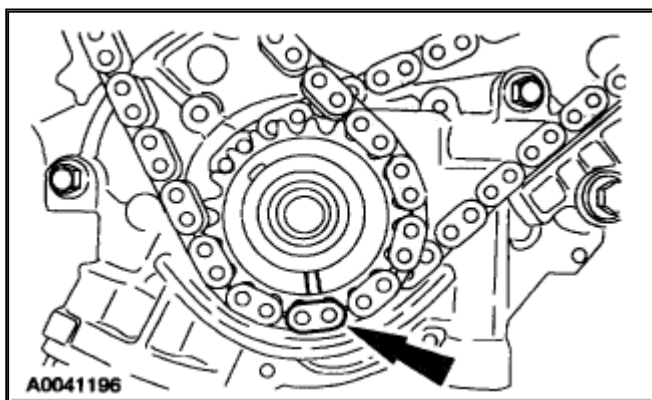


Zoom

Sized for Print

 - 12. Position the RH (outer) timing chain on the crankshaft sprocket, aligning the copper (marked) link with the timing mark on the sprocket.




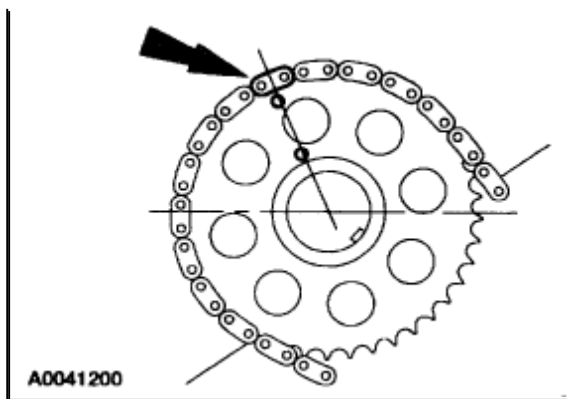

Zoom

Sized for Print


13. Install the RH timing chain on the camshaft sprocket, aligning the copper (marked) link with the timing marks on the sprocket.

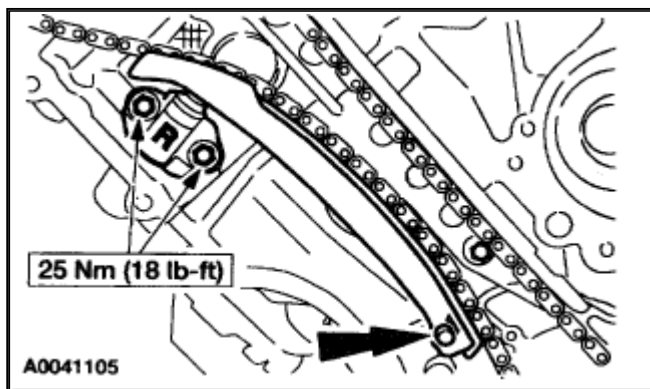

Zoom

Sized for Print


14. Position the RH [timing chain tensioner](#) arm on the dowel pin and install the RH timing chain tensioner.

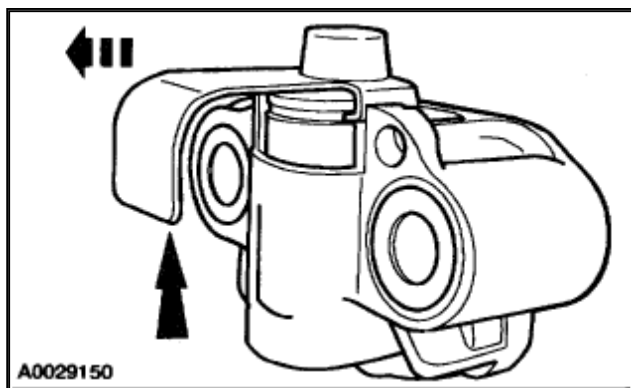

Zoom

Sized for Print


15. Remove the retaining clip from the RH [timing chain tensioner](#).

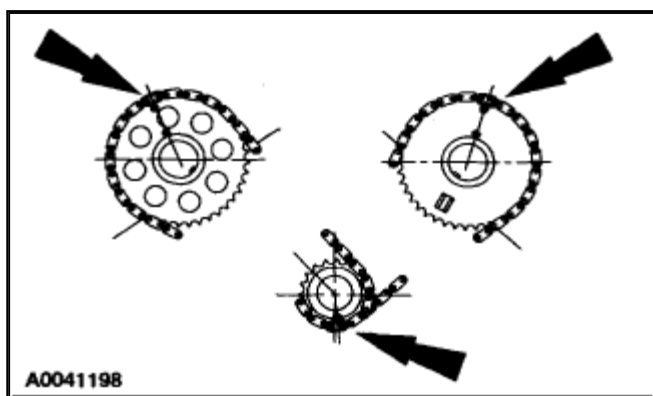

Zoom

Sized for Print


16. Make sure that the copper (marked) chain links are lined up with the dots on the crankshaft sprockets and the camshaft sprocket.

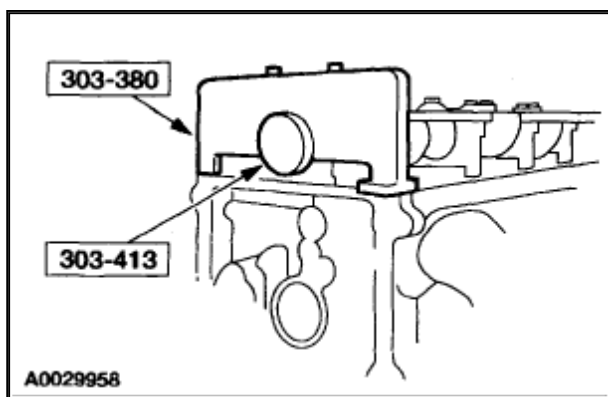

Zoom

Sized for Print

17. Remove special tools from the [camshaft](#).

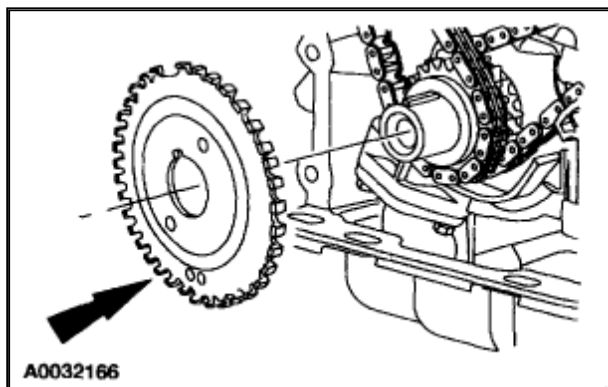

Zoom

Sized for Print

18. Install the crankshaft sensor ring on the [crankshaft](#).
19. Install the engine front cover.

© 2010 ALLDATA LLC. All rights reserved.
[Terms of Use](#)