


1997 Toyota Camry LE Sedan 4-Door L4-2164cc 2.2L DOHC MFI

Vehicle Level → [Engine, Cooling and Exhaust](#) → [Engine](#) → [Cylinder Head Assembly](#) → [Service and Repair](#)
→ [Cylinder Head Installation](#) ←

Cylinder Head Installation

[Notes](#)

1. Install cylinder head.

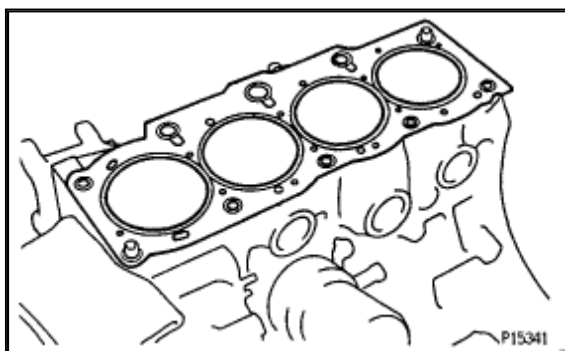

Zoom

Sized for Print

- A. Place cylinder head on cylinder block.
 - (a) Place a new [cylinder head gasket](#) on the cylinder block.


CAUTION: Be careful of the installation direction.

- (b) Place the cylinder head on the [cylinder head gasket](#).

- B. Install cylinder head bolts. **NOTE:**

- The cylinder head bolts are tightened in 2 progressive steps (steps (b) and (d)).
 - If any cylinder head bolt is broken or deformed, replace it.
- (a) Apply a light coat of engine oil on the threads and under the heads of the cylinder head bolts.


Cylinder Head Installation

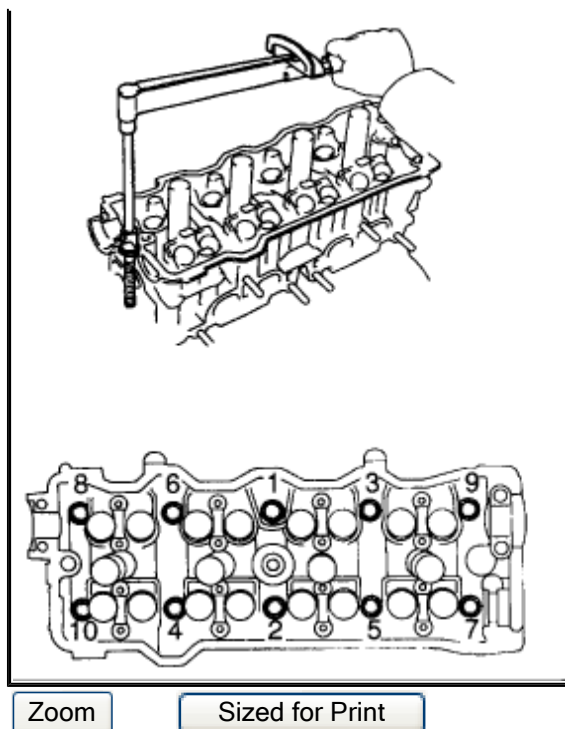

Zoom

Sized for Print

- (b) Install and uniformly tighten the 10 cylinder head bolts and plate washers in several passes, in the sequence shown.
 Torque: **49 Nm (36 ft. lbs.)**
 If any one of the cylinder head bolts does not meet the torque specification, replace the cylinder head bolt.

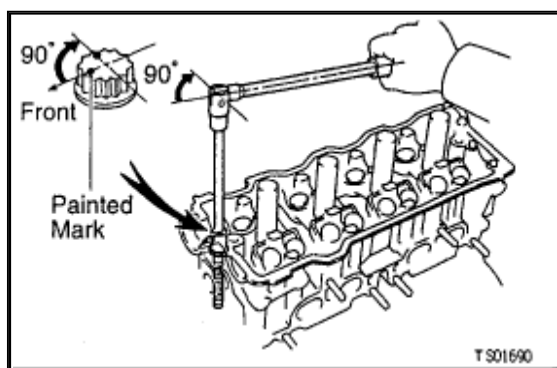

Zoom


Sized for Print

- (c) Mark the front of the cylinder head bolt head with paint.
- (d) Retighten the cylinder head bolts **90°** in the numerical order shown.

- (e) Check that the painted mark is now at a **90°** angle to the front.
- (f) Install the 2 bolts holding the water bypass pipe to the cylinder head.
Torque to **19 Nm (14 ft. lbs.)**
- (g) Connect the camshaft position sensor connector.

2. Install [spark plug tubes](#).

- (a) Clean the cylinder head tube holes of any residual adhesive, oil or foreign particles. Remove any oil with kerosene or gasoline.
- (b) Screw the threads of the [spark plug tube](#) coated with adhesive into the cylinder head.

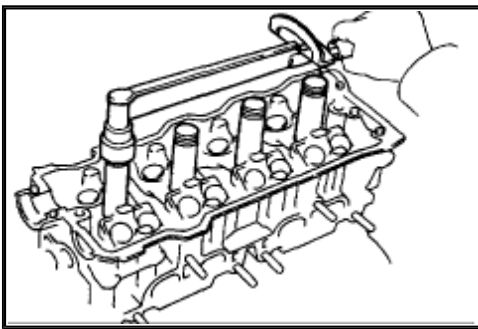


Zoom

Sized for Print

- (c) Using the [spark plug tube](#) nut and a 30 mm socket wrench, tighten the spark plug tubes.
Torque: **39 Nm (29 ft. lbs.)**

3. Assemble exhaust [camshaft](#).

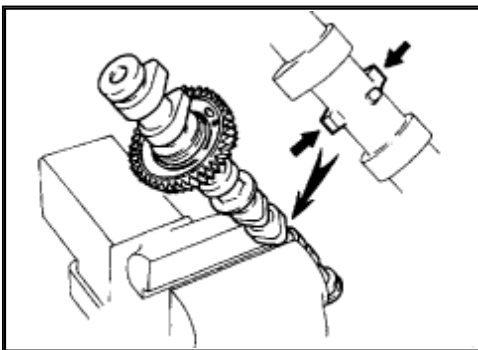


Zoom

Sized for Print

(a) Mount the [camshaft](#) in a vise.

CAUTION: Be careful not to damage the [camshaft](#).

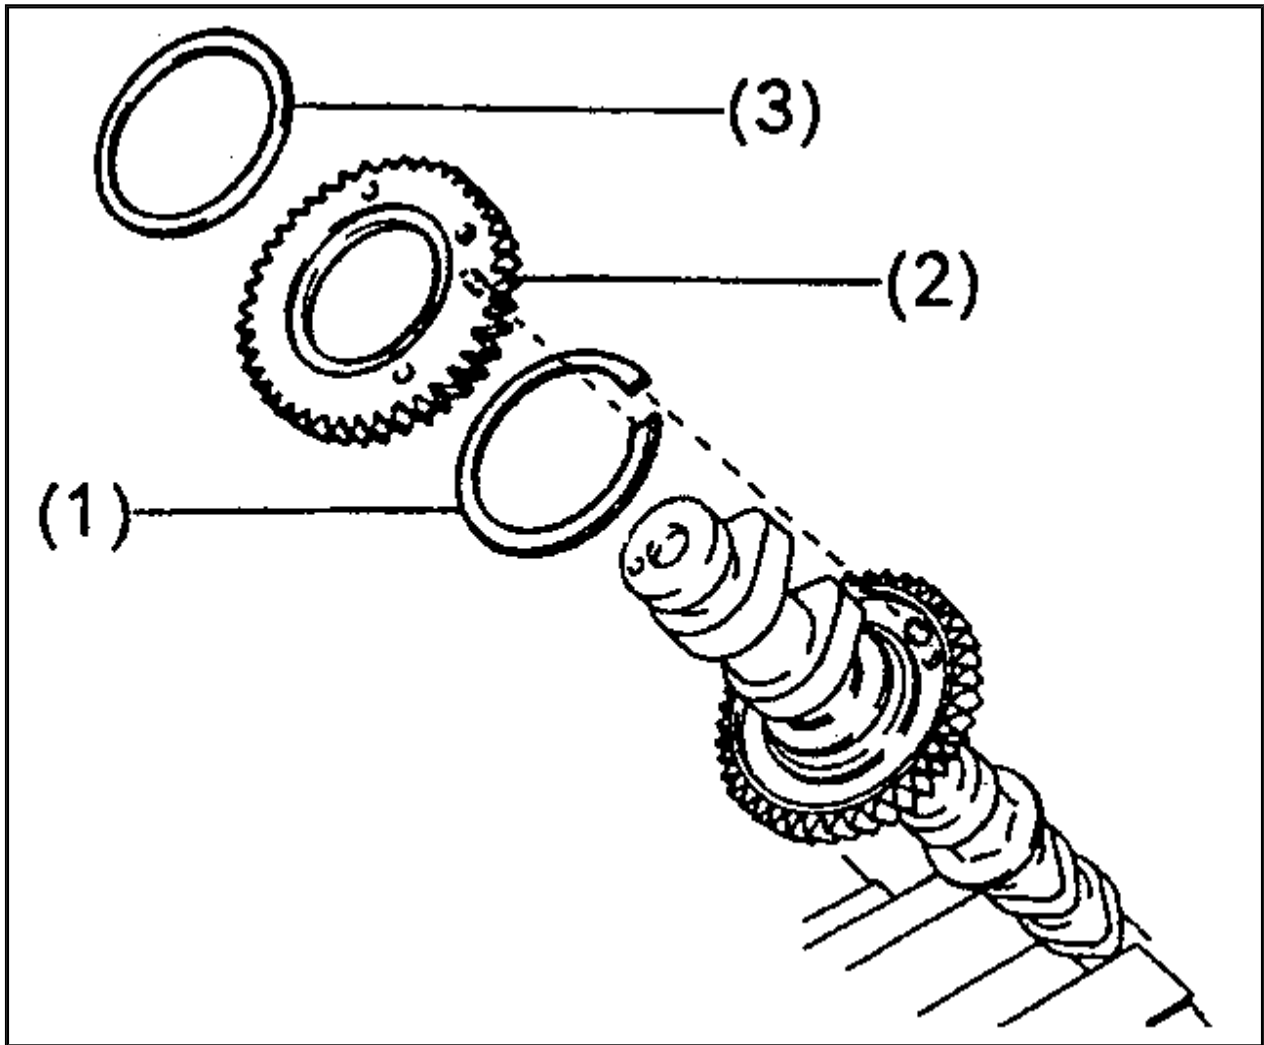


Zoom


Sized for Print

(b) Install these parts:

- (1) [Camshaft gear](#) spring.
- (2) [Camshaft](#) sub-gear.
- (3) Wave washer.

 NOTE: Align the pins on the gears with the spring ends.




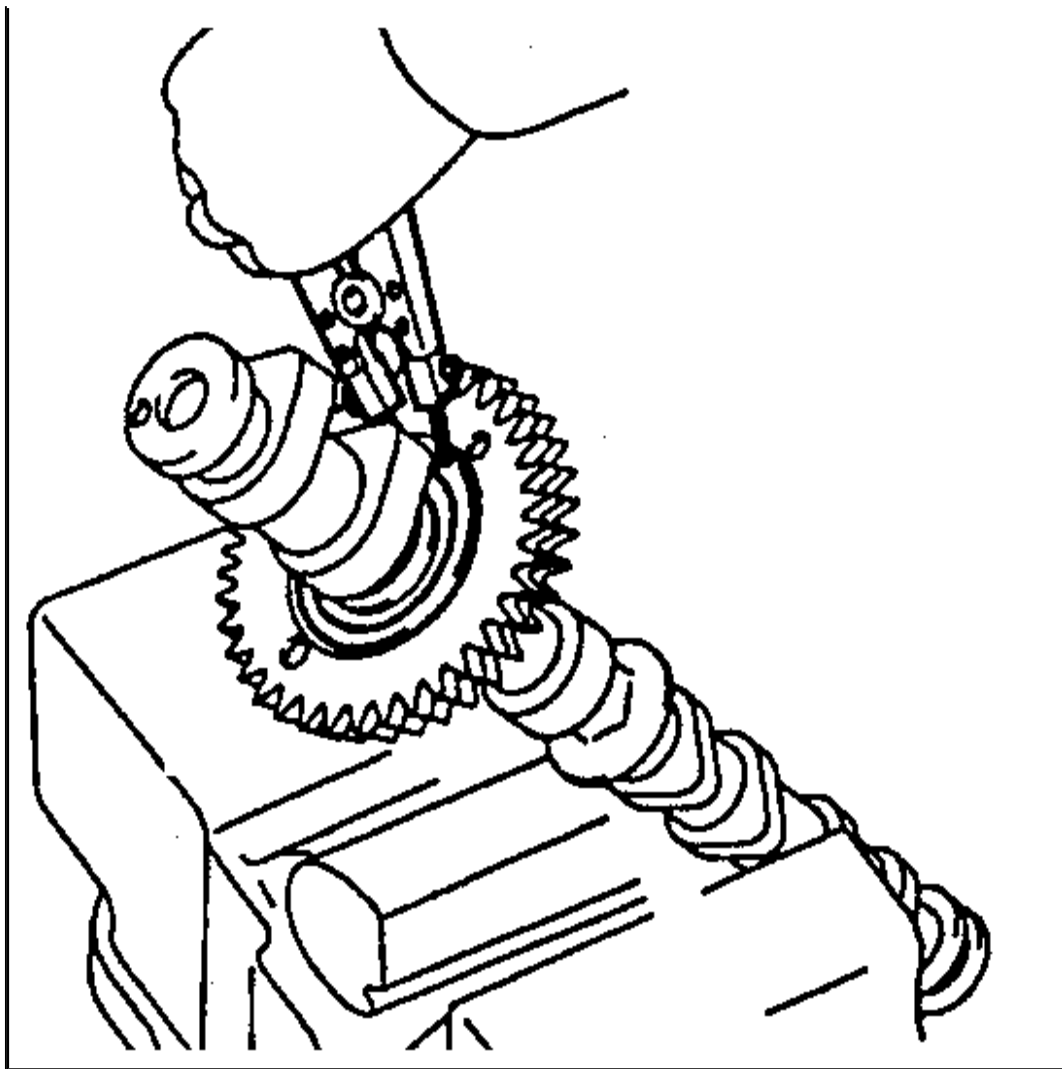

Zoom

Sized for Print

(c) Using snap ring pliers, install the snap ring.

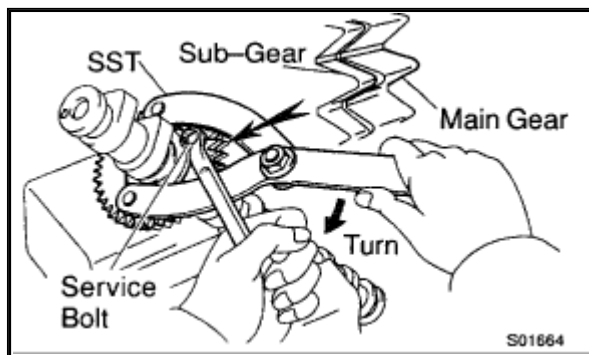


Zoom

Sized for Print

- (d) Using Special Service Tool (**SST**) Variable Pin Wrench Set # 09960 - 10010 (Variable Pin Wrench Arm Assembly # 09962 - 01000, Pin 5 # 09963 - 00500) or equivalents, align the holes of the [camshaft](#) drive gear and sub-gear by turning camshaft sub-gear clockwise, and install a service bolt.
 - (e) Align the gear teeth of the drive gear and sub-gear, and tighten the service bolt.
4. Install camshafts. **CAUTION:** Since the thrust clearance of the [camshaft](#) is small. the camshaft must be kept level while it is being installed. If the camshaft is not kept level, the portion of the cylinder head receiving the shaft thrust may crack or be damaged, causing the camshaft to seize or break. To avoid this, the following steps should be carried out.

A. Install intake [camshaft](#).

- (a) Apply Multipurpose (**MP**) grease to the thrust portion of the [camshaft](#).

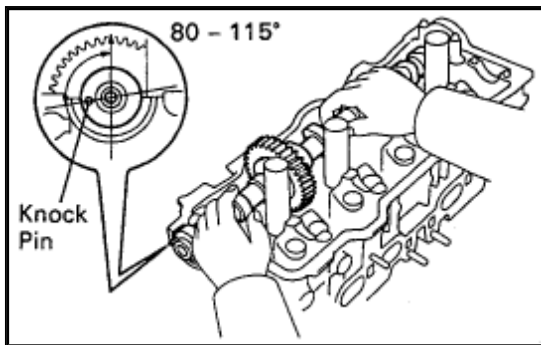


Zoom

Sized for Print

- (b) Place the intake [camshaft](#) at **80°- 115°BTDC** of camshaft angle on the cylinder head.

NOTE: The above angle arrows the No. 1 and No. 3 cylinder cam lobes of the intake [camshaft](#) to push their valve lifters evenly.




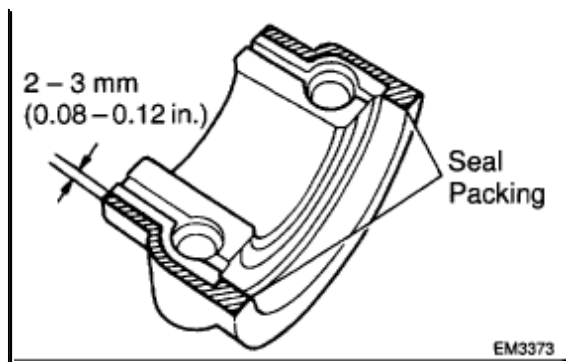

Zoom

Sized for Print


- (c) Apply seal packing to the No. 1 bearing cap as shown. Seal packing: Part No. 08826 - 00080 or equivalent.

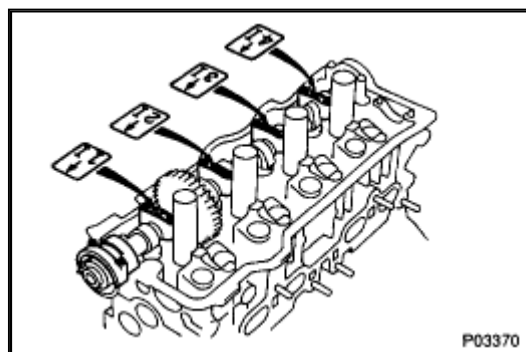

Zoom

Sized for Print


- (d) Install the bearing caps in their proper locations.
- (e) Apply a light coat of engine oil on the threads and under the heads of the bearing cap bolts.

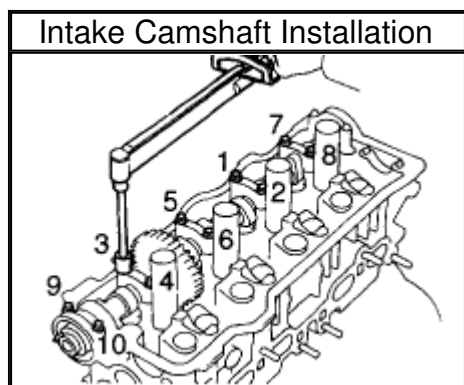

Zoom

Sized for Print

- (f) Install and uniformly tighten the 10 bearing cap bolts in several passes, in the sequence shown.
Torque: **19 Nm (14 ft. lbs.)**
- (g) Apply MP grease to a new oil seal lip.

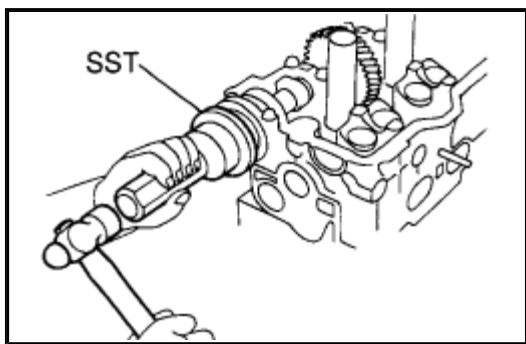


Zoom

Sized for Print

- (h) Using SST Crankshaft Front Oil Seal Replacer # 09223 - 46011 or equivalent and a hammer, tap in the oil seal.

B. Install exhaust [camshaft](#).

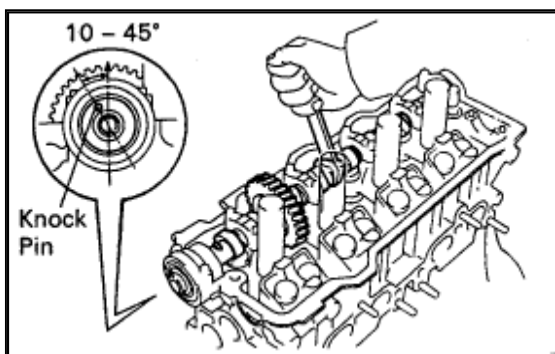


Zoom

Sized for Print

- (a) Set the knock pin of the intake [camshaft](#) at **10 - 45° BTDC** of camshaft angle.

NOTE: The above angle allows the No. 2 and No. 4 cylinder cam lobes of the exhaust [camshaft](#) to push their valve lifters evenly.

- (b) Apply MP grease to the thrust portion of the [camshaft](#).

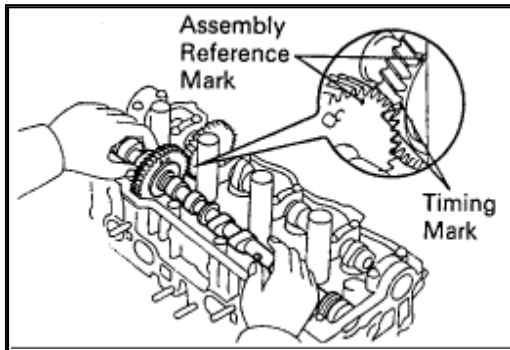

Zoom


Sized for Print

- (c) Engage the exhaust [camshaft gear](#) to the intake camshaft gear by matching the timing marks on each gear.
- (d) Roll down the exhaust [camshaft](#) onto the bearing journals while engaging gears with each other.

CAUTION: There are also assembly reference marks on each gear as shown in the illustration. Do not use these marks.

- (e) Turn the intake [camshaft](#) clockwise or counterclockwise a little until the exhaust camshaft sits in the bearing journals evenly without rocking the camshaft on the bearing journals.


CAUTION: It is very important to replace the [camshaft](#) in the bearing journals evenly while tightening bearing caps in the subsequent steps.

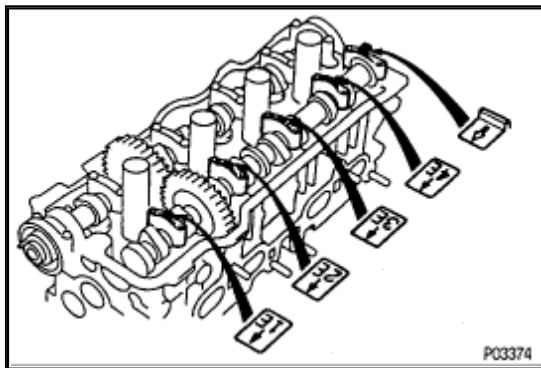

Zoom

Sized for Print


- (f) Install the bearing caps in their proper locations.
- (g) Apply a light coat of engine oil on the threads and under the heads of the bearing cap bolts.

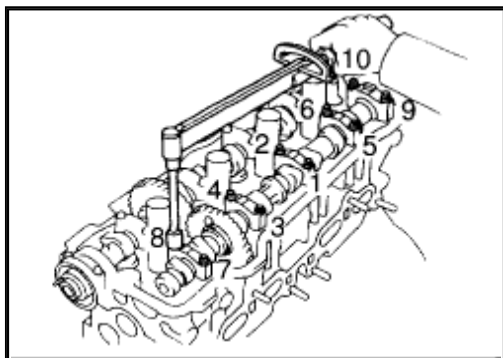

Zoom

Sized for Print

- (h) Install and uniformly tighten the 10 bearing cap bolts in several passes, in the sequence shown.
Torque: **19 Nm (14 ft. lbs.)**

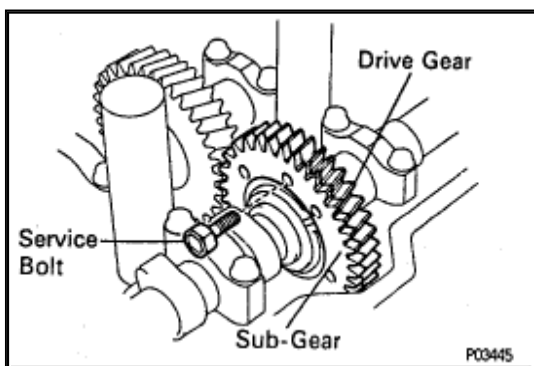


Zoom

Sized for Print


- (i) Remove the service bolt.
5. Check and adjust [valve clearance](#). Turn the [camshaft](#) and position the cam lobe upward, and check and adjust the [valve clearance](#).
 6. Install semi-circular plugs.

- (a) Remove any old packing Formed In Place Gasket (**FIPG**) material.



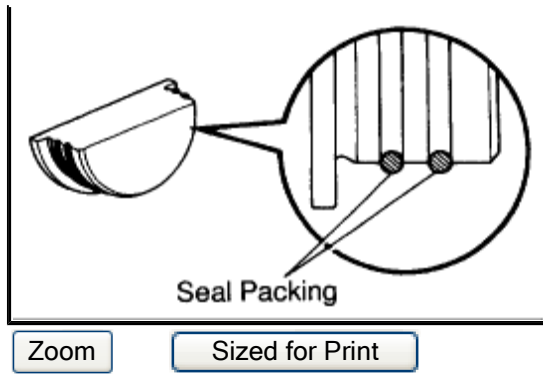

- (b) Apply seal packing to the semi-circular plug grooves.
Seal packing: Part No. 08826 - 00080 or equivalent.

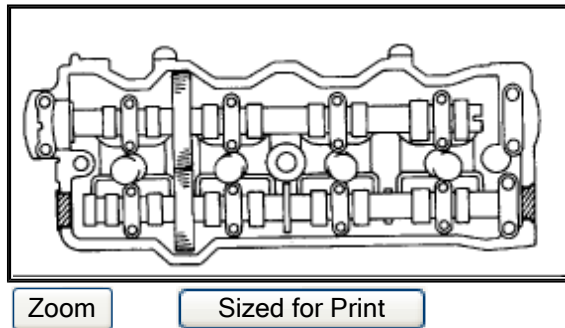


- (c) Install the 2 semi-circular plugs to the cylinder head.
7. Install Positive Crankcase Ventilation (**PCV**) valve, PCV hose and [high-tension cord](#) clamp to cylinder head.

- (a) Install the [high-tension cord](#) clamp with the bolt.
- (b) Install the grommet, the PCV valve and hose assembly.
- (c) Install the PCV hose.

8. Install cylinder head cover.

- (a) Remove any old packing FIPG material.




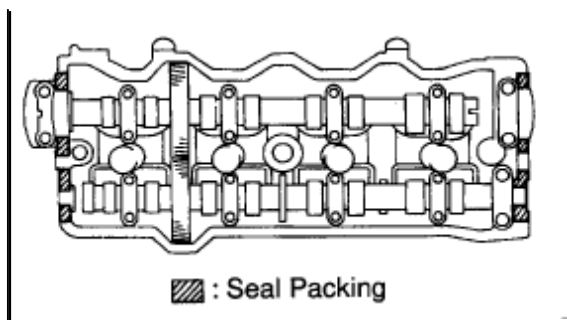

Zoom

Sized for Print

- (b) Apply seal packing to the cylinder head as shown in the illustration.
Seal packing: Part No. 08826 - 00080 or equivalent.
- (c) Install the gasket to the head cover.

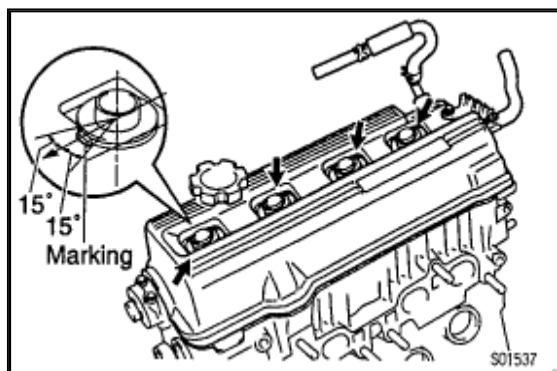

Zoom


Sized for Print

- (d) Install the head cover with the 4 grommets and nuts. Uniformly tighten the nuts in several passes.
Torque: **44 Nm (33 ft. lbs.)**


NOTE: Install the grommets so that their markings are as shown in the illustration.

- 9. Install oil pressure switch.



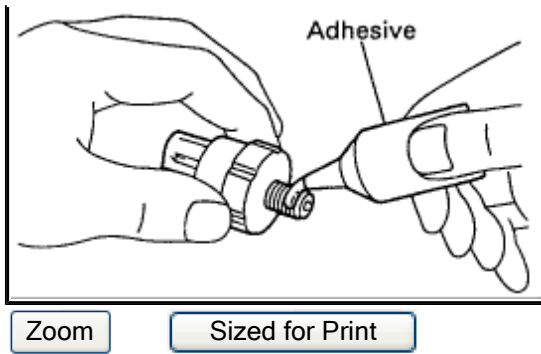

- (a) Apply adhesive to 2 or 3 threads.
Adhesive: Part No. 08833 - 00080, THREE BOND 1324 or equivalent.

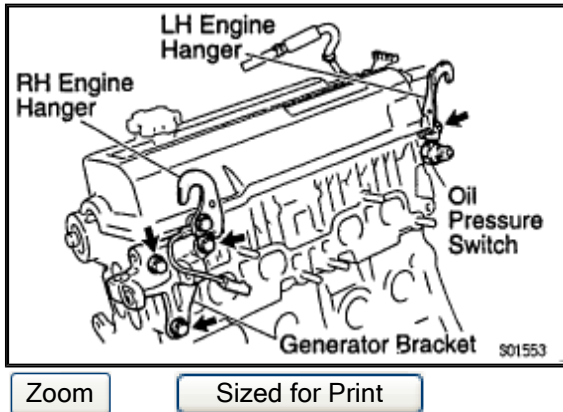


- (b) Install the oil pressure switch.

10. Install engine hangers and generator bracket.

- (a) Install the generator bracket and RH engine hanger assembly with the 3 bolts.
Torque: **42 Nm (31 ft. lbs.)**
- (b) Install the LH engine hanger with the bolt.
Torque: **25 Nm (18 ft. lbs.)**




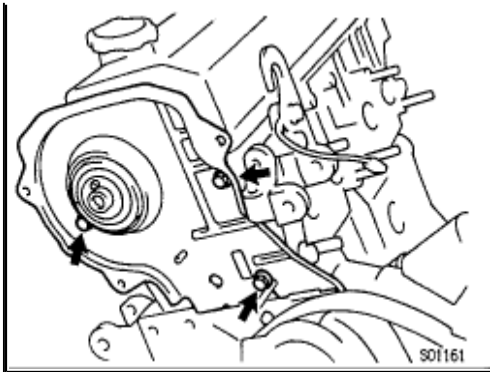

Zoom

Sized for Print

11. Install No. 3 timing belt cover. Install the timing belt cover with the 3 bolts. Torque: **7.8 Nm (69 inch lbs.)**
12. Temporarily install No. 1 [idler pulley](#) and tension spring.
13. Install camshaft timing pulley.
14. Connect [timing belt](#) to camshaft timing pulley.
15. Install injectors and delivery pipe.

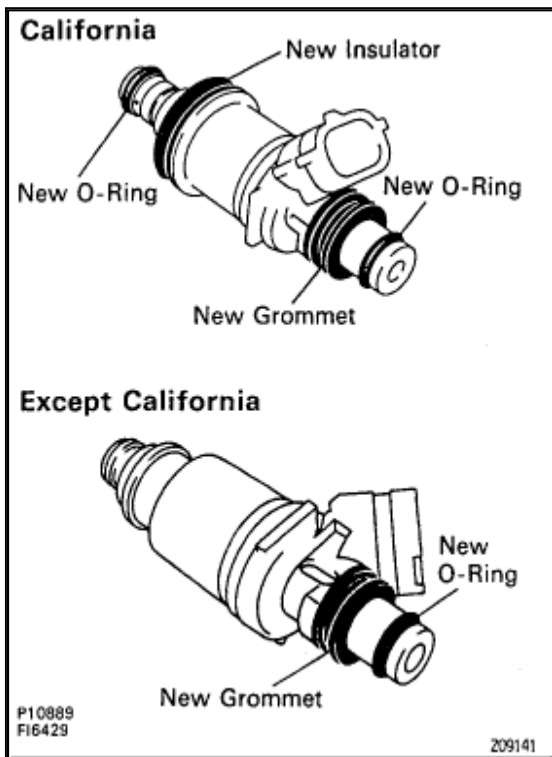


Zoom

Sized for Print

(a) California: Install a new insulator and grommet to each injector.

- (b) Except California: Install a new grommet to each injector.
- (c) California: Apply a light coat of gasoline onto 2 new O-rings, and install them to each injector.
- (d) Except California: Apply a light coat of gasoline onto a new O-ring, and install it to each injector.

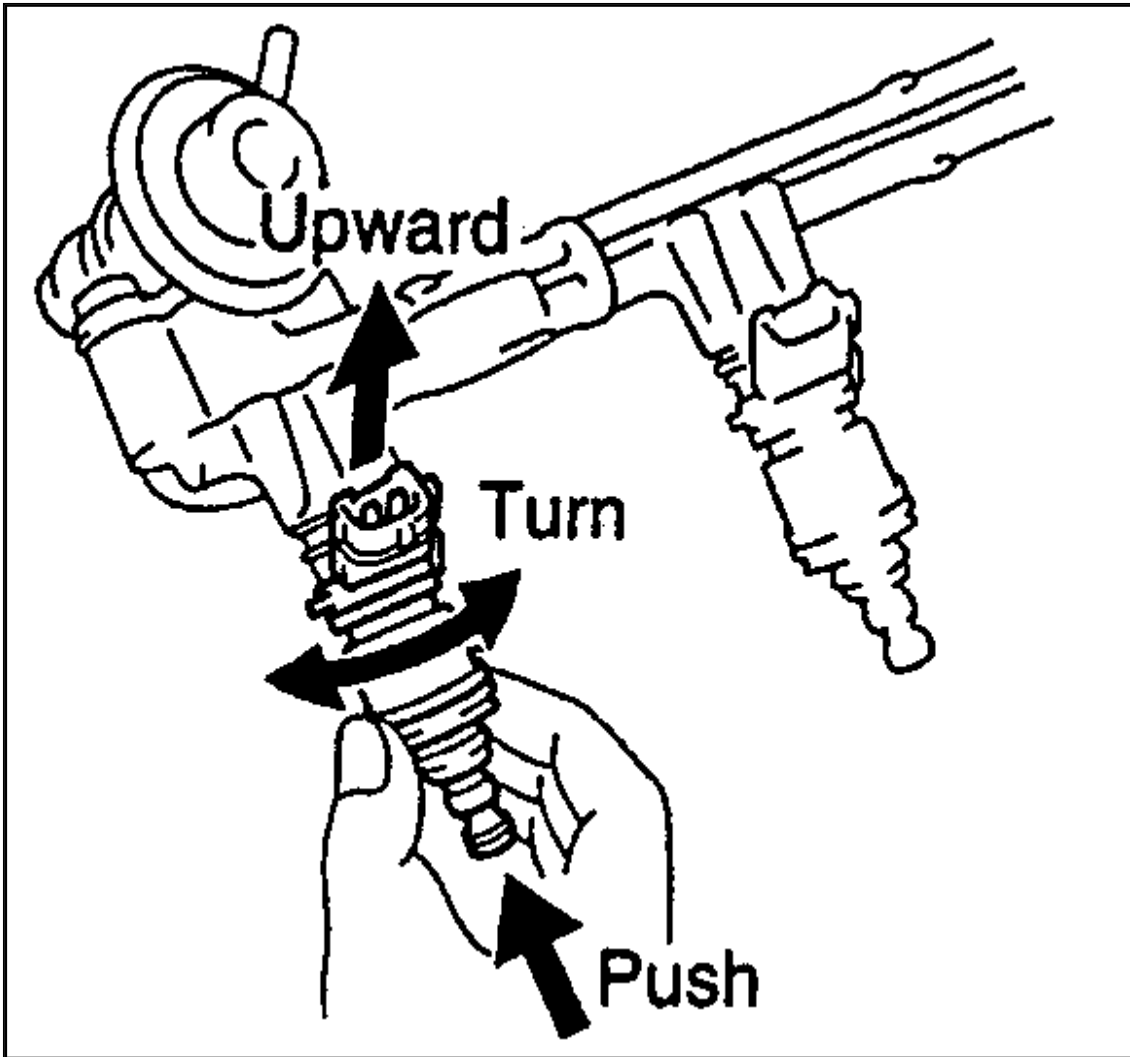

Zoom

Sized for Print

- (e) While turning the injector clockwise and counterclockwise, push it to the delivery pipe. Install the 6 injectors.
- (f) Position the injector connector upward.






Zoom

Sized for Print

(g) Install these parts to the cylinder head:

- (1) 2 spacers.
- (2) Except California: 4 new insulators.


(h) Attach the 4 injectors together with the delivery pipe to the cylinder head.

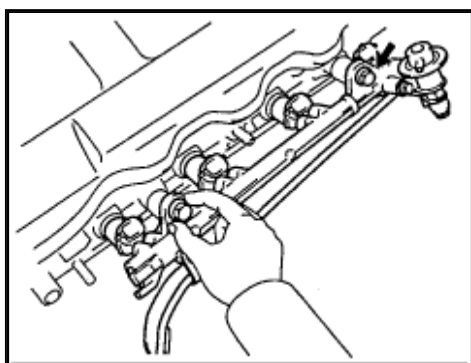

Zoom

Sized for Print

(i) Temporarily install the 2 bolts holding the delivery pipe to the cylinder head.

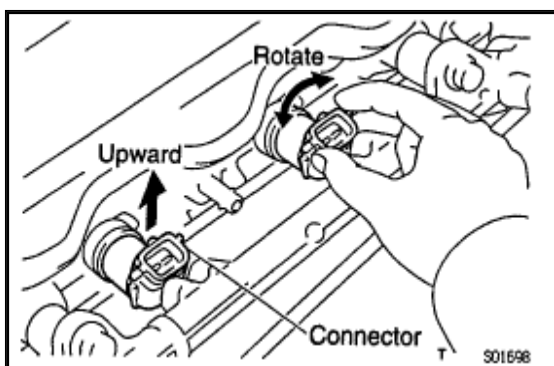


[Zoom](#)[Sized for Print](#)


- (j) Check that the injectors rotate smoothly.

NOTE: If injectors do not rotate smoothly, the probable cause is incorrect installation of O-rings. Replace the O-rings.

- (k) Position the injector connector upward.

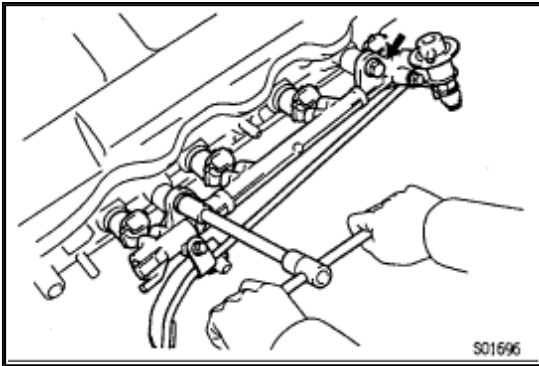[Zoom](#)[Sized for Print](#)


- (l) Tighten the 2 bolts holding the delivery pipe to the cylinder head.
Torque: **13 Nm (9 ft. lbs.)**

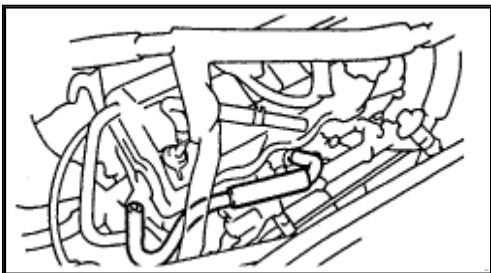[Zoom](#)[Sized for Print](#)

16. California only: Install air hose for air assist system. Connect the air hose to the cylinder head port.
17. Install [intake manifold](#).

- (a) Insert the [intake manifold](#) between the cylinder head and dash panel.

- (b) Insert the engine wire between the cylinder head and [intake manifold](#).

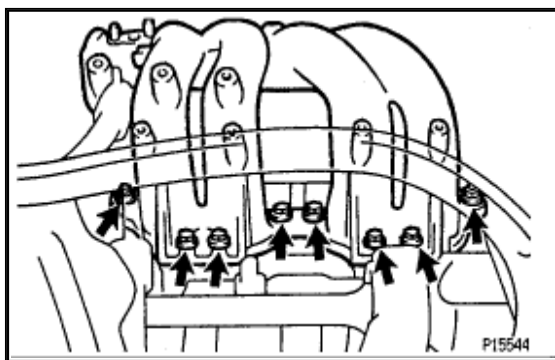


Zoom

Sized for Print

- (c) Install a new gasket and the [intake manifold](#) with the 6 bolts and 2 nuts. Uniformly tighten the bolts and nuts in several passes.
Torque: **19 Nm (14 ft. lbs.)**

18. Connect fuel inlet hose to delivery pipe.

- (a) Connect the fuel inlet pipe to the delivery pipe with 2 new gaskets and fuel pulsation damper.

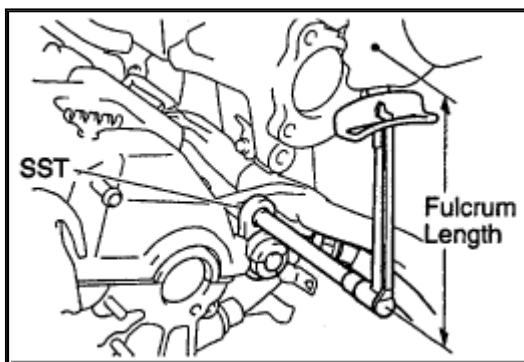

Zoom

Sized for Print


- (b) Using SST, Tighten the fuel pulsation damper. SST 09612-24014 (09617-24011).

Torque:

34 Nm (25 ft. lbs.)

29 Nm (21 ft. lbs.) using the SST.




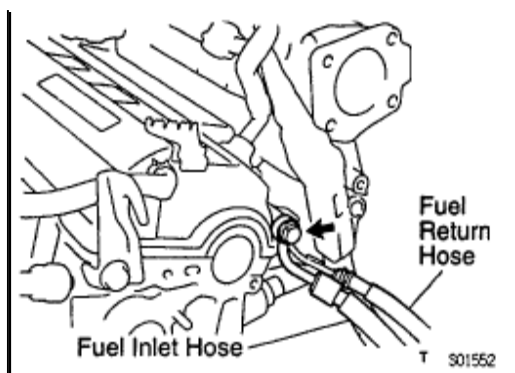

Zoom

Sized for Print


19. Connect fuel return hose to return hose.
20. Install engine wire.

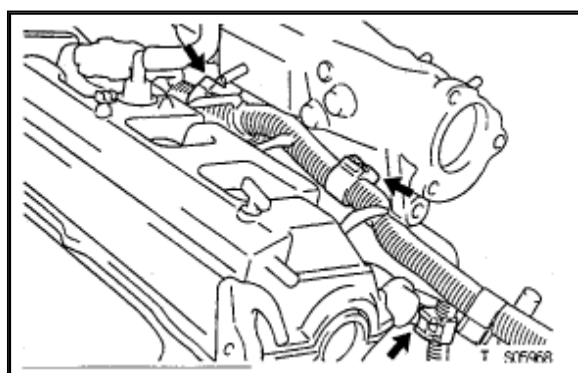

Zoom

Sized for Print

- (a) Install the engine wire clamps to the 2 brackets on the front side of the [intake manifold](#).
- (b) Install the engine wire protector to the 2 brackets on the front side of the [intake manifold](#).

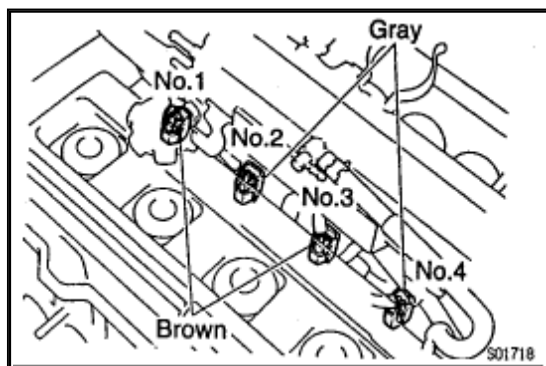


Zoom

Sized for Print

(c) Connect the 4 injector connectors.

NOTE: The No. 1 and No. 3 injector connectors are brown, and the No. 2 and No. 4 injector connectors are gray.

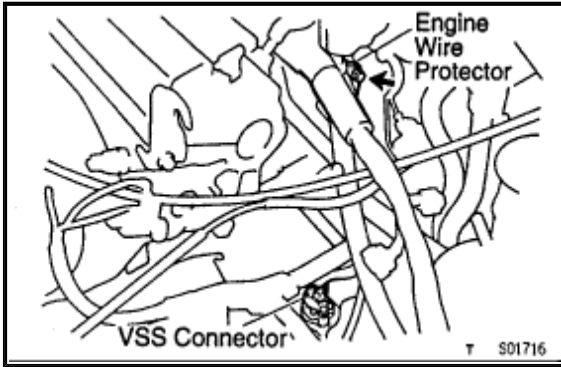


Zoom

Sized for Print

(d) Install the engine wire protector to the LH side of the [intake manifold](#) with the bolt.


(e) Connect the Vehicle Speed Sensor (**VSS**) sensor connector.

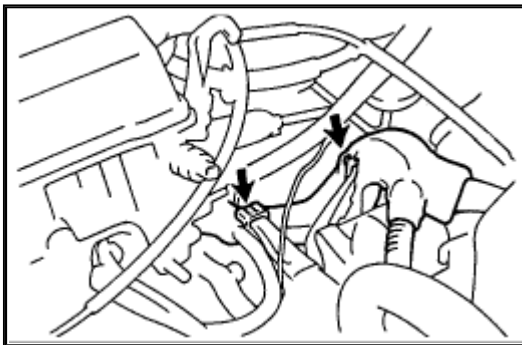


Zoom

Sized for Print

 (f) Install the engine wire protector to the bracket on the starter.



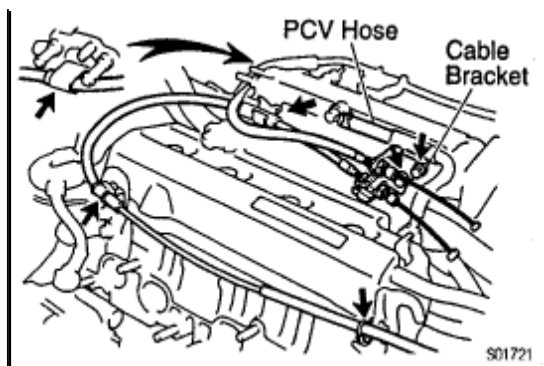


Zoom

Sized for Print

21. Install accelerator, A/T throttle control cables and bracket.

- (a) Install the cable bracket to the [intake manifold](#) with the 2 bolts.
- (b) Install the control cables to the 4 clamps.

22. Connect PCV hose to [intake manifold](#).

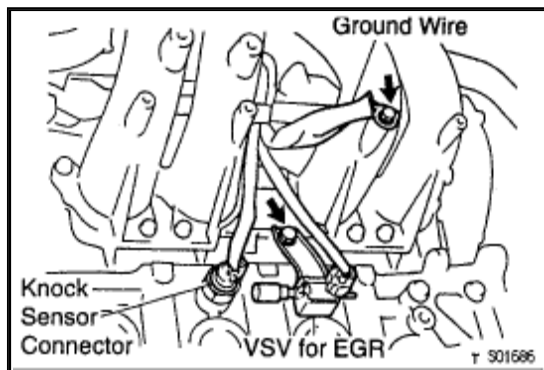

Zoom

Sized for Print

23. Install Vacuum Switching Valve (**VSV**) for Exhaust Gas Recirculation (**EGR**) .


- (a) Install the VSV with the bolt.
- (b) Connect the VSV connector.

24. Connect knock sensor 1 connector.

25. Install ground wires Install the 2 ground wires with the bolt.

26. Install air tube.




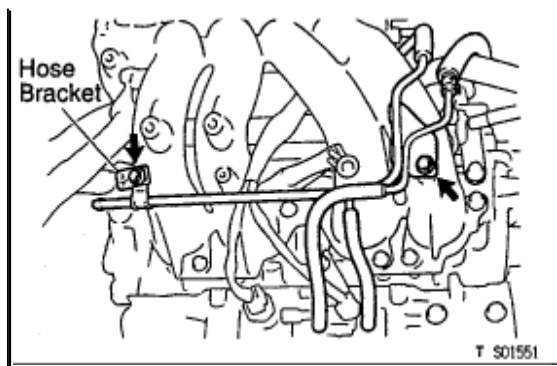

Zoom

Sized for Print


- (a) Install the air tube and hose bracket (for EGR) with the 2 bolts.
- (b) Connect these hoses:

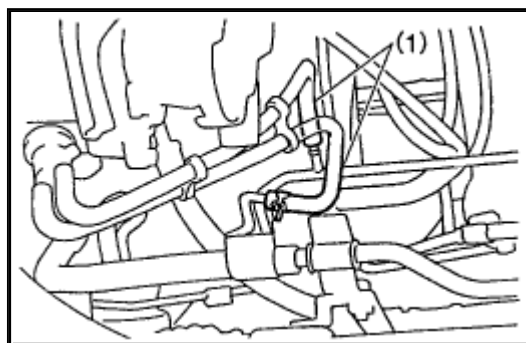

Zoom

Sized for Print


- (1) 2 Power Steering (**PS**) air hoses to air tube.

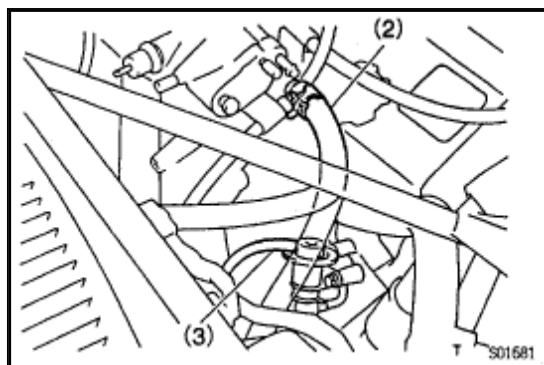

Zoom

Sized for Print


- (2) PS air hose to [intake manifold](#).
- (3) Vacuum sensing hose to fuel pressure regulator.

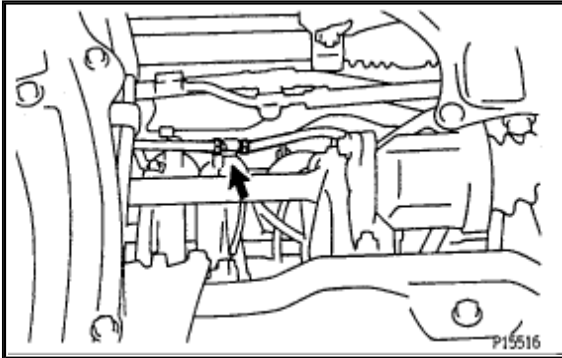

Zoom

Sized for Print


- 27. Install A/T throttle control cable to [intake manifold](#). Install the control cable to the clamp on the rear side of the [intake manifold](#).

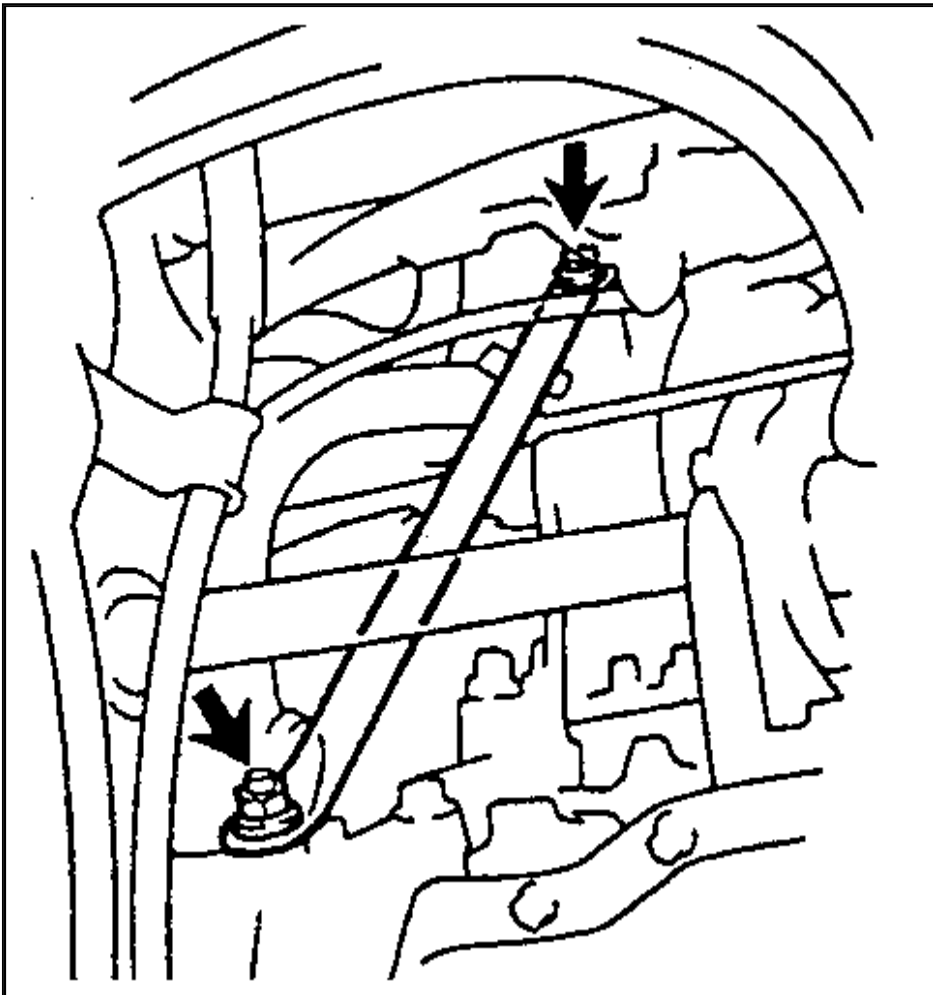

Zoom

Sized for Print

- 28. Install [intake manifold](#) stay. Install the [intake manifold](#) stay with the bolt and nut.
Torque: Bolt: **21 Nm (15 ft. lbs.)** Nut: **44 Nm (32 ft. lbs.)**
- 29. Install EGR valve and vacuum modulator.

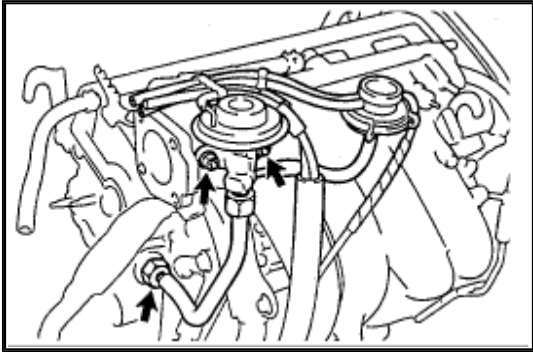


Zoom

Sized for Print

- (a) Install a new gasket and the EGR valve with the union nut and 2 nuts.
Torque:

Nut: **13 Nm (9 ft. lbs.)**
Union bolt: **59 Nm (43 ft. lbs.)**


- (b) Install the vacuum modulator to the clamp on the [intake manifold](#).

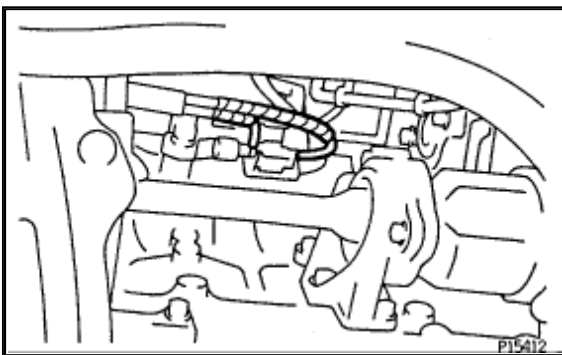


Zoom

Sized for Print

 - (c) Connect the 2 vacuum hoses to the VSV for the EGR.




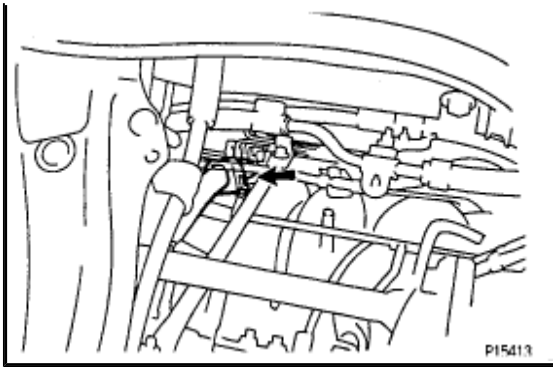

Zoom

Sized for Print

- (d) Install the hose clamp to the bracket on the air tube.
- (e) Connect the Evaporative Emission (**EVAP**) hose to the charcoal canister.

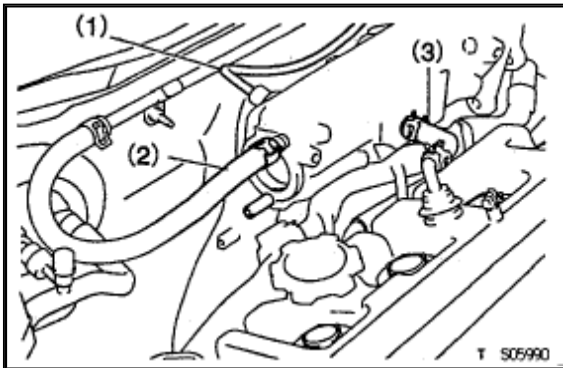

Zoom

Sized for Print


30. Install hoses. Connect these hoses:

- (1) Manifold Absolute Pressure (**MAP**) sensor vacuum hose to gas filter on [intake manifold](#).
- (2) Brake booster vacuum hose to [intake manifold](#).
- (3) PCV hose.

31. Install throttle body. Refer to Powertrain Management.


32. Install water bypass pipe.



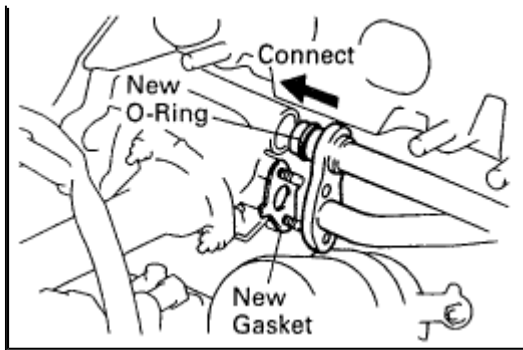

[Zoom](#) [Sized for Print](#)

- (a) Install a new gasket to the [water pump](#) cover.
- (b) Install a new O-ring to the bypass pipe.
- (c) Apply soapy water on the O-ring.
- (d) Connect the water bypass pipe to the [water pump](#) cover.

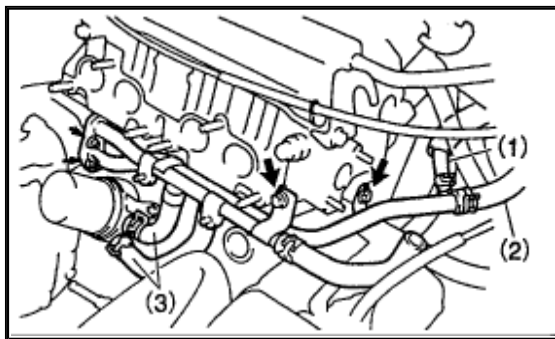

[Zoom](#) [Sized for Print](#)

- (e) Install the bypass pipe with the 2 nuts and 2 bolts.
Torque:

Nut: **9.3 Nm (82 inch lbs.)**

Bolt: **19 Nm (14 ft. lbs.)**


- (f) Connect these hoses:

- Idle Air Control (**IAC**) valve water bypass hose to water bypass pipe.
- Heater water hose to water bypass pipe.
- 2 [oil cooler](#) water bypass hoses to oil cooler.

(g) Install the [oil cooler](#) heat protector with the 2 nuts and bolt.

33. Install water outlet.

(a) Install a new gasket and the water outlet with the 2 nuts.
Torque: **15 Nm (11 ft. lbs.)**

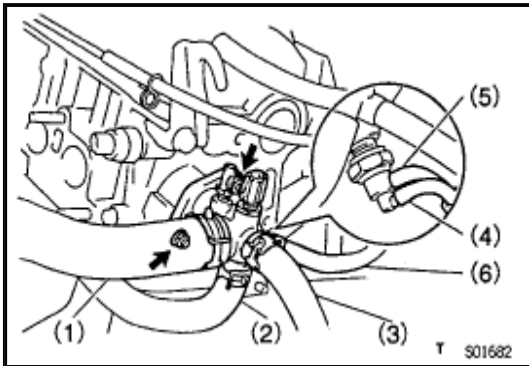

Zoom

Sized for Print

(b) Connect these hoses to the water outlet:

- (1) [Radiator hose](#).
- (2) Water bypass pipe hose.
- (3) Heater water hose.
- (4) Vacuum hose (from P port of throttle body) to upper port of Thermal Vacuum Valve (**TVV**) for EVAP.
- (5) Vacuum hose (from charcoal canister) to lower port of TVV for EVAP.
- (6) IAC valve water bypass hose.


(c) Connect these connectors:

- Engine Coolant Temperature ([ECT](#)) sensor connector.
- [ECT](#) sender gauge connector.


34. Connect oil pressure switch connector.


35. Assemble [exhaust manifold](#) and front Three-Way Catalytic Converter ([TWC](#)) .



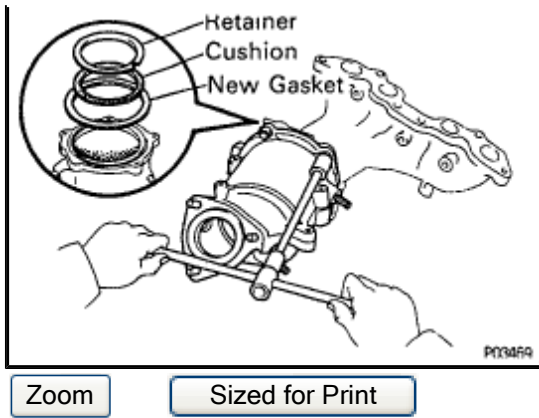

 - (a) Place the cushion, retainer and a new gasket on the [TWC](#).
- (b) Install the [TWC](#) to the [exhaust manifold](#) with the 3 bolts and 2 new nuts.
Torque: **29 Nm (22 ft. lbs.)**
- (c) Install the lower manifold heat insulator with the 5 bolts.
- (d) Install the 2 [TWC](#) heat insulators with the 8 bolts.




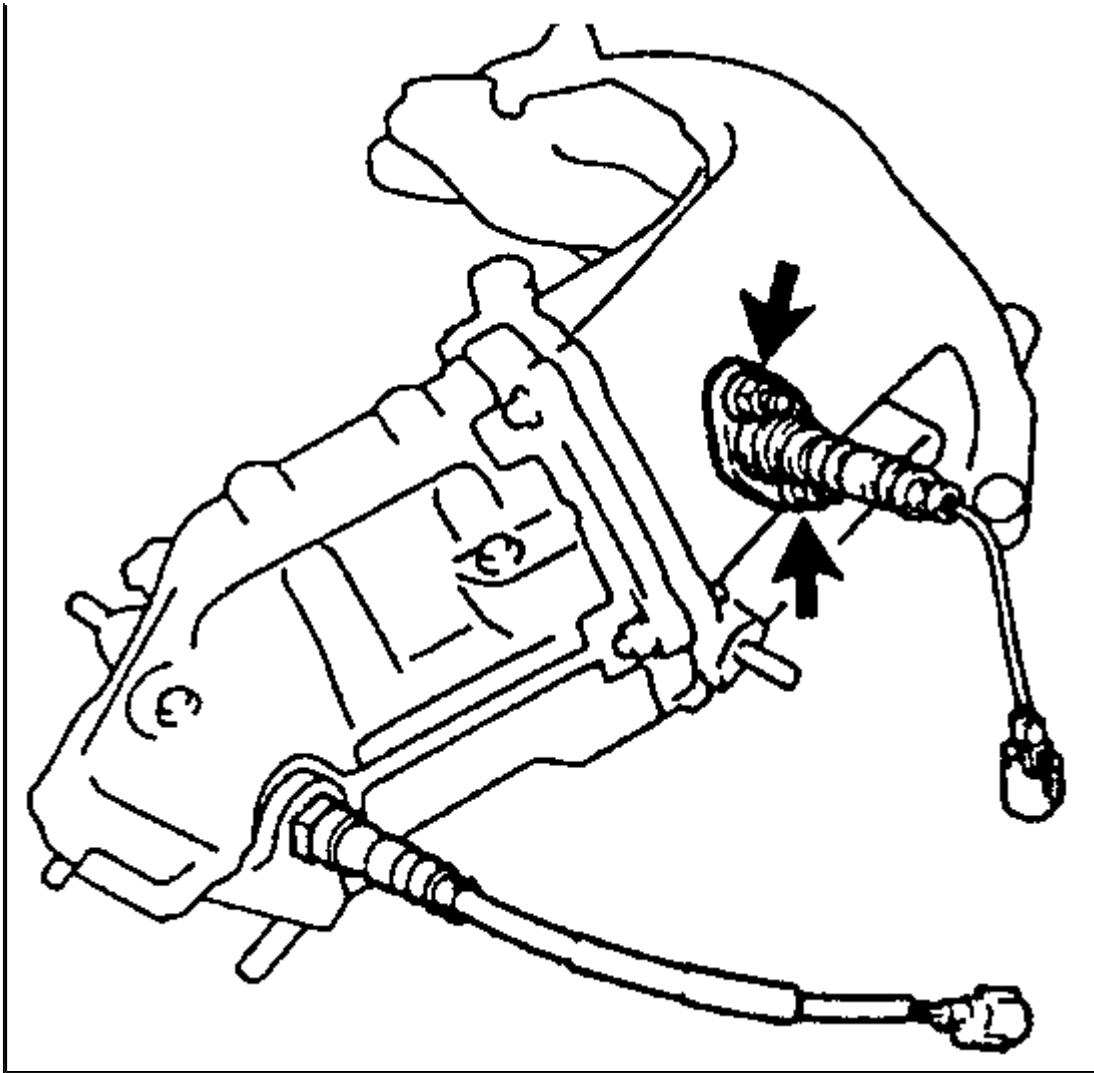

Zoom


Sized for Print

- 36. Install oxygen sensor (bank 1 sensor 1) to [exhaust manifold](#). Install a new gasket and the oxygen sensor with 2 new nuts. Torque: **20 Nm (14 ft. lbs.)**
- 37. Install oxygen sensor (bank 1 sensor 2) to front [TWC](#). Torque: **44 Nm (33 ft. lbs.)**
- 38. Install [exhaust manifold](#) and front [TWC](#) assembly.

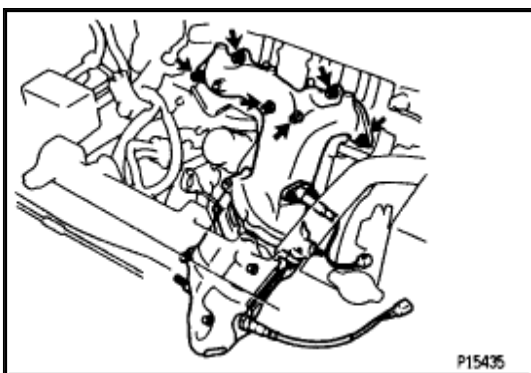


[Zoom](#)[Sized for Print](#)

- (a) Install a new gasket, the [exhaust manifold](#) and [TWC](#) assembly with the 6 nuts. Uniformly tighten the nuts in several passes.
Torque: **49 Nm (36 ft. lbs.)**

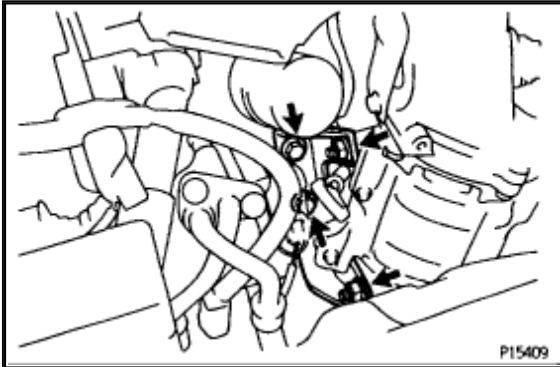[Zoom](#)[Sized for Print](#)

- (b) Install the RH exhaust manifold stay with the 2 bolts and 2 nuts.
Torque: **42 Nm (31 ft. lbs.)**
- (c) Install the upper manifold heat insulator with the 5 bolts.

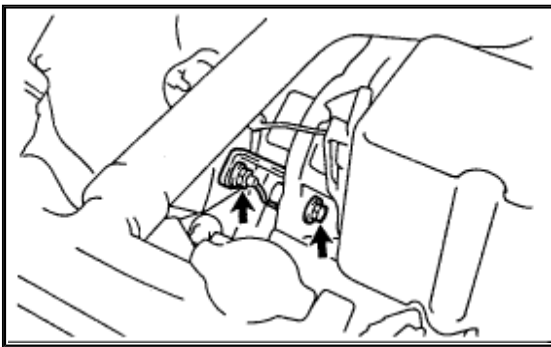[Zoom](#)[Sized for Print](#)

- (d) Install the LH exhaust manifold stay with the bolt and nut.
Torque:

Bolt: **39 Nm (29 ft. lbs.)**

Nut: **42 Nm (31 ft. lbs.)**

(e) Connect these connectors:

- Oxygen sensor (bank 1 sensor 1) connector.
- Oxygen sensor (bank 1 sensor 2) connector.

39. Install front [exhaust pipe](#).
40. Install generator.
41. Install distributor.
42. Install air cleaner case and cap.
43. Fill with engine coolant.
44. Start engine and check for leaks.
45. Recheck engine coolant level and oil level.