

[Home](#) | [Account](#) | [Contact ALLDATA](#) | [Log Out](#) | [Help](#)

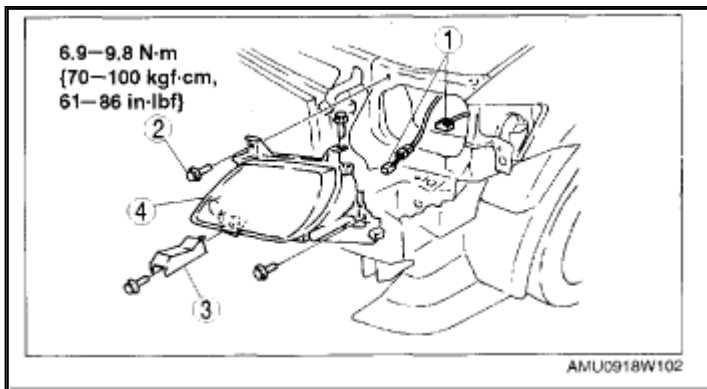
PAUL REDEHOFT

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#) | Component Search:

OK

[Conversion Calculator](#)**2002 Mazda Truck MPV V6-3.0L DOHC**[Vehicle Level](#) → [Lighting and Horns](#) → [Headlamp](#) → [Service and Repair](#) → [Headlight](#) ←**Headlight**[Notes](#)**HEADLIGHT REMOVAL/INSTALLATION**

1. Disconnect the negative battery cable.
2. Remove the front combination light.
3. Remove the front bumper.

[Zoom](#)[Sized for Print](#)

4. Remove in the order indicated below.

1. Connector
2. Bolt
3. Bracket
4. Headlight
5. Install in the reverse order of removal.
6. Adjust the headlight aiming.