


2004 Hyundai Accent L4-1.6L

Vehicle Level → Lighting and Horns → Headlamp → Service and Repair ←


Service and Repair[Notes](#)**REMOVAL AND INSTALLATION**

1. Disconnect the negative(-) battery terminal.

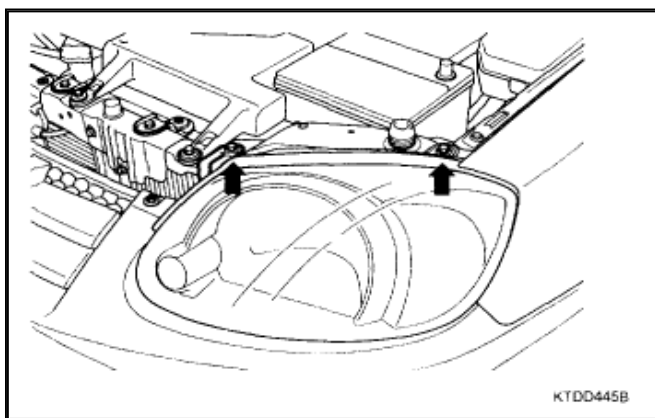

Zoom

Sized for Print

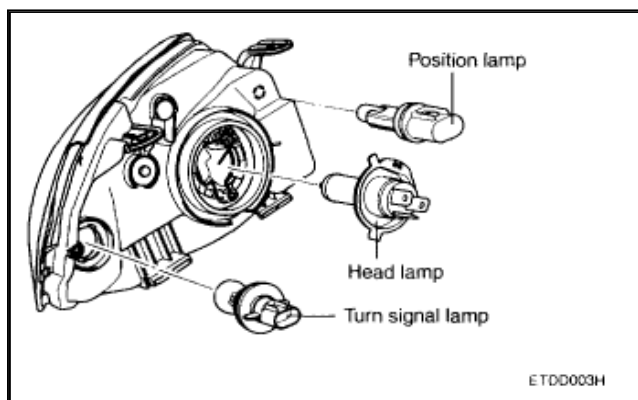

Zoom

Sized for Print

2. Remove the head lamp mounting bolts (2EA), then disconnect the lamp connectors.
3. Installation is the reverse of removal.