


2008 Ford Truck Escape 2WD V6-3.0L

Vehicle Level → Heating and Air Conditioning → Blower Motor Resistor → Service and Repair ←

Service and Repair

[Notes](#)

BLOWER MOTOR RESISTOR

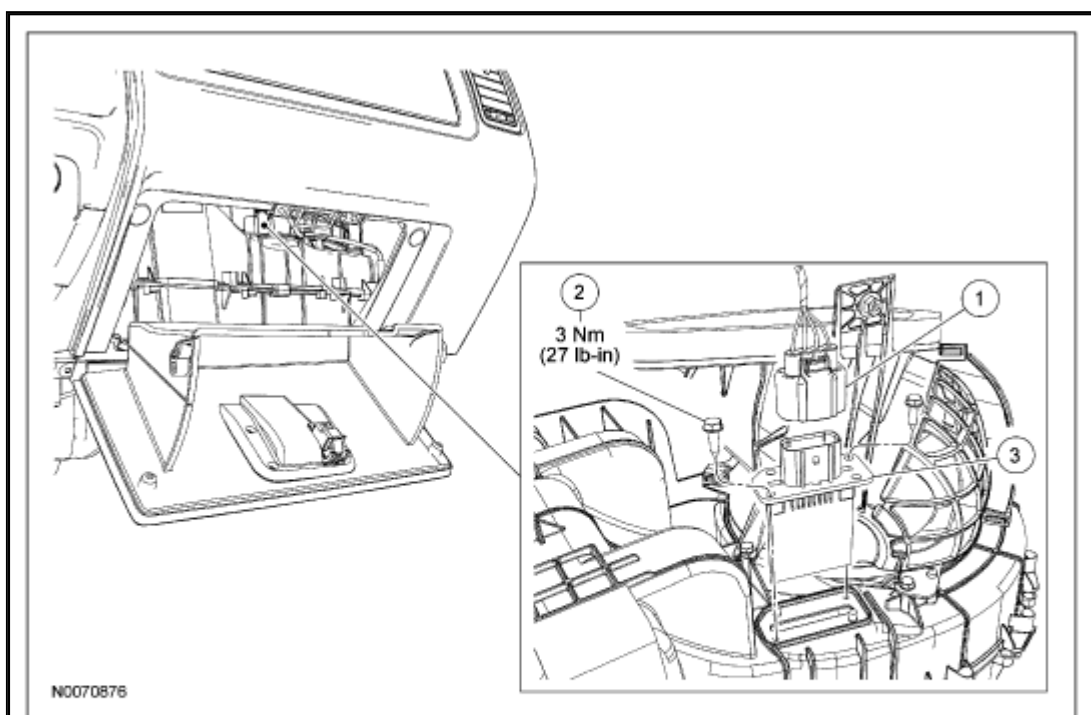

Item	Part Number	Description
1	—	Blower motor resistor electrical connector (part of 19D887)
2	W701696	Blower motor resistor screw (2 required)
3	18591	Blower motor resistor

Removal and Installation

1. Lower the glove compartment.
2. Disconnect the blower motor resistor electrical connector.
3. Remove the 2 blower motor resistor screws.

- To install, tighten to **3 Nm (27 lb-in)** .
4. Remove the blower motor resistor.
 5. To install, reverse the removal procedure.

© 2010 ALLDATA LLC. All rights reserved.
[Terms of Use](#)