

[Home](#) | [Account](#) | [Contact ALLDATA](#) | [Log Out](#) | [Help](#)

PAUL REDEHOFT

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)


Component Search:

OK

Conversion Calculator

2001 Ford Taurus V6-3.0L VIN U[Vehicle Level](#) → [Body and Frame](#) → [Doors, Hood and Trunk](#) → [Front Door Panel](#) → [Service and Repair](#) ←**Service and Repair**[Notes](#)**FRONT DOOR** [TRIM PANEL](#)**Removal and Installation**

1. Disconnect the battery ground cable.

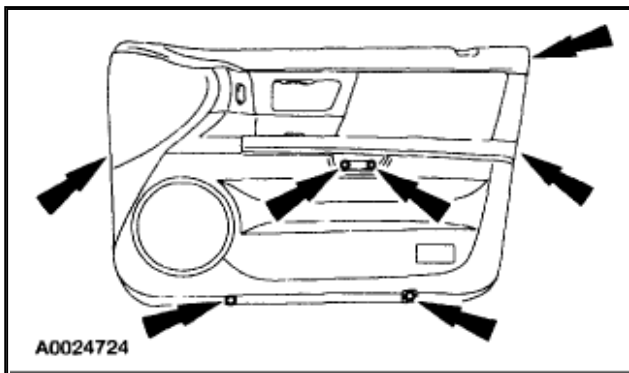

Zoom

Sized for Print

2. Remove the front door [trim panel](#) screws.
3. **NOTE:**

- The front door [trim panel](#) has five two-part pin-type retainers. The male part of the trim retainer will remain with the trim panel and the female part will remain with the door.
- To release the door [trim panel](#) pin-type retainers, first pull outward on the bottom of the door trim panel.

Remove the front door [trim panel](#).

- Disconnect the electrical connectors.
4. To install, reverse the removal procedure.

[Terms of Use](#)