

[Home](#) | [Account](#) | [Contact ALLDATA](#) | [Log Out](#) | [Help](#)

PAUL REDEHOFT

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#) Component Search:

OK


[Conversion Calculator](#)**1998 Dodge Intrepid V6-3.2L VIN J**[Vehicle Level](#) → [Wiper and Washer Systems](#) → [Windshield Washer Pump](#) → [Service and Repair](#) ←

Service and Repair


[Notes](#)


The content of this article reflects the changes called out by TSB 26-03-99.

REMOVAL

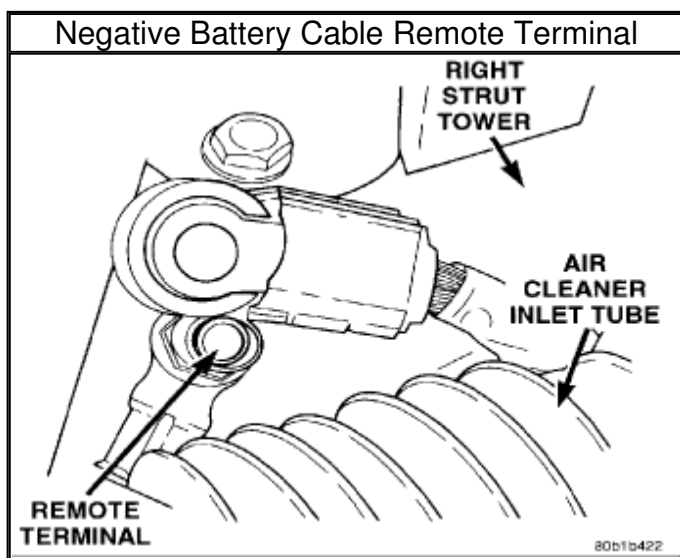[Zoom](#)[Sized for Print](#)

1. Open hood and disconnect the negative battery cable remote terminal from the remote battery post.
2. Hoist vehicle.
3. Disconnect the washer hose from pump and drain washer solvent into container.
4. Disconnect the wire connectors from the reservoir pump.

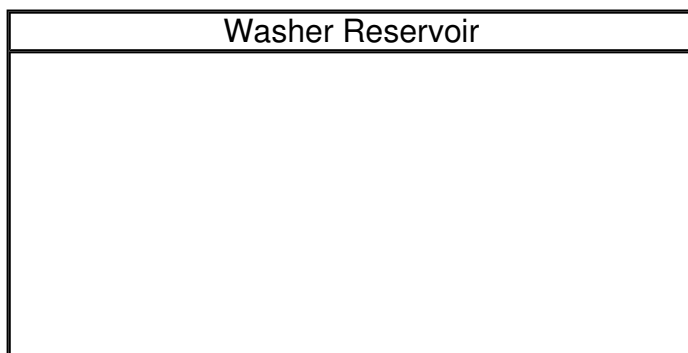

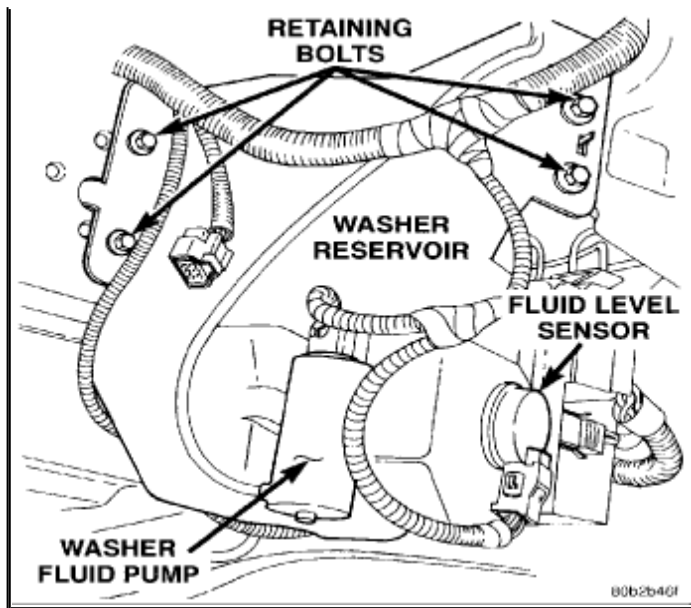

Zoom

Sized for Print

5. Gently pry pump away from reservoir and out of grommet. Care must be taken not to puncture reservoir.
6. Remove rubber grommet from reservoir and throw away.

INSTALLATION

For installation, reverse the above procedures. Use new rubber grommet with new pump. Assure pump is fully seated into reservoir.

NOTE: Replace/refill washer fluid after reservoir pump replacement.