

**2005 Ford Truck Expedition 2WD V8-5.4L SOHC VIN 5**


Vehicle Level → Heating and Air Conditioning → Blower Motor Resistor → Service and Repair ←

**Service and Repair**

[Notes](#)

**BLOWER MOTOR RESISTOR**


**Removal and Installation**

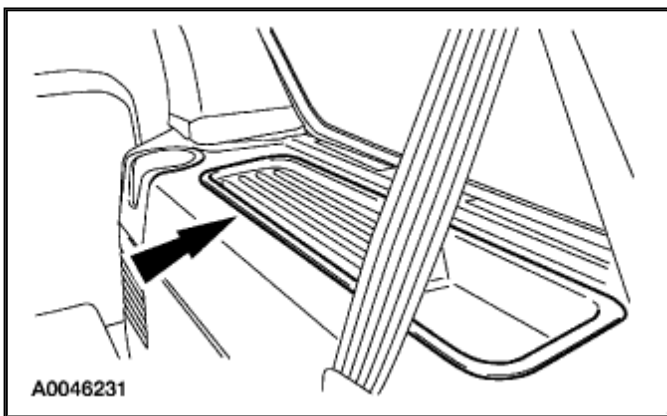

Zoom

Sized for Print

1. Remove the RH quarter trim panel access panel.

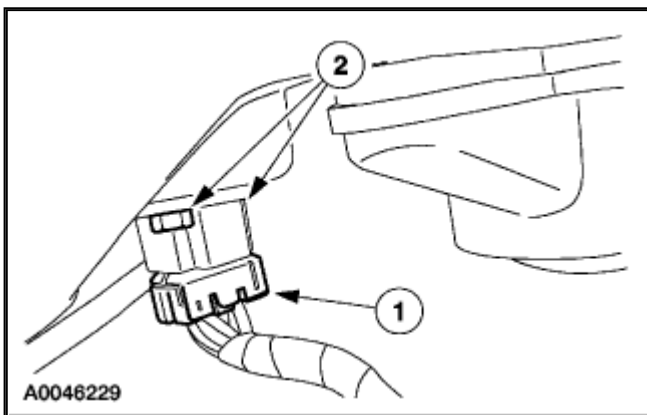

Zoom

Sized for Print

2. Remove the blower motor resistor.

- 1 Disconnect the blower motor resistor electrical connector.
- 2 Remove the screws and the blower motor resistor.
  
3. To install, reverse the removal procedure.

© 2010 ALLDATA LLC. All rights reserved.

[Terms of Use](#)