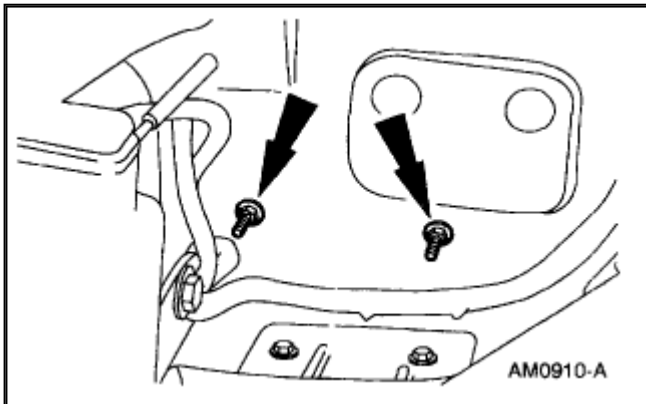
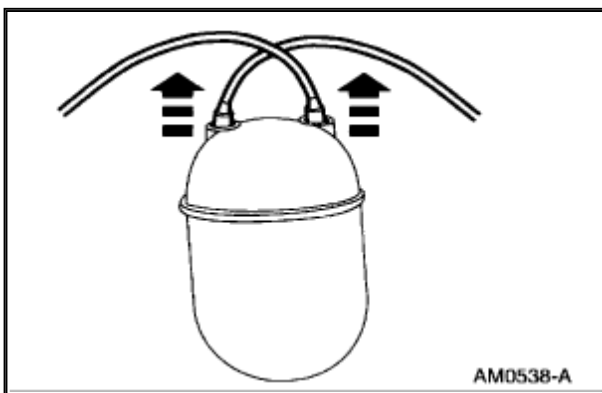


2003 Ford Truck Ranger 2WD V6-3.0L VIN U[Vehicle Level](#) → [Heating and Air Conditioning](#) → [Vacuum Reservoir HVAC](#) → [Service and Repair](#) ↗**Service and Repair**[Notes](#)**REMOVAL**

1. Remove the engine Air Cleaner (**ACL**) .
2. Remove the RH front fender splash shield.

[Zoom](#)[Sized for Print](#)

3. Remove the nuts and remove the A/C vacuum reservoir tank and bracket.

[Zoom](#)[Sized for Print](#)

4. Disconnect the vacuum supply and outlet hoses.

INSTALLATION

1. To install, reverse the removal procedure.

© 2010 ALLDATA LLC. All rights reserved.
[Terms of Use](#)