

[Home](#) | [Account](#) | [Contact ALLDATA](#) | [Log Out](#) | [Help](#)

PAUL REDEHOFT


[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#) | Component Search:

OK

Conversion Calculator

2002 Honda Accord EX Sedan V6-3.0L[Vehicle Level](#) → [Transmission and Drivetrain](#) → [Automatic Transmission/Transaxle](#) → [Fluid - A/T](#) → [Service and Repair](#) → [ATF Level Check](#) ←**ATF Level Check**[Notes](#)**ATF Level Check****NOTE:** Keep all foreign particles out of the transmission.

1. Warm up the engine to normal operating temperature (the radiator fan comes on).
2. Park the vehicle on the level ground. Turn off the engine.

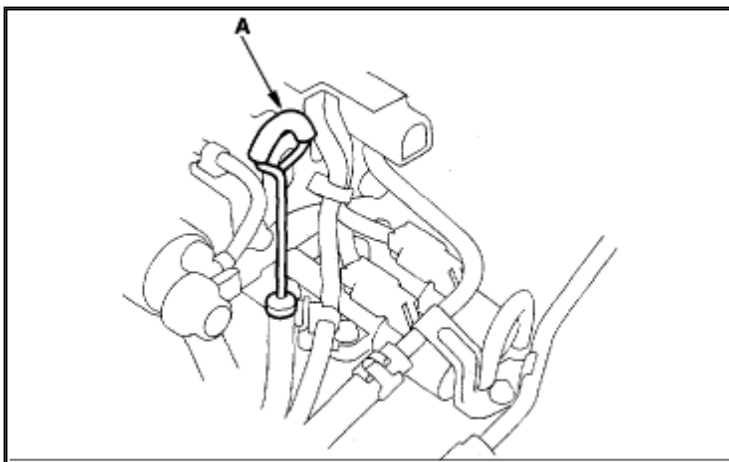


Zoom

Sized for Print

3. Remove the dipstick (yellow loop) (A) from the transmission and wipe it with a clean cloth.
4. Insert the dipstick into the transmission.




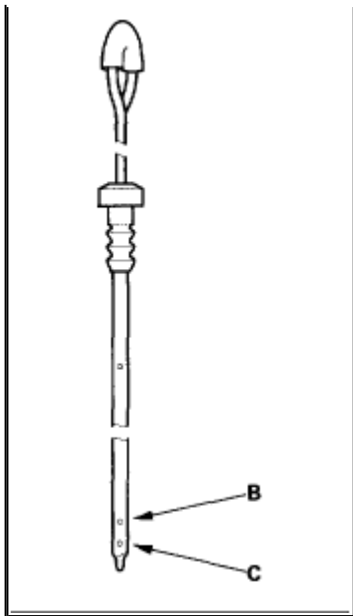

Zoom

Sized for Print

- Remove the dipstick and check the fluid level. It should be between the upper mark (B) and lower mark (C).

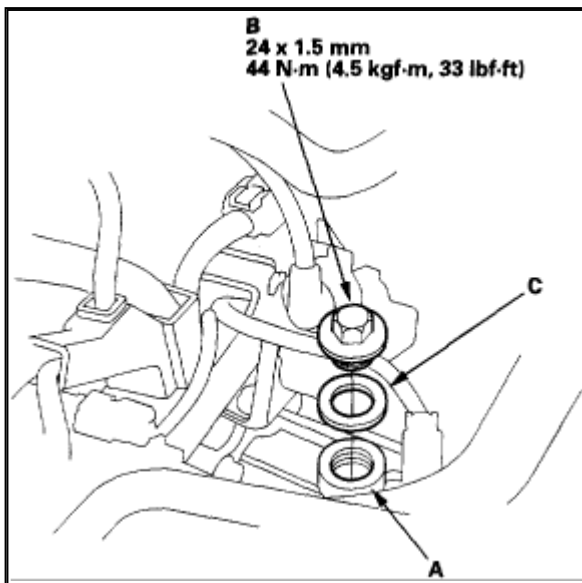

Zoom

Sized for Print

- If the level is below the lower mark, pour the recommended fluid into the filler hole (A) to bring it to the upper mark. Always use Honda ATF-Z1 Automatic Transmission Fluid (**ATF**). Using a non-Honda ATF can affect shift quality.
- Install the ATF filler bolt (B) with a new sealing washer (C).
- Insert the dipstick back into the transmission.

© 2010 ALLDATA LLC. All rights reserved.
[Terms of Use](#)