

**2002 Honda Civic DX Sedan L4-1668cc 1.7L SOHC MFI**

[Vehicle Level](#) → [Body and Frame](#) → [Interior Moulding / Trim](#) → [Trim Panel](#) → [Service and Repair](#) → [Trim Removal/Installation - Seat Side and Rear Shelf Area](#) ←

**Trim Removal/Installation - Seat Side and Rear Shelf Area**

[Notes](#)

**Trim Removal/Installation - Seat Side and [Rear Shelf](#) Area**

**Special Tools Required**


KTC trim tool set SOJATP2014

**2-door**

**NOTE:**

- Put on gloves to protect your hands.
  - Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.
  - Take care not to bend or scratch the trim and panels.
1. Remove the trim as shown. To remove the side trim panel, remove the rear seat-back and rear seat cushion.



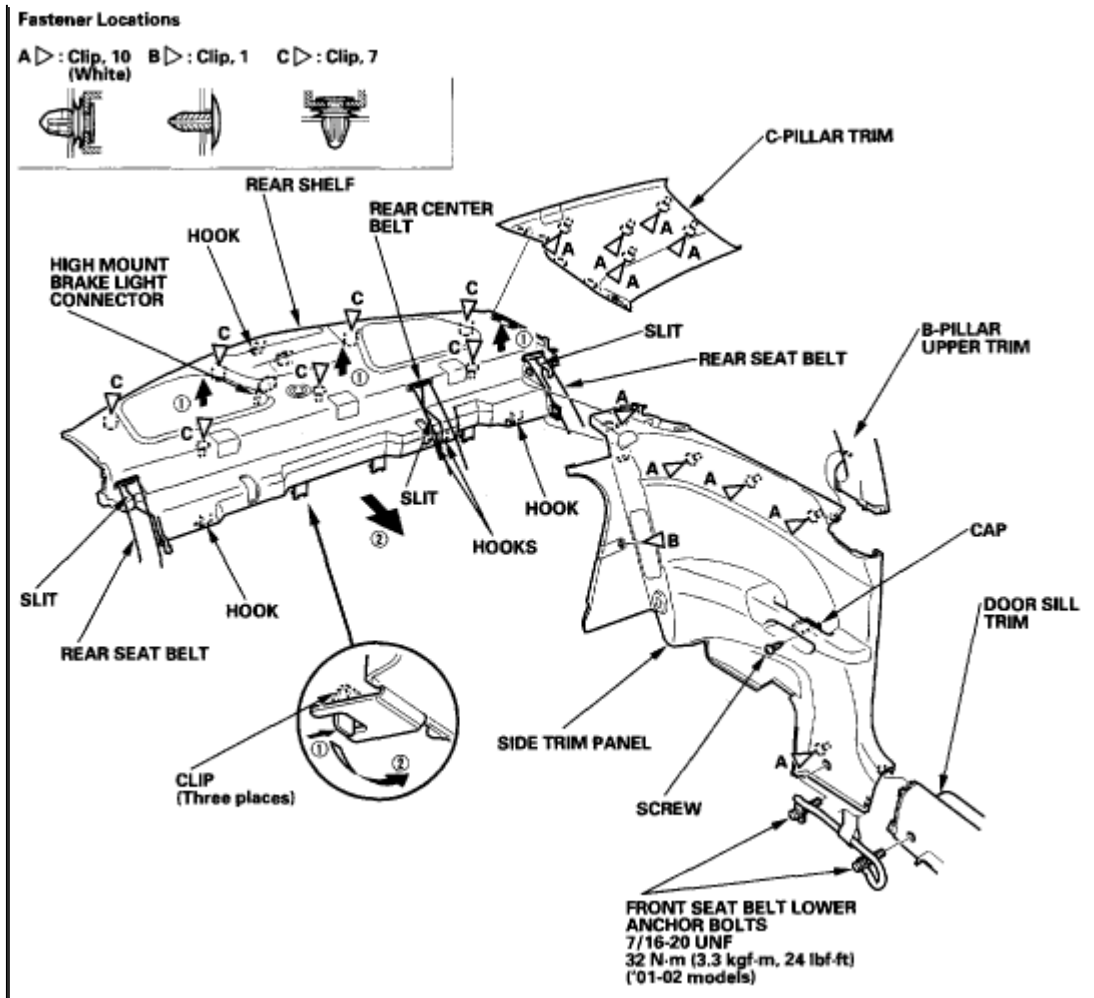

Zoom

Sized for Print

2. Install the parts in the reverse order of removal, and note these items:
- Before installing the [rear shelf](#), remove the clips from the body, and install them to the rear shelf.
  - Replace any damaged clips.
  - When installing the [rear shelf](#), slip the rear seat belts and center belt through the slits in the rear shelf.
  - Make sure the high mount brake light connector is plugged in properly.
  - Apply liquid thread lock to the anchor bolts before installation.