


1991 Subaru Loyale Sedan (4 Door) 2WD F4-1781cc 1.8L SOHC

Vehicle Level → Engine, Cooling and Exhaust → Engine → Timing Belt → Service and Repair ←

Service and Repair

[Notes](#)

Camshaft And Timing Belt

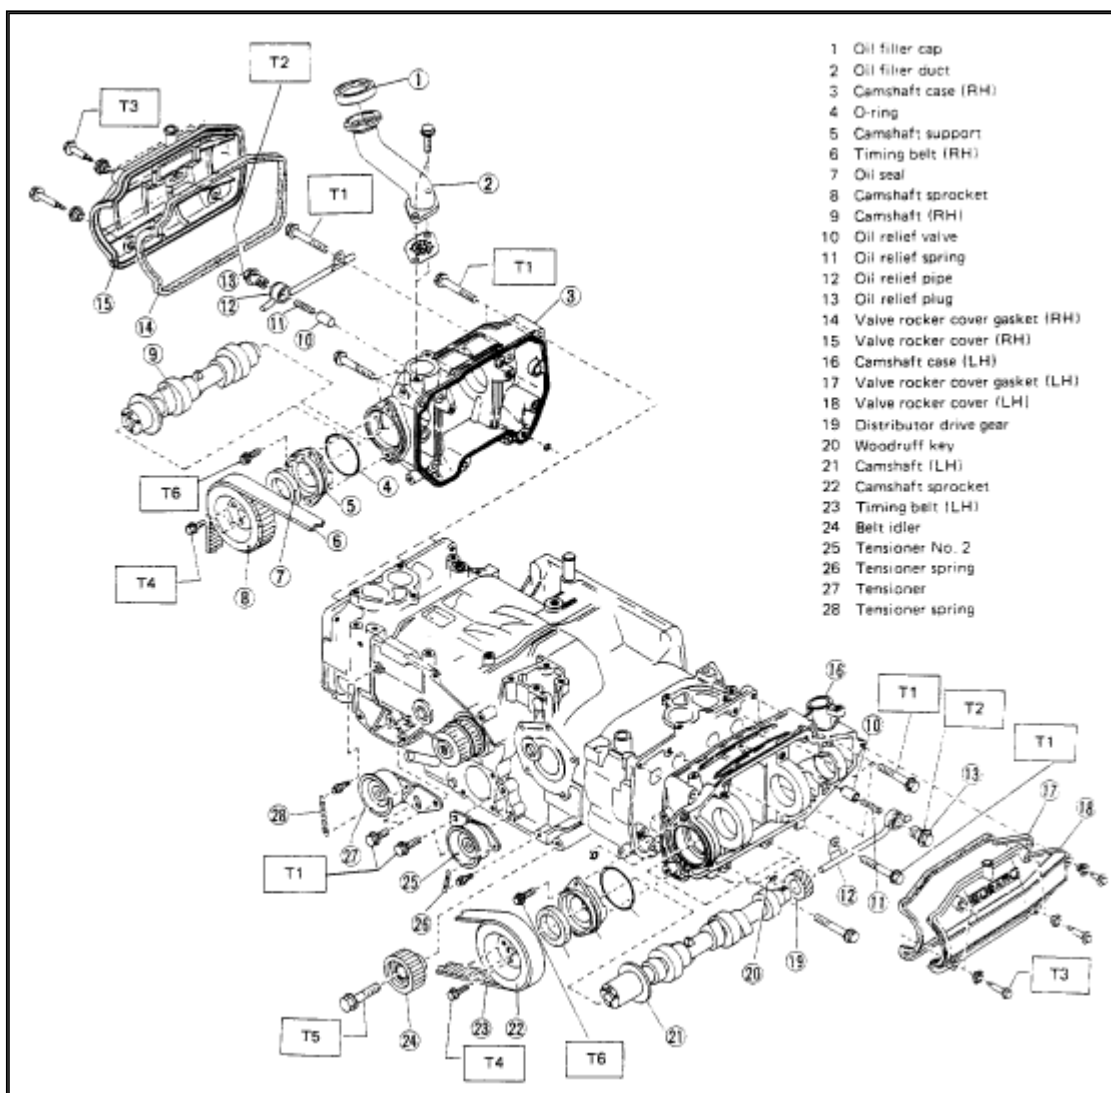

Zoom

Sized for Print

Tightening torque:

T1: 17.2 - 20.1 N-m (1.75 - 2.05 kg-m, 12.7 - 14.8 ft-lb).

T2: 23 - 26 N-m (2.3 - 2.7 kg-m, 17 - 20 ft-lb).


T3: 4.4 - 5.4 N-m (0.45 - 0.55 kg-m, 3.3 - 4.0 ft-lb).

T4: 9.1 - 10.5 N-m (0.93 - 1.07 kg-m, 6.7 - 7.7 ft-lb).

T5: 39 - 47 N-m (4.0 - 4.8 kg-m , 29 - 35 ft-lb).

T6: 6 - 7 N-m (0.6 - 0.7 kg-m , 4.3 - 5.1 ft-lb).

Belt Cover

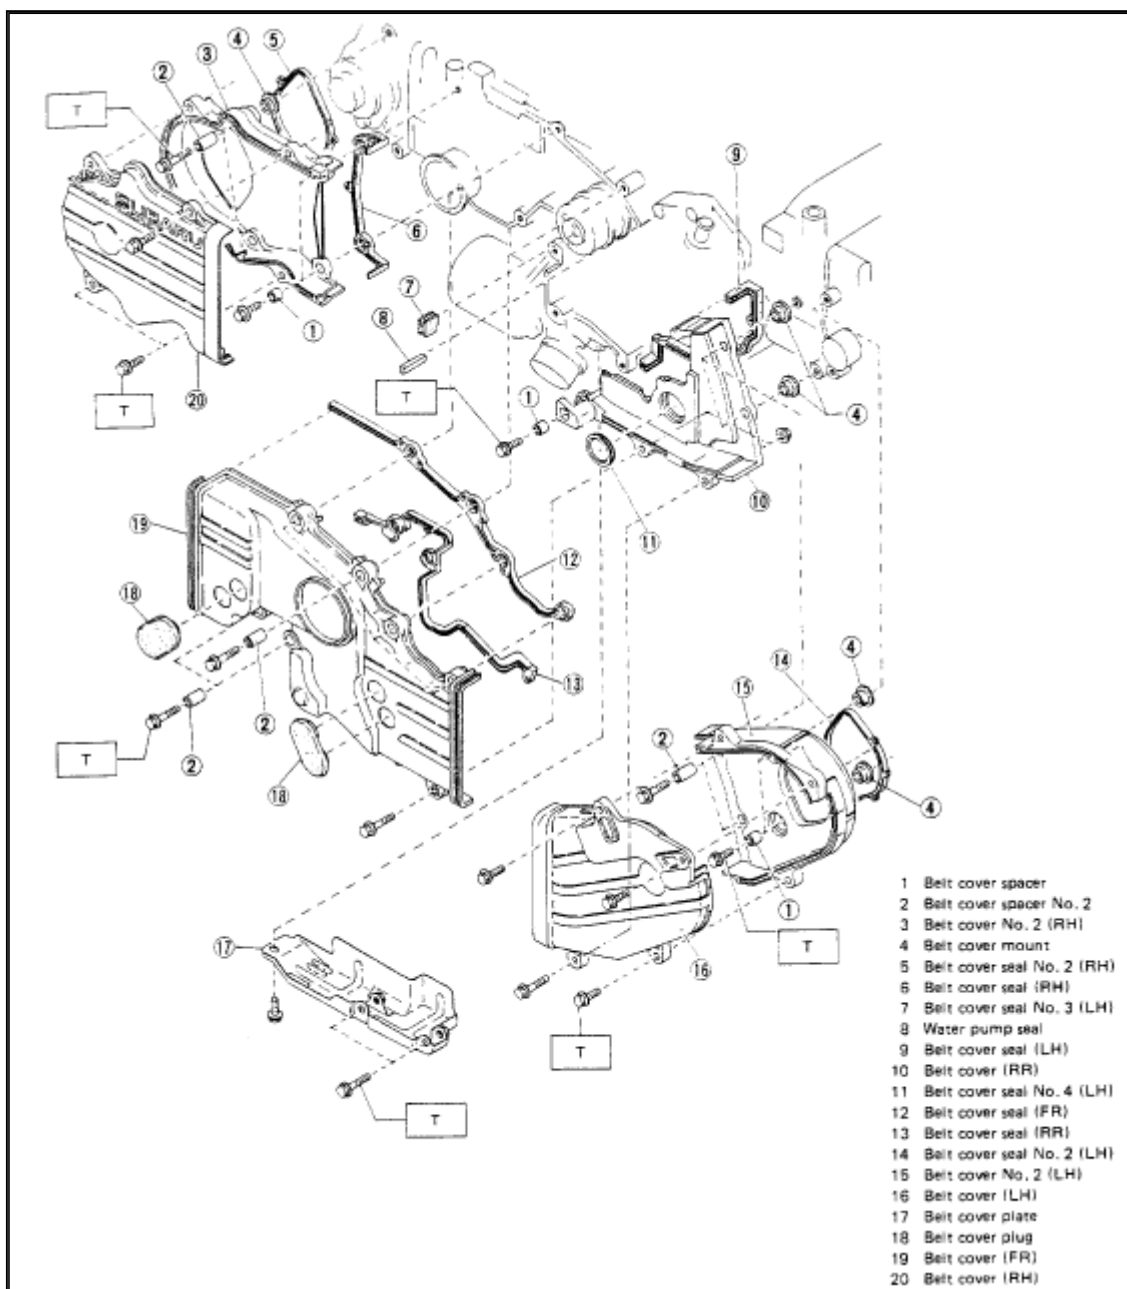



[Zoom](#)
[Sized for Print](#)

Tightening torque:

T: 4.4 - 5.4 N-m (0.45- 0.55 kg-m, 3.3 - 4.0 ft-lb).

REMOVAL


1. Loosen water pump pulley mounting nuts or bolts.
2. Loosen two alternator mounting bolts, and detach V-belt. [Except air conditioner equipped model]
3. Remove water pump pulley and pulley cover.
4. Disconnect lead from oil pressure switch.
5. Remove oil level gauge guide together with gauge.

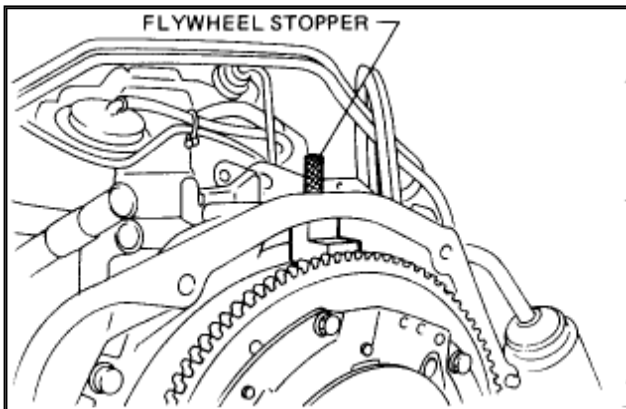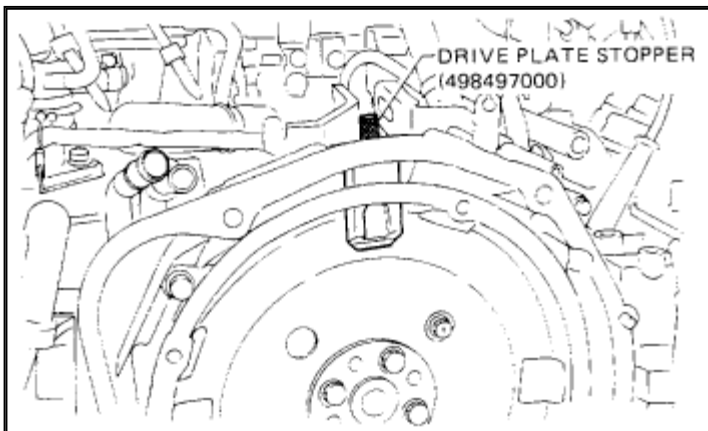
[Zoom](#)
[Sized for Print](#)

[Zoom](#)
[Sized for Print](#)

6. Remove crankshaft pulley. To lock crankshaft, use FLYWHEEL STOPPER

[manual transmission model] or DRIVE PLATE STOPPER [automatic transmission model].

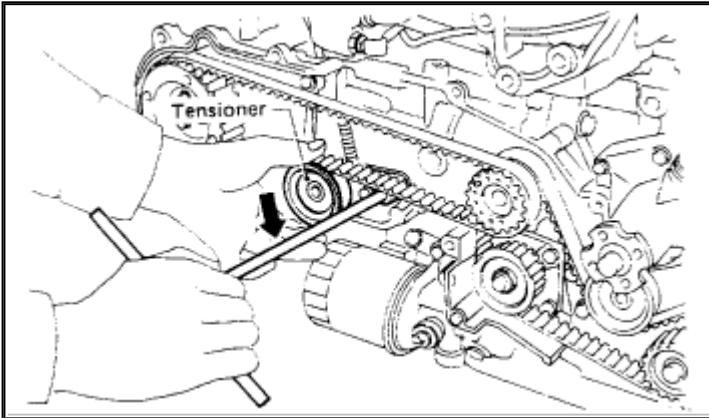7. Remove belt cover plate. [TURBO model]
8. Remove belt covers LH, RH and FR.




Zoom

Sized for Print

9. Removing timing belt

- (a) Loosen tensioner mounting bolts on # 1 cylinder by 1/2 turn.
- (b) With tensioner fully turned to slacken belt, tighten mounting bolts.
- (c) Mark rotating direction of timing belt, then remove belt.
- (d) Loosen tensioner No. 2 mounting bolts on # 2 cylinder by 1/2 turn.
- (e) With tensioner fully rotated to slacken belt by using TENSIONER WRENCH, tighten tensioner mounting bolts.


NOTE: Cover TENSIONER WRENCH clamping tips with a rubber hose or waste cloth to prevent crankshaft or pulley from being damaged.

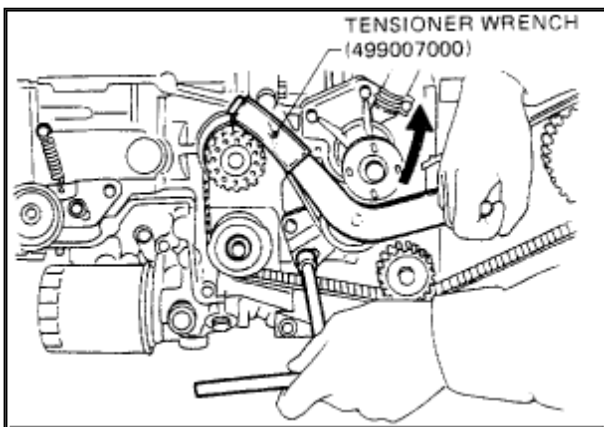

Zoom

Sized for Print

- (f) Remove crankshaft sprocket.
 - (g) Remove timing belt after marking rotating direction of belt.
 - (h) Remove crankshaft sprocket No. 2.
10. Remove tensioner and tensioner No. 2 together with tensioner spring.
 11. Remove belt idler.

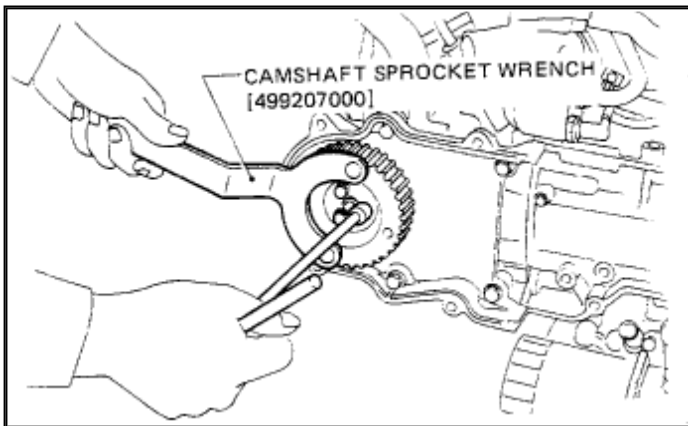

Zoom

Sized for Print

12. Remove camshaft sprockets by using CAMSHAFT SPROCKET WRENCH.
13. Remove right-hand belt cover No. 2, left-hand belt cover No. 2 and belt cover RR.


TIMING BELT

1. Check timing belt teeth for breaks, cracks, and wear. If any fault is found, replace belt.
2. Check the condition of back side of belt; if any crack is found, replace belt.

NOTE:

- A. Be careful not to let oil, grease or coolant contact the belt. Remove quickly and thoroughly if this happens.




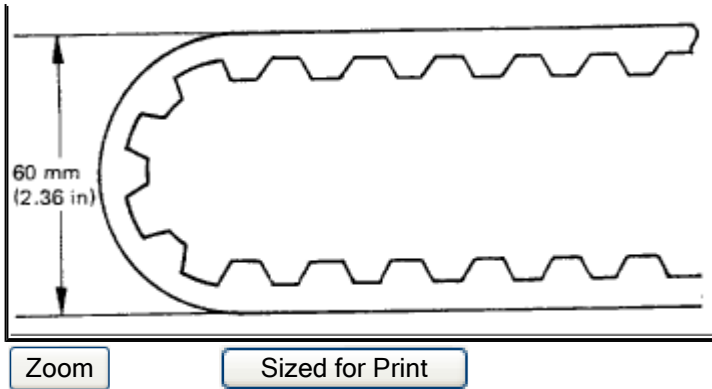

- B. Do not bend the belt sharply. The bending radius must be greater than **60 mm (2.36 in)**.
- C. When replacing belt, be sure to replace both belts as a matched set.

TIMING BELT TENSIONER

1. Check tensioner roller for smooth rotation. Replace roller if noise or excessive play is noted.

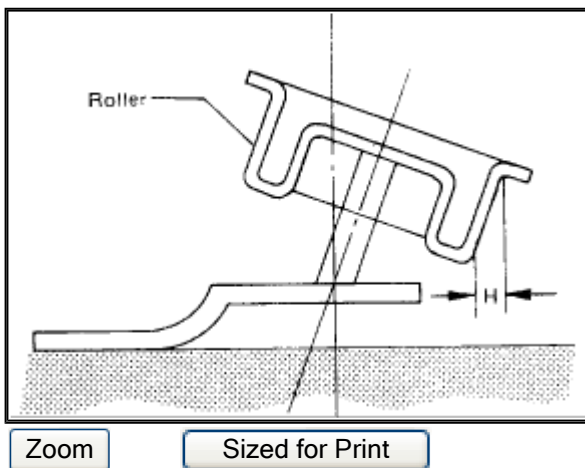

2. Measure the out-of-squareness of tensioner roller **H**. If it exceeds **0.5 mm (0.020 in)**, replace roller.


BELT IDLER

Check idler for smooth rotation. Replace if noise or excessive play is noted.

INSTALLATION

1. Install belt cover seal LH No. 3 to cylinder block.
2. Install belt cover LH seal, belt cover No.4 LH seal, and belt cover mount to belt cover RR, then install to cylinder block. Tightening torque: **4.4 - 5.4 N-m (0.45 - 0.55 kg-m, 3.3 - 4.0 ft-lb)**.

3. Install belt cover No. 2 LH seal and belt cover mounts to belt cover No. 2 LH, then install to cylinder head and camshaft case. Tightening torque: **4.4 - 5.4 N-m (0.45 - 0.55 kg-m, 3.3 - 4.0 ft-lb)**.
4. Install belt cover RH seal, belt cover No. 2 RH seal, and belt cover mounts to belt cover No. 2 RH, then install to cylinder head and camshaft case. Tightening torque: **4.4 - 5.4 N-m (0.45 - 0.55 kg-m, 3.3 - 4.0 ft-lb)**.

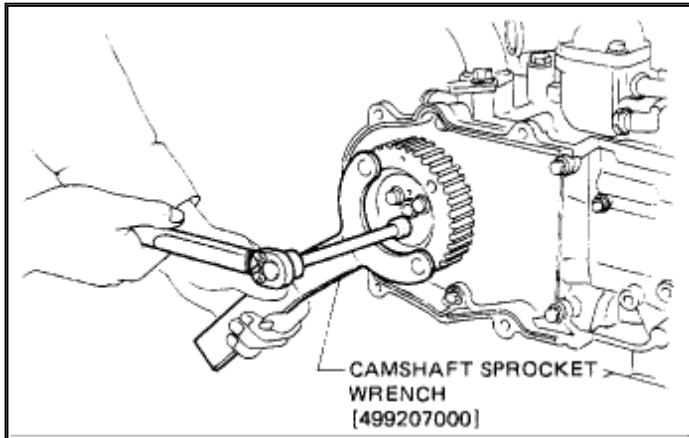

Zoom

Sized for Print

 
5. Install camshaft sprockets to right and left camshafts. To lock camshaft, use CAMSHAFT SPROCKET WRENCH.


NOTE: Tighten bolts gradually in two or three steps until the specified torque is attained.

Tightening torque:

9.1 - 10.5 N-m (0.93-1.07 kg-m, 6.7 - 7.7 ft-lb).

6. Installing tensioner
 - (a) Attach tensioner spring to tensioner, then install to cylinder block RH. Tighten bolts temporarily by hand.
 - (b) Attach tensioner spring to bolt, tighten bolt (A), and then loosen 1/2 turn.



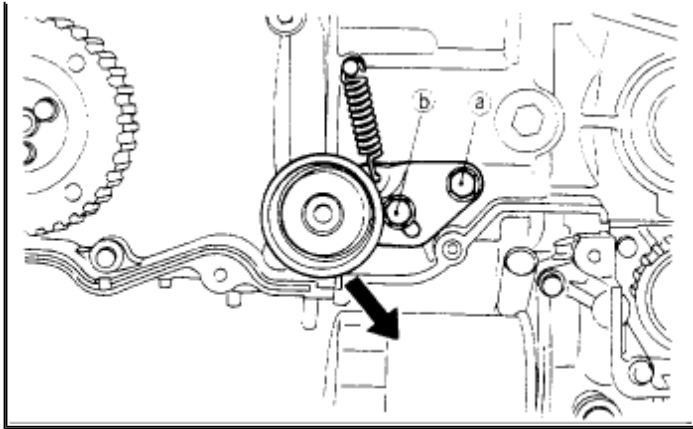

Zoom


Sized for Print

(c) Push down tensioner until it stops, then tighten temporarily bolt (B).

7. Installing tensioner No. 2

(a) Attach tensioner spring to tensioner No. 2, then install the tensioner No. 2 to cylinder block LH. Tighten bolts temporarily by hand.

(b) Attach tensioner spring to bolt, tighten bolt (C) then loosen 1/2 turn.

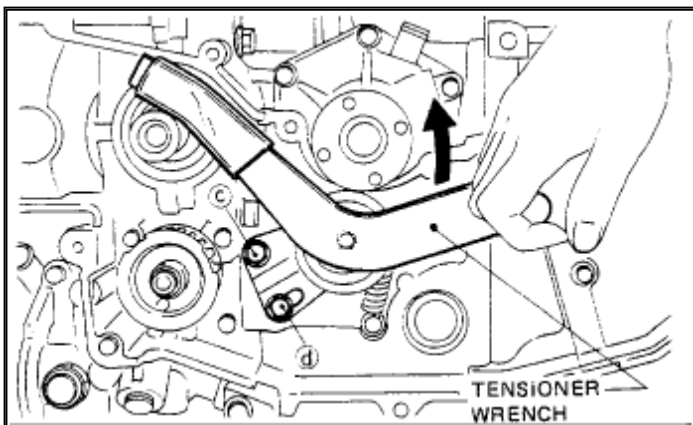


Zoom

Sized for Print

(c) Raise tensioner No. 2 using TENSIONER WRENCH (499007000) until it stops. then tighten bolt (D) temporarily.

NOTE: Cover the tip of tensioner wrench with a rubber hose or waste cloth to prevent crankshaft or pulley from being damaged.

8. Install belt idler to cylinder block, using care not to turn over seal. Tightening torque: **39 - 47 N-m (4.0 - 4.8 kg-m, 29 - 35 ft-lb)**.
9. Install timing belt.

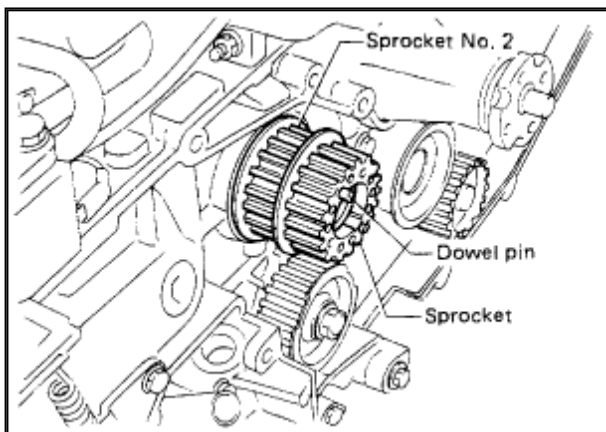


Zoom

Sized for Print

- (a) Install sprocket No. 2 and sprocket to crankshaft.

NOTE: Sprocket No. 2 can be identified by the absence of dowel pin.

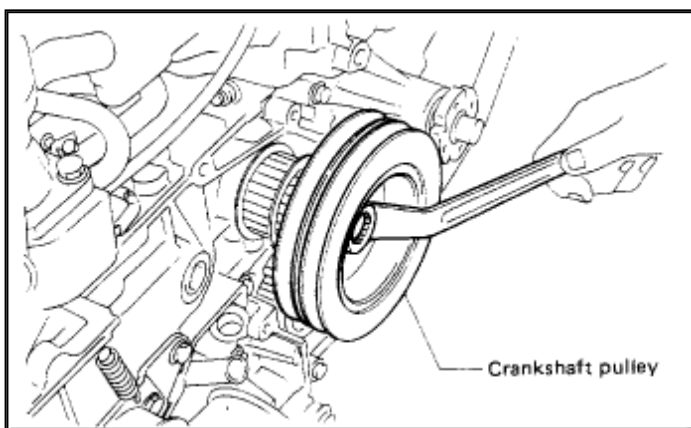


Zoom

Sized for Print

- (b) Install crankshaft pulley to crankshaft, and tighten bolt temporarily.




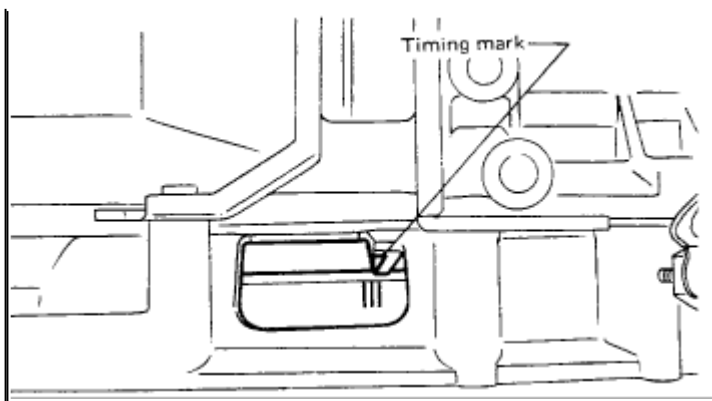

Zoom

Sized for Print

- (c) Align the center of three lines scribed on the flywheel with timing mark on flywheel housing.

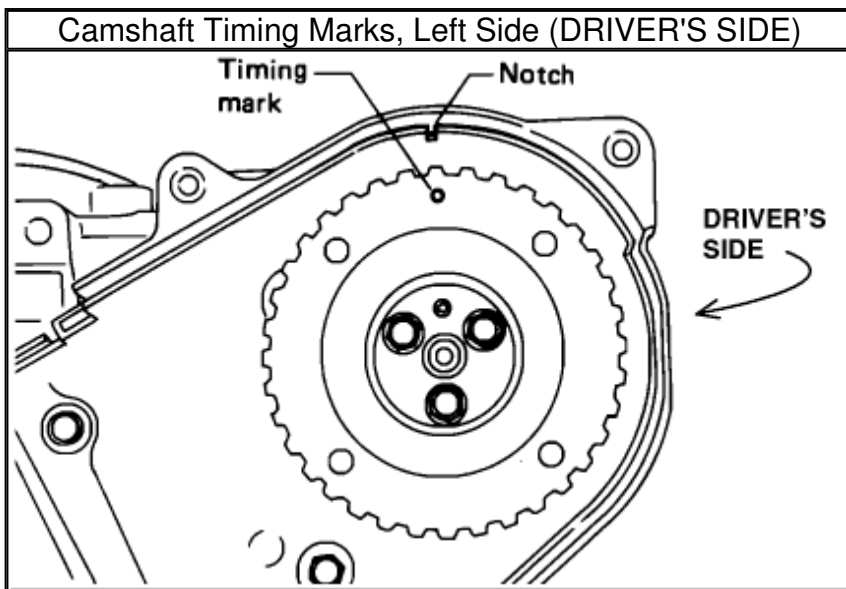


Zoom

Sized for Print

- (d) Align timing mark on camshaft sprocket LH with notch in belt cover.




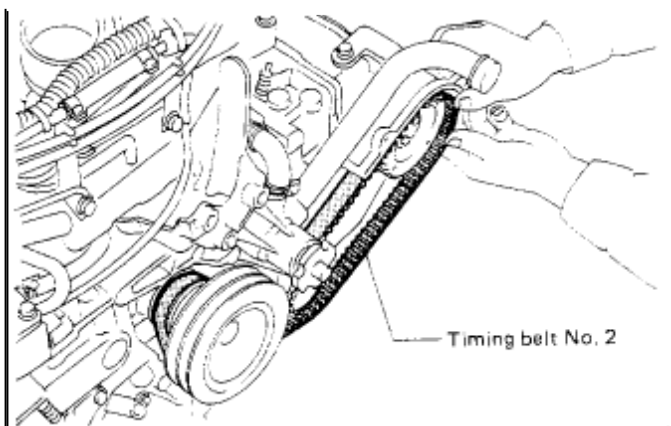

Zoom

Sized for Print

- (e) Attach timing belt No. 2 to crankshaft sprocket No. 2, oil pump sprocket, belt idler, camshaft sprocket, in that order, avoiding downward slackening of the belt.
- (6) Loosen tensioner No. 2 tightening bolt (D) by 1/2 turn to apply tension to belt.

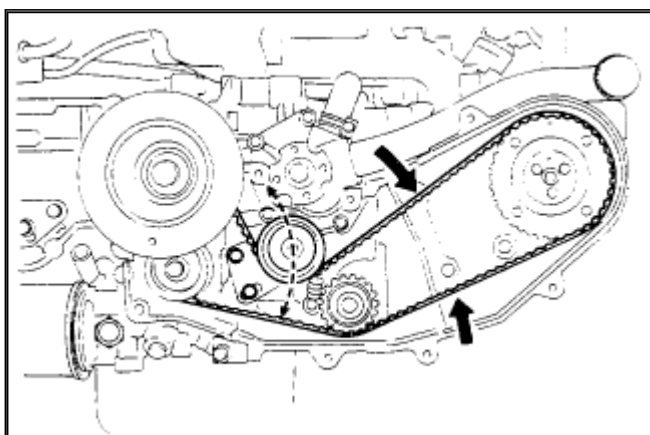


Zoom

Sized for Print

- (f) Push timing belt by hand to ensure smooth movement of tensioner.



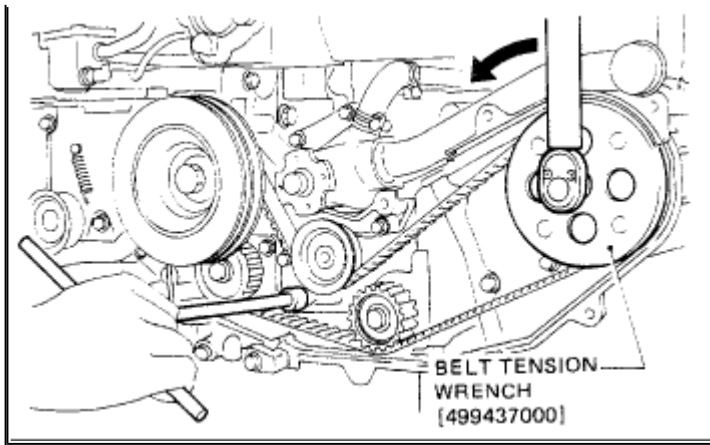

Zoom

Sized for Print

- (g) Apply the specified torque to camshaft sprocket in counterclockwise direction using BELT TENSION WRENCH. While applying torque, tighten tensioner No. 2 bolt (D) temporarily, then tighten bolt (C) temporarily.

NOTE: When torquing sprocket, be extremely careful not to apply excessive force to it. Excessive belt tension will greatly reduce belt life.


Belt Tension: **147 - 245 N-m (33 - 55 ft-lb).** .
Torque to cam sprocket: **24 - 25 N-m (18 ft-lb).**

- (h) Tighten bolt (D) and bolt (C) in that order, to the specified torque.
Tightening torque:

17.2 - 20.1 N-m (1.75 -2.05 kg-m, 12.7 - 14.8 ft-lb).

- (i) Ascertain that flywheel timing mark and camshaft sprocket LH timing mark are in their normal positions.
(j) Turn crankshaft one turn clockwise from the position where timing belt No. 2 was installed, and align the center of three lines scribed on the flywheel with timing mark on flywheel housing.




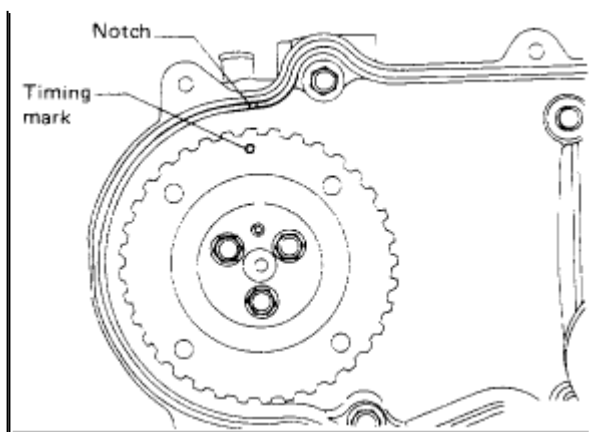

Zoom

Sized for Print


- (k) Align timing mark on camshaft sprocket RH with the notch in belt cover.
- (l) Attach timing belt to crankshaft sprocket and camshaft sprocket, avoiding slackening of belt on the upper side.

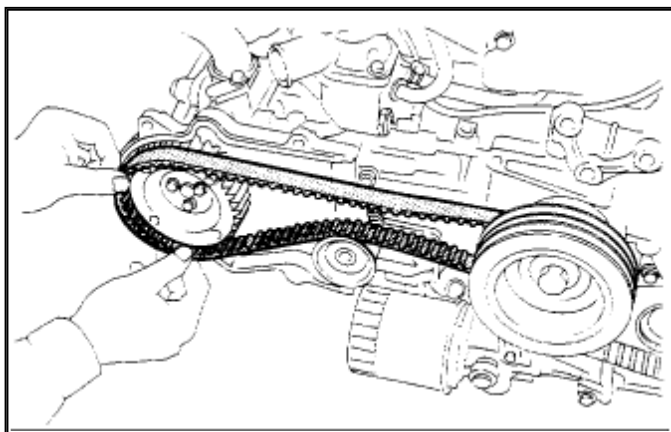


Zoom

Sized for Print

 - (m) Loosen tensioner bolt (B) 1/2 turn to apply tension to belt.




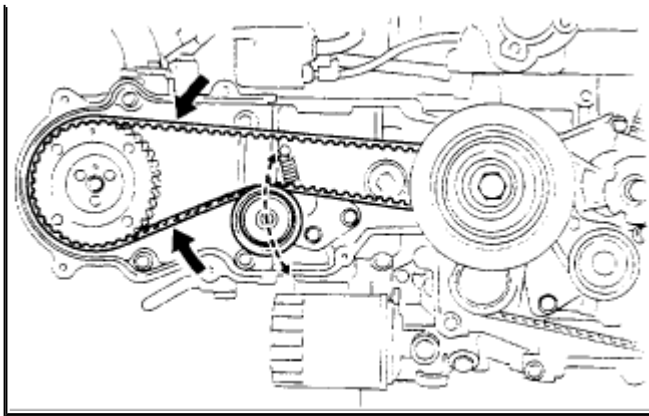

Zoom

Sized for Print

- (n) Push timing belt by hand to ensure smooth tensioner movement.

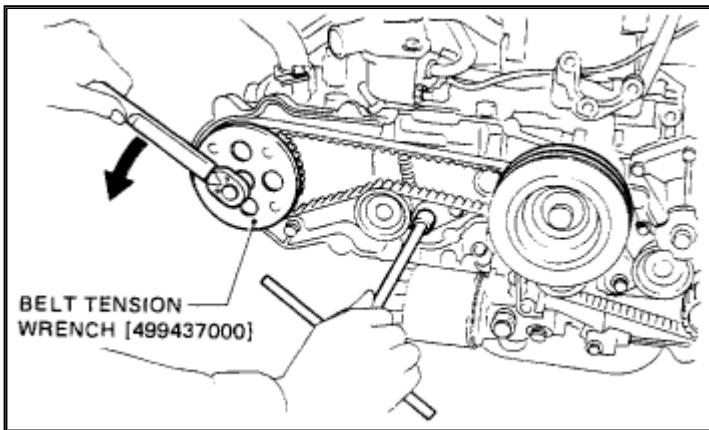

Zoom

Sized for Print


- (o) Apply the specified torque (same as camshaft sprocket LH) to camshaft sprocket RH in counterclockwise direction using BELT TENSION WRENCH. While applying torque, tighten tensioner No. 2 bolt 3 b. temporarily, then tighten bolt a temporarily.
- (p) Tighten bolt (B) and bolt (A) in that order, to the specified torque.
Tightening torque:

17.2 - 20.1 N-m (1.75 - 2.05 kg-m, 12.7 - 14.8 ft-lb).

- (q) Make sure that flywheel timing mark and camshaft sprocket RH timing mark are in their normal positions.

- (r) Remove crankshaft pulley.

NOTE: Do not remove sprocket with crankshaft pulley.

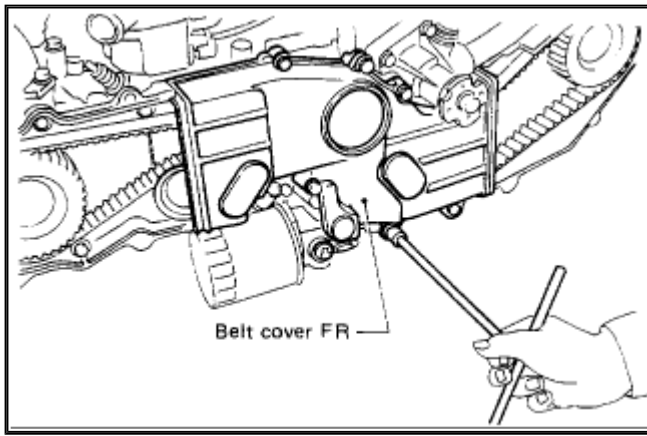

Zoom

Sized for Print

10. Install belt cover FR seal, belt cover RR seal, and belt cover plug to belt cover FR, then install belt cover FR to cylinder block.

NOTE: Before installing belt cover, ensure that no foreign matter such as nut or washer is in it.

11. Install belt covers LH and RH.
12. Install belt cover plate. TURBO model]
13. Install crank pulley to crankshaft using FLYWHEEL STOPPER (498277000) [manual transmission model] or DRIVE PLATE STOPPER (498497000) [automatic transmission model] to lock crankshaft. Tightening torque: **89 - 107 N-m (9.1 - 10.9 kg-m, 66 - 79 ft-lb)**.
14. Install water pump pulley and pulley cover to water pump assembly, and tighten nuts temporarily.
15. Install oil level gauge and gauge guide. Apply engine oil to O-ring beforehand.
16. Connect lead to oil pressure switch.
17. Install V-belt and apply proper tension to the belt.
18. Tighten water pump pulley mounting nuts or bolts to the specified torque. Tightening torque: **9.1 - 10.5 N-m (0.93 - 1.07 kg-m, 6.7 - 7.7 ft-lb)**.