


Removal


All vehicles

1. Disconnect the battery ground cable.
2. Release the parking brake boot retaining clip.

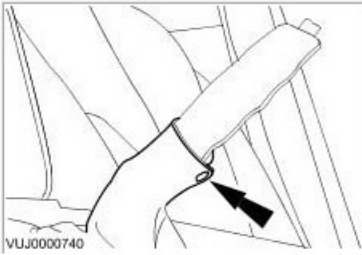


3. **NOTE:** Vehicles with automatic transmission shown, vehicles with manual transmission similar. Detach the floor console upper section.


- Open the floor console glove compartment.

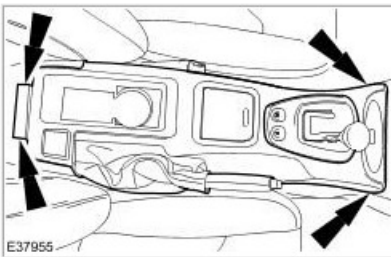

4. Disconnect the cigarette lighter electrical connector.

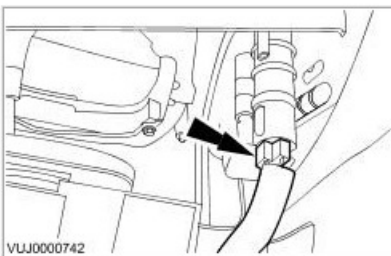


5. Disconnect the transmission mode, traction control and cellular phone electrical connectors if equipped.

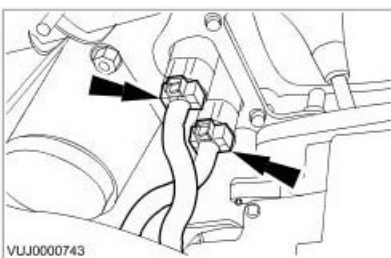


Vehicles with manual transmission

6. Detach the transmission selector lever boot.

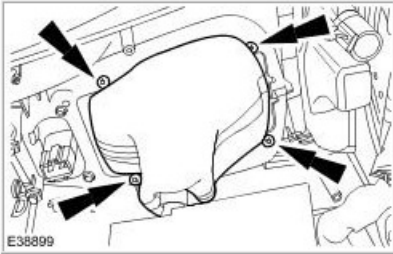


All vehicles

7. **NOTE:** Vehicles with manual transmission shown, vehicles with automatic transmission similar. Remove the floor console upper section.

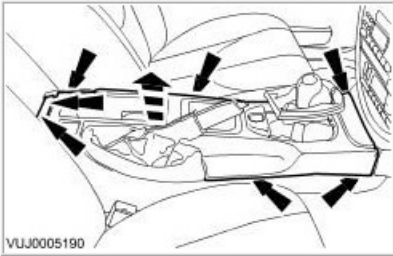


8. Detach the floor console retaining bracket.


1. Remove the lower floor console retaining bracket retaining screws.
2. Detach the lower floor console retaining bracket.

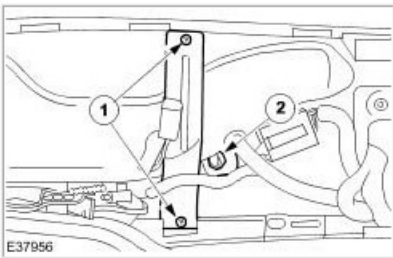


9. Remove the floor console glove compartment lid.

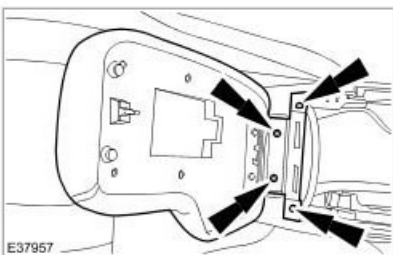

10. Remove the floor console front retaining screws.

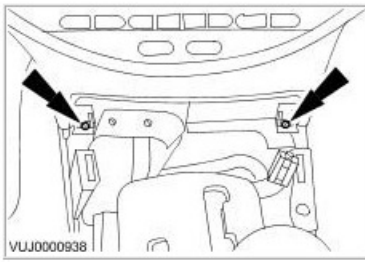


11. Release the floor console rear air register trim panel retaining tangs.

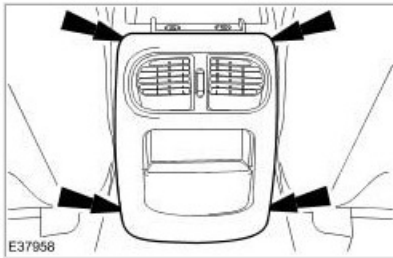


12. **CAUTION: Make sure the floor console rear air register distribution duct retaining tangs are not damaged when the floor console rear air register trim panel is removed. Failure to follow this instruction may result in damage to the vehicle.** Remove the floor console rear air register trim panel.

1. Release the floor console rear retaining tang.
2. Reposition the floor console side trim panels.
3. Remove the floor console rear air register trim panel.

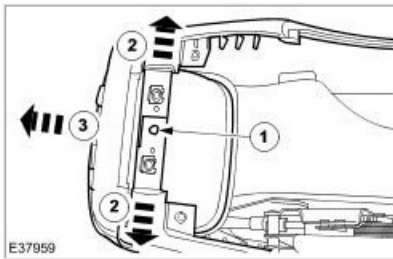

13. Remove the floor console.

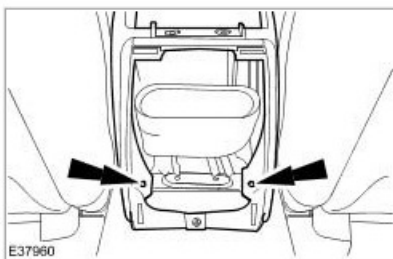

Installation

1. **NOTE:** Make sure the floor console rear air register trim panel retaining clips are installed into the floor console. To install, reverse the removal procedure.