


**Liftgate Window Latch****Removal and Installation**

**NOTE:** Make sure the liftgate window glass is in the raised position.


1. Remove the liftgate trim panel.
2. Disconnect the liftgate window latch.
  1. Disconnect the liftgate window latch ajar switch electrical connector.
  2. Open the clip and disconnect the actuating rod.

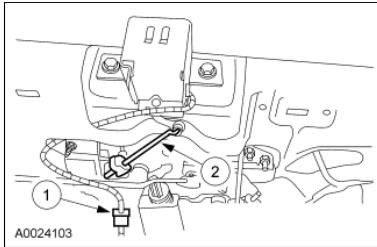


3. **NOTE:** Mark the position of the liftgate window latch prior to removing the nuts.

Remove the liftgate window latch.


1. Remove the bolts.
2. Remove the latch.

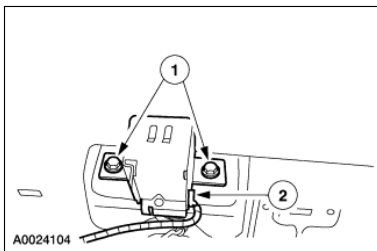**Installation**


1. Position the liftgate window latch and loosely install the bolts.

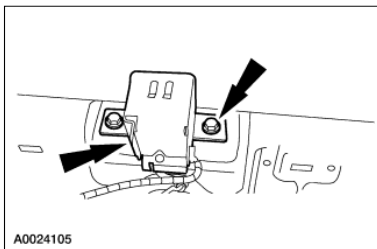

2. Adjust the liftgate window latch.
  - Set the liftgate window glass flushness to 1.5 mm (0.06 in) under flush.
3. Tighten the liftgate window latch bolts.

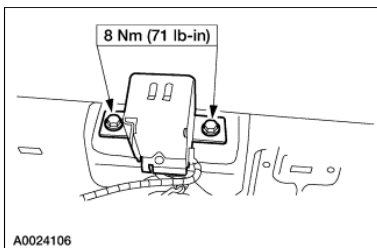

4. Connect the liftgate window latch.
  1. Connect the liftgate window latch ajar switch electrical connector.
  2. Connect the actuating rod and close the clip.

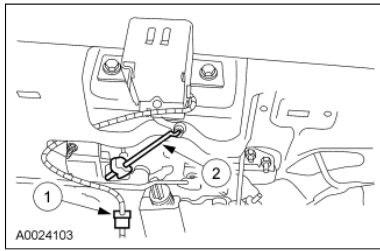

5. Install the liftgate trim panel.