


**Liftgate Latch Actuator****Removal and Installation**

1. Remove the liftgate latch remote control. For additional information, refer to [Liftgate Latch Remote Control](#) in this section.
2. Remove the screws and the liftgate latch actuator.

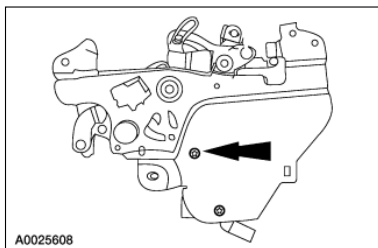

3. To install, reverse the removal procedure.