



Zoom

Sized for Print

Component Location

Component List

No.	Component Name
1/1	Battery
2/1	Headlight relay with bulb failure sensor
2/2	Foglight relay
2/4	Intermittent wiper relay, windshield wipers
2/5	Relay, seat belt reminder/ignition key warning
2/6	Overload relay 15l
2/7	Central lock relay, inside lighting, delayed action
2/11	Relay, engine cooling fan
2/15	Relay exhaust temperature sensor
2/16	Intermittent wiper relay, tailgate wiper
2/17	Horn relay
2/20	Relay auto down power windows
2/22	Automatic climate control A/C relay
2/23	Relay, fuel pump
2/28	Anti-theft relay
2/30	Overload relay, +X
2/32	Main relay, Fuel Injection system
2/35	Start motor 50 relay
2/44	Relay rear window/door mirror heating
2/46	Relay ignition coil
2/53	Air pump relay
2/61	Parking lights relay
2/66	Relay, fog lights, USA
3/1	Ignition lock
3/2	High and low beam switch
3/3	Switch, turnsignal/high-low beam
3/4	Cruise control operation
3/6	Switch, hazard warning with flasher relay
3/7	Foglight switch

- 3/8 Switch with timer relay, heated rear window/door mirrors
- 3/9 Brake light switch
- 3/10 Backup (reversing) light switch
- 3/12 Windshield wash/wipe switch
- 3/13 Rear window wash/wipe switch
- 3/15 Power window lift switch driver's door for driver's door
- 3/16 Power window lift switch driver's door for driver's side, rear
- 3/17 Power window lift switch driver's door for passenger's side front
- 3/18 Power window lift switch driver's door for passenger's side rear
- 3/19 Power window lift switch driver's side rear
- 3/20 Power window lift switch passenger's side front
- 3/21 Power window lift switch passenger's side rear
- 3/22 Switch for rear power window lifts
- 3/23 Switch for power door mirror, driver's side
- 3/24 Switch for power door mirror, passenger's side
- 3/25 Switch, power sunroof
- 3/26 [Control module](#), driver's seat
- 3/27 [Control module](#), passenger's seat
- 3/28 Switch for heated driver's Seat
- 3/29 Switch for heated passenger's seat
- 3/31 Door switch driver's door
- 3/32 Door switch passenger's side front
- 3/33 Door switch driver's side rear
- 3/34 Door switch passenger's side rear
- 3/35 Door switch tailgate (5-door)
- 3/36 Switch, glove compartment light
- 3/37 Horn contacts
- 3/38 Switch, brake pedal
- 3/39 Switch, clutch pedal
- 3/40 Start inhibit switch, automatic transmission

3/42	Kickdown switch
3/44	Seat belt lock, driver's seat
3/47	Parking brake switch
3/52	Power antenna switch
3/59	Beam width control
3/62	Alarm switch, hood
3/63	Mode selector AW30-40/43
3/70	Switch, clock/rheostat
3/71	Gear position sensor
3/78	Lock unit, tailgate
3/100	Lock module, driver's door
4/3	Control module , Cruise control
4/4	Rheostat
4/5	Safety circuit, SRS
4/6	Control module ECC
4/9	Sensor unit SRS
4/12	Control module Motronic (MFI) system
4/16	Control module ABS
4/19	Control module, remote control central locking and car alarm
4/28	Control module AW30-40/43
4/31	Control module , cabin fan
4/38	Power stage Motronic 1 (MFI) system
4/39	Power stage Motronic 2 (MFI) system
4/40	Control module , Manual Climate Control MCC
4/52	Control module , power seat with memory, driver's side
5/1	Combined instrument
5/3	Ambient temperature sensor
6/1	Windshield wiper motor
6/2	Washer motor, front
6/3	Right headlight wiper motor

6/4	Left headlight wiper motor
6/5	Central locking motor passenger's side front
6/6	Central locking motor passenger's side rear
6/7	Central locking motor driver's side rear
6/8	Central locking motor tailgate
6/9	Power window lift motor driver's door
6/10	Power window lift motor driver's side rear
6/11	Power window lift motor passenger's side front
6/12	Power window lift motor passenger's side rear
6/13	Power door mirror, driver's side
6/14	Power door mirror, passenger's side
6/15	Motor, power sunroof
6/16	Motor driver's seat backrest
6/17	Motor up-down, front edge of driver's seat
6/18	Motor up-down, rear edge of driver's seat
6/19	Motor fore-aft driver's seat
6/24	Cruise control vacuum pump
6/25	Starter motor
6/26	Generator
6/27	Servo motor throttle control
6/28	Cabin fan motor
6/29	Engine cooling fan
6/30	Wiper motor, tailgate
6/32	Tailgate wiper motor
6/33-1	Fuel level sensor
6/33-2	Fuel primer pump
6/34	Power antenna
6/35	Parking heater
6/38	Actuator, left beam width control
6/39	Actuator, right beam width control

6/54	Air pump motor
7/1	Bulb failure sensor, rear
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
7/6	Oil pressure sensor
7/7	Engine coolant temperature (ECT) sensor
7/9	Engine coolant temperature (ECT) sensor, ECC
7/10	Cabin temperature sensor
7/11	Ambient temperature sensor
7/12	Solar sensor ECC alarm diode
7/15	Heated oxygen sensor (HO2S)
7/16	Engine coolant temperature (ECT) sensor, fuel/ignition system
7/17	Mass air flow (MAF) sensor
7/21	Camshaft position (CMP) sensor
7/22	Engine speed (RPM) sensor
7/23	Knock sensor (KS), rear
7/24	Knock sensor (KS), front
7/25	Impulse sensor
7/31	Sensor ABS left front
7/32	Sensor ABS right front
7/33	Sensor speedometer and ABS
7/34	Thermoelement three-way catalytic converter (TWC)
7/37	Temperature sensor EGR
7/38	Low-speed pressure sensor, engine cooling fan
7/40	High-speed pressure sensor, engine cooling fan
7/41	High-pressure sensor, A/C
7/43	Thermostat, heated seat left side
7/44	Thermostat, heated seat right side
7/53	Low-pressure sensor, A/C
7/54	Throttle position (TP) sensor

7/69	Ambient temperature sensor
7/73	Engine coolant level sensor
7/74	Oil temperature sensor AW30-40/43
8/2	Operating solenoids, ECC/MCC
8/3	Solenoid coupling, A/C
8/5	Idle air control (IAC) valve
8/6-11	Injectors
8/15	Hydraulic unit ABS
8/16	Solenoid for auxiliary air system
8/17	Converter, EGR
8/30	Steering wheel module SRS
8/31	Passenger module SRS
8/33	Igniter, seat belt pre-tensioner, left side
8/34	Igniter, seat belt pre-tensioner, right side
8/36	Solenoid P-shift lock
8/37	Solenoids AW30-40/43
9/1	Cigar lighter
9/2	Heated rear window
9/3	Heater element driver's seat backrest
9/4	Heater element passenger's seat backrest
9/5	Heater element driver's seat cushion
9/6	Heater element passenger's seat cushion
9/22	Seat heating driver's side
9/23	Seat heating passenger's side
10/1	Left front light
10/2	Right front light
10/3	License plate light
10/5	Left front foglight
10/6	Right front foglight
10/9	Left parking light and front turn signal

10/10	Right parking light and front turn signal
10/11	Left parking light, front
10/12	Right parking light, front
10/13	Left turn signal front
10/14	Right turn signal front
10/15	Left turn signal side repeater (not USA/CDN)
10/16	Right turn signal side repeater (not USA/CDN)
10/17	Right tail light
10/18	Left tail light
10/19	Extra brake light
10/22	Roof light
10/24	Trunk light
10/25	Roof light, load area (5-door)
10/26	Reading light, left rear
10/27	Reading light, right rear
10/29	Glove compartment light
10/30	Door open warning light driver's door
10/31	Door open warning light passenger's door
10/32	Door open warning light driver's side rear
10/33	Door open warning light passenger's side rear
10/37	Cigar lighter illumination
10/38	Ashtray illumination, rear
10/39	Seat heater switch illumination
10/40	Gear selector illumination
10/43	Right brake light
10/44	Right parking light rear
10/45	Right parking / tail light
10/46	Right rear foglight
10/47	Light, right rear turn signal
10/48	Right backup (reversing) light

10/50	Left brake light
10/51	Left parking light, rear
10/52	Left parking / tail light
10/53	Left rear foglight
10/54	Lamp left rear turn signal
10/55	Left backup (reversing) light
10/64	Right high beam
10/66	Right low beam
10/68	Left high beam
10/70	Left low beam
10/72	Ashtray illumination, front
10/74	Indicator light exhaust temperature
10/77	Indicator light SRS
10/78	Indicator light seat belt
10/79	Indicator light overdrive (auto.)/gear change indicator
10/82	Indicator light ABS
10/83	Indicator light parking brake
10/84	Indicator light brake warning
10/85	Indicator light high beams
10/86	Indicator light oil pressure
10/87	Indicator light charging
10/88	Indicator light bulb failure sensor
10/89	Indicator light rear foglights
10/90	Indicator light washer fluid level sensor
10/91	Service indicator
10/93	Indicator light Malfunction Indicator Lamp (MIL)
10/94	Indicator light right turn signal
10/95	Indicator light left turn signal
10/96	Instrument lighting

10/97	Entry lighting, driver's side
10/102	Entry lighting, passenger's side
10/109	Warning light trailer
10/110	Coolant level warning light
10/113	Alarm diode
10/114	Vanity mirror light, left side
10/115	Vanity mirror light, right side
11/41	Fuse, combined instrument
11A/1-8	Main fuses at battery
11B/1-18	Fuses in relay/fuse box engine compartment
11C/1-24	Fuses in fuse box
CB1	Automatic fuse in fuse box in car
CB2	Automatic fuse in fuse box in car
16/1	Radio
16/3	Loudspeaker right front door
16/4	Loudspeaker left front door
16/5	Loudspeaker right rear door
16/6	Loudspeaker left rear door
16/7	Loudspeaker instrument panel right side
16/8	Loudspeaker instrument panel left side
16/9	Antenna
16/10	Horn 1
16/11	Horn 2
16/15	CD-changer
16/16	Antenna signal booster (windshield antenna)
16/17	Loudspeaker, parcel shelf left side/D-post left side
16/18	Loudspeaker, parcel shelf right side/D-post right side
16/19	Anti-theft alarm horn
17/1	Service socket for starter motor operation
17/8	Service socket: clamp 1, cyl. 1 (engine)

17/11	OBD diagnostic socket
18/4	Contact reel SRS
19/1	Engine coolant temperature (ECT) sensor
19/2	Engine speed (RPM) sensor
19/3	Speedometer
19/4	Clock
19/5	Fuel level sensor
20/3-8	Spark plugs (ignition coils)
20/18	Blower fan resistor
31/1	Ground connector right front wing
31/2	Ground connector left front wing
31/3	Ground connector body
31/4	Ground connector engine
31/5	Ground connector for heated rear window (4-door)
31/6	Ground connector left seat lift
31/10	Ground connector right seat lift
31/11	Ground connector left tail light cluster
31/12	Ground connector right tail light cluster
31/13	Ground connector in trunk
31/16	Ground connector at windshield wiper motor
31/17	Ground connector at power sunroof motor
31/18	Ground connector at centre console (radio)
31/25	Ground point starter motor
31/26	Ground connector generator
31/32	Ground connector on engine (power ground)
31/33	Ground connector on engine (signal ground)
31/35	Ground connector, antenna
31/54	Ground connector SRS sensor module
31/56	Ground connector gear selector sensor
31/57	Ground connector on engine for Motronic (power ground)

- 31/64 Ground connector engine cooling fan
- 33/1-704 Branching points
- 34/18 22-pin connector: ground connection at central relay module in car
- 34/19 22-pin connector: ground connection/terminal block at parking brake bracket
- 34/20 10-pin connector: terminal block relay/fuse box engine compartment
- 34/42 20-pin connector: terminal block in relay/fuse box engine compartment
- A1 Multi connector left A-pillar
- A3 Multi connector in relay/fusebox engine compartment CH engine - CH engine compartment
- A4 2-pin connector left A-pillar CH engine compartment - CH in-car (white)
- A8 15-pin connector left A-pillar CH engine compartment - CH dashboard (white)
- A9 13-pin connector left A-pillar CH engine compartment - CH dashboard (blue)
- A10 5-pin connector CH in-car - CH heater
- A11 6-pin connector CH in-car - CH heater
- A13 3-pin connector coupling bridge fog light
- A14 15-pin connector CH ABS - CH in-car
- A15 12-pin connector CH in-car - CH rear (4-door)
12-pin connector CH in-car - CH rear (5-door)
- A16 24-pin connector CH in-car - CH rear
- A17 2-pin connector CH in-car - CH dashboard
- A21 2-pin connector SRS igniter passenger side
- A25 2-pin connector CH in-car - CH pedal mounting
- A26 2-pin connector CH extra brake light - CH tailgate (5-door)
- A27 6-pin connector CH rear - CH tailgate (5-door)
- A28 2-pin connector CH rear - CH tailgate (5-door)
- A30 2-pin connector CH in-car - CH power sunroof
- A31 6-pin connector CH in-car - CH interior lighting
- A32 24-pin connector CH in-car - CH driver's door
- A33 24-pin connector CH in-car - CH passenger's door
- A34 4-pin connector CH in-car (transmission) - solenoid P-shift lock

- A35 4-pin connector CH motor (Sensors auto. transmission AW)
- A36 11-pin connector CH in-car - CH rear door left
- A37 11-pin connector CH in-car - CH rear door right
- A38 1-pin connector CH dashboard - power antenna
- A39 1-pin connector CH ABS - CH engine compartment
- A40 1-pin connector CH ABS - CH engine compartment
- A43 2-pin connector CH dashboard - CH CD changer
- B1 4-pin connector CH rear - switch fuel level sensor/fuel pump
- B2 4-pin connector CH rear - power antenna/antenna booster
- B3 4-pin connector HO2S CH - engine compartment
- B4 8-pin connector at AW30-40/43
- B5 8-pin connector at AW30-40/43
- B6 4-pin connector at driver seat
- B7 6-pin connector under driver seat
- B8 2-pin connector under driver seat
- D5 Connector towing hook
- D8 8-pin connector dashboard harness - ambient temp. sensor
- D9 1-pin connector CH engine compartment - spot light (accessory)
- D10 4-pin connector CH in car - accessory