
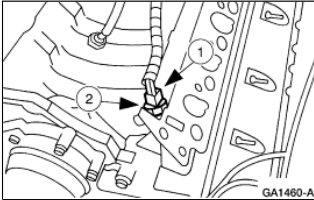


Cylinder Head Temperature (CHT) Sensor**Removal**

1. Remove the intake manifold; refer to [Section 303-01B](#).
2. Remove the CHT sensor.
 1. Disconnect the electrical connector.
 2. Remove the CHT sensor.

**Installation**

1. Install the CHT sensor.
 1. Install the CHT sensor.
 2. Connect the electrical connector.

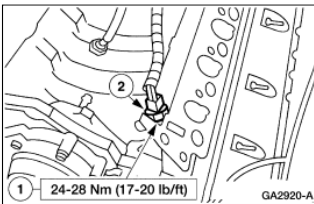

2. Install the intake manifold; refer to [Section 303-01B](#).