


REMOVAL AND INSTALLATION

Selector Lever Cable

Vehicles Equipped with a 6R60 Transmission

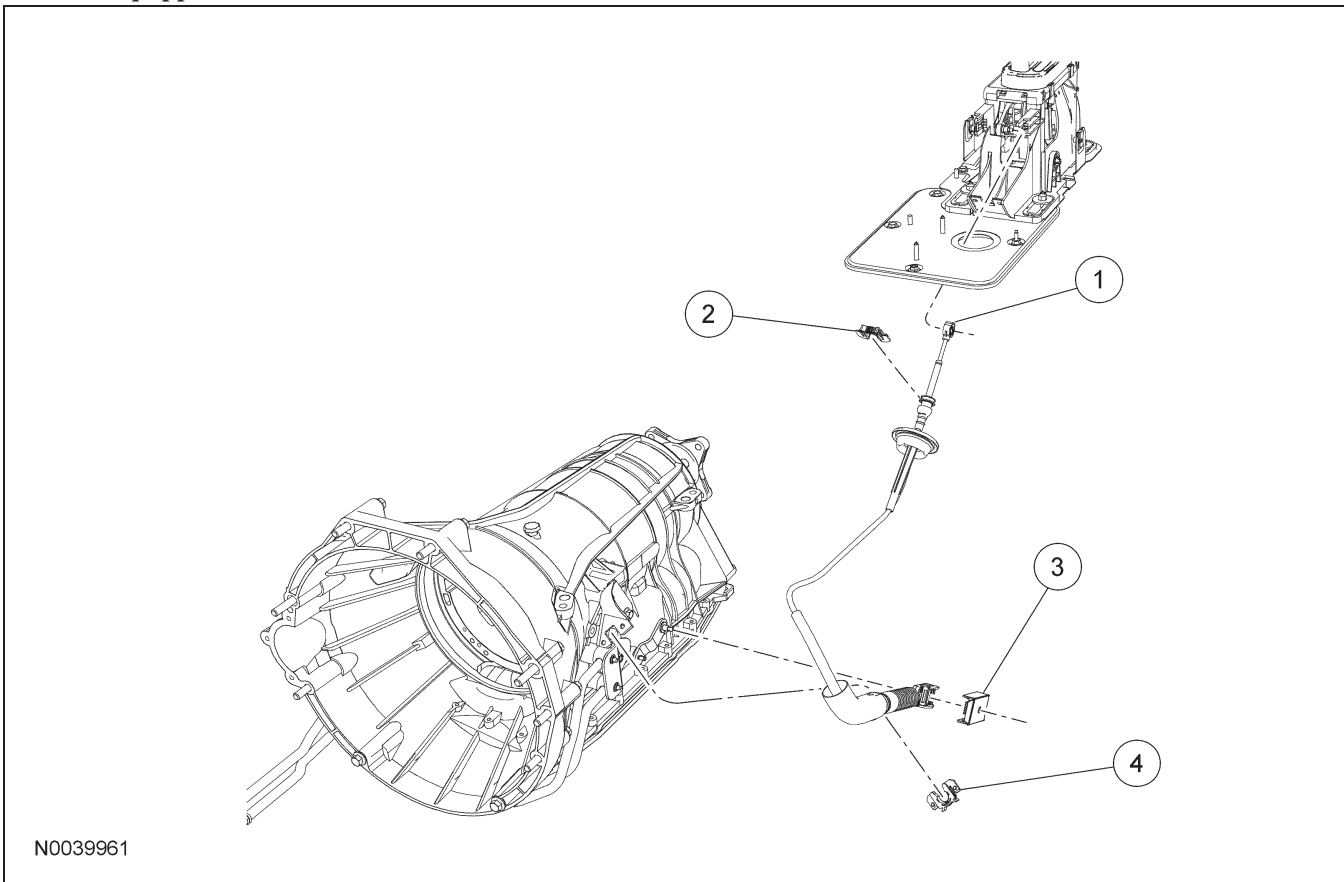


Item	Part Number	Description
1	—	Transmission selector lever cable
2	—	Transmission selector lever-to-cable clip

Item	Part Number	Description
3	—	Transmission selector lever cable shield
4	—	Transmission selector lever cable-to-bracket clip

(Continued)

REMOVAL AND INSTALLATION (Continued)

Vehicles Equipped with a 5R55S Transmission

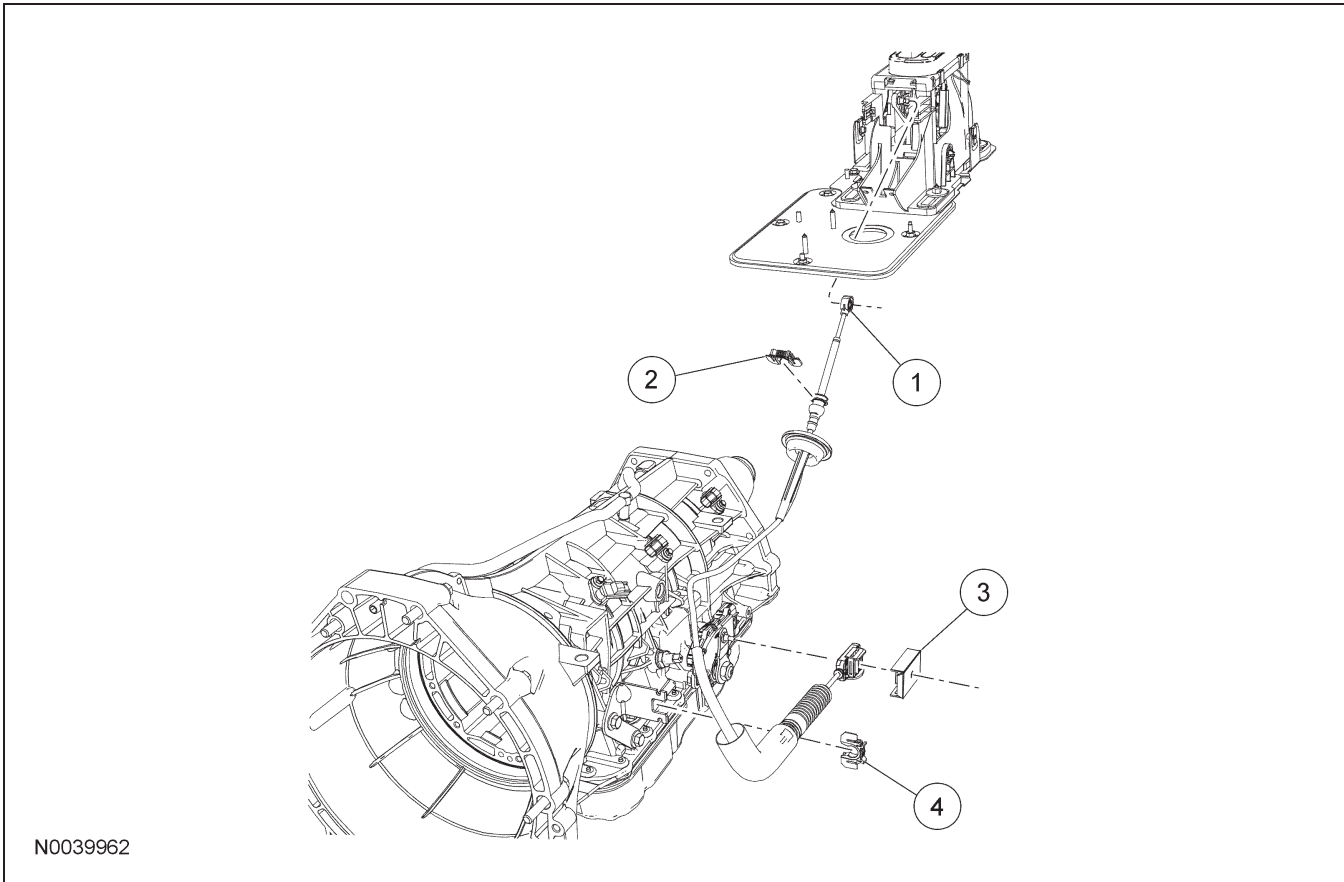

N0039962


Item	Part Number	Description
1	—	Transmission selector lever cable
2	—	Transmission selector lever-to-cable clip
3	—	Transmission selector lever cable shield
4	—	Transmission selector lever cable-to-bracket clip

Removal

All vehicles

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.


2. Remove the center console left side panel.

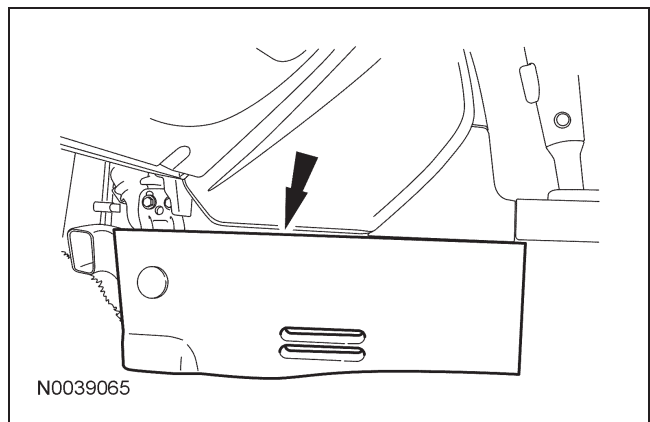


N0039065

REMOVAL AND INSTALLATION (Continued)


3. With the selector lever in PARK, disconnect the selector lever cable from the selector lever.

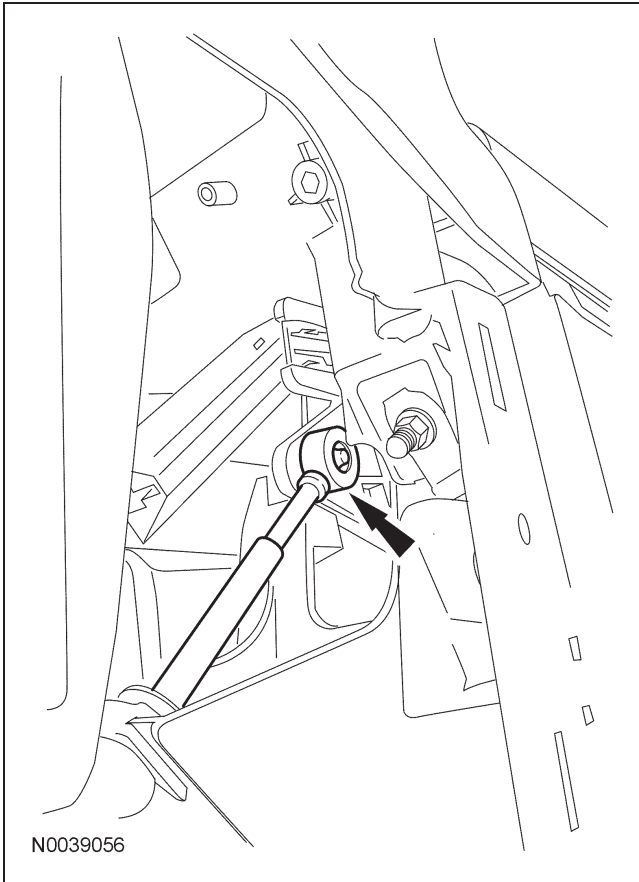


4. Disconnect the selector lever cable from the selector lever housing.

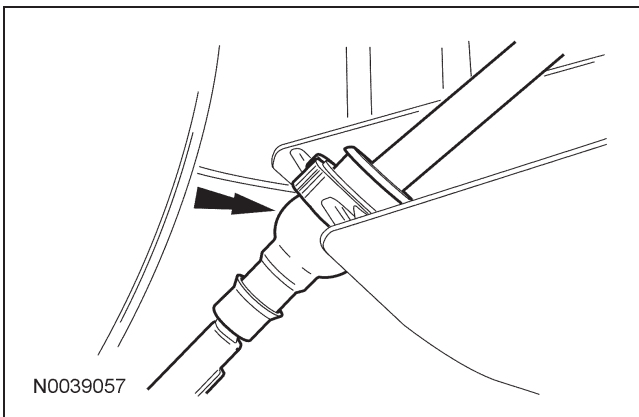


5. Pull the cable and grommet through the floorpan.

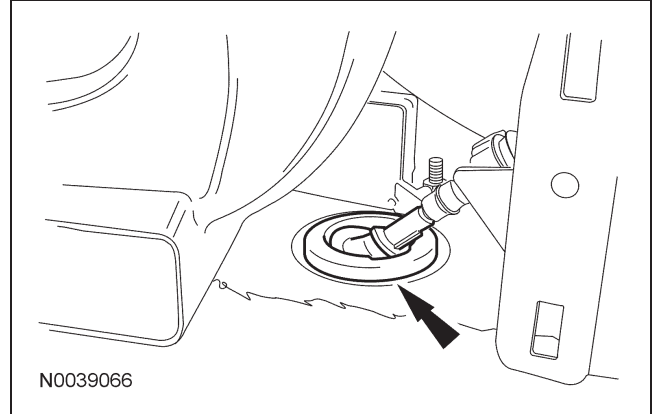**Vehicle equipped with a 6R60 transmission**

6. Remove the cable shield by prying on the shield closest to the boot, then sliding the shield away from the boot.

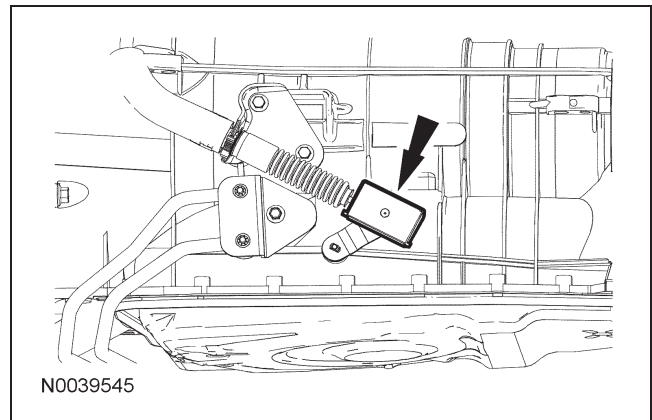


7. Unlock the lock tab and disconnect the selector lever cable end from the transmission manual lever.

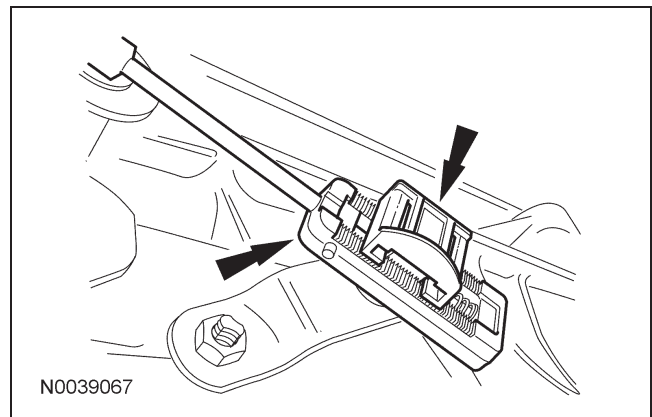


REMOVAL AND INSTALLATION (Continued)


8. Disconnect the selector lever cable from the bracket and remove the cable.

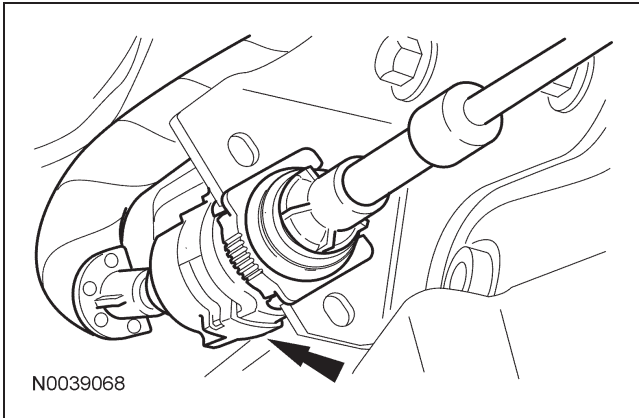**Vehicles equipped with a 5R55S transmission**


9. Remove the cable shield by prying on the side of the shield closest to the boot, then sliding the shield away from the boot.

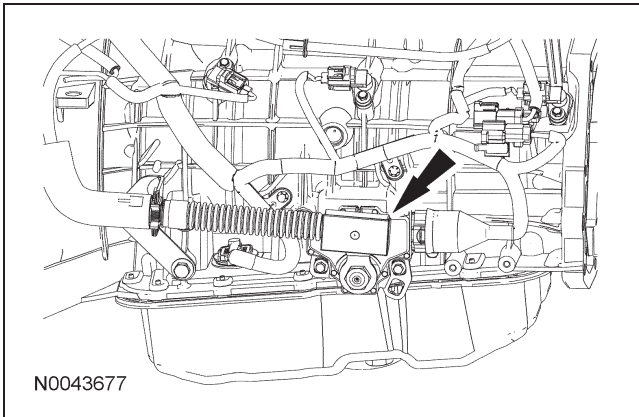


10. Unlock the lock tab and disconnect the selector lever cable end from the transmission manual lever and lock the lock tab.

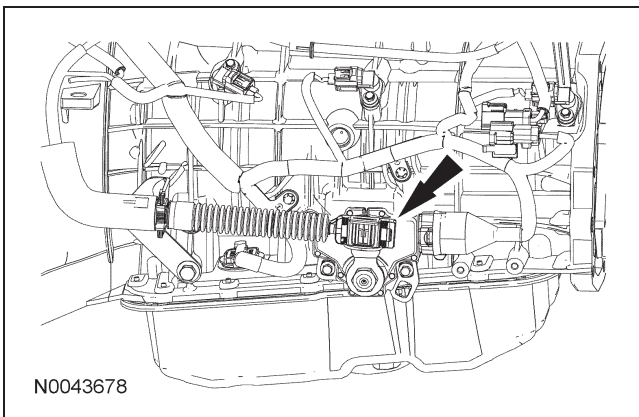


11. Disconnect the selector lever cable from the bracket and remove the cable.

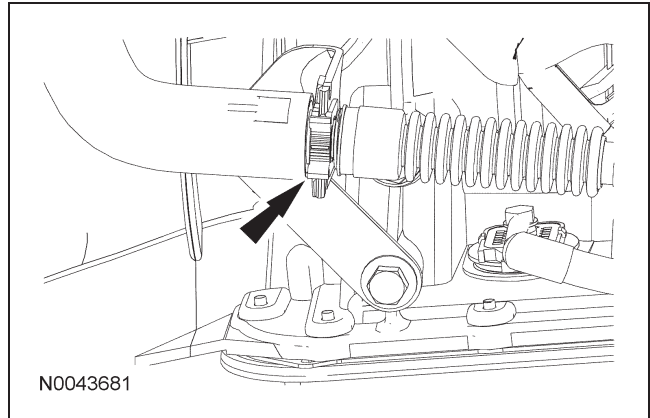**Installation****Vehicles equipped with a 6R60 transmission**

1. Install the selector lever cable into the bracket.

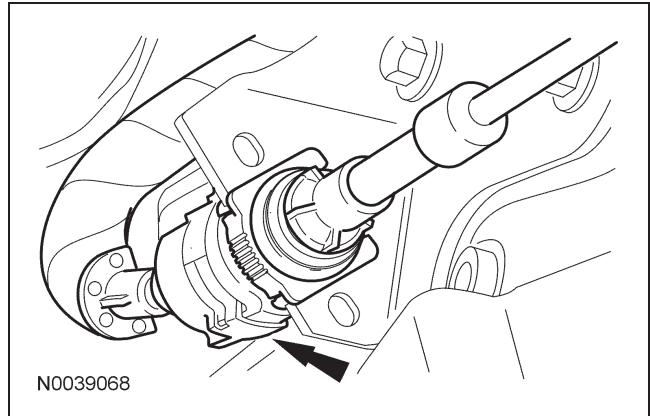


2. Connect the selector lever cable end onto the transmission manual lever and lock the lock tab.

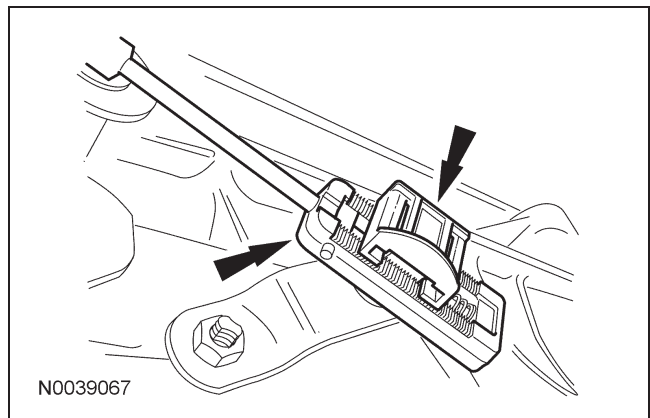


REMOVAL AND INSTALLATION (Continued)

3. **NOTE:** If the shield is loose, install a new shield.


Install the cable shield.

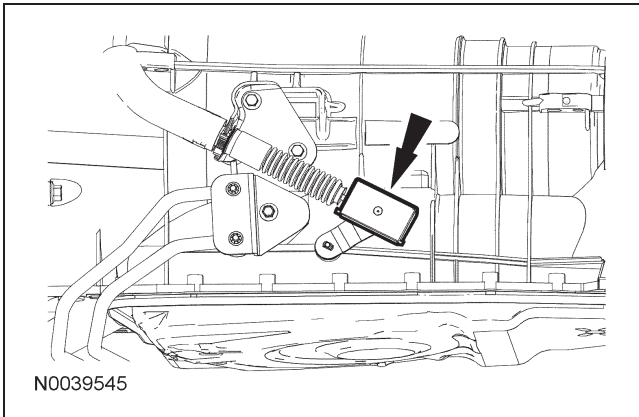**Vehicles equipped with a 5R55S transmission**

4. Install the selector lever cable into the bracket.

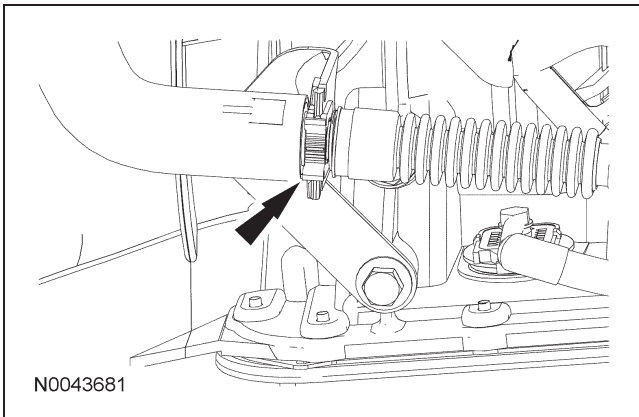


5. Connect the selector lever cable end onto the transmission manual lever.

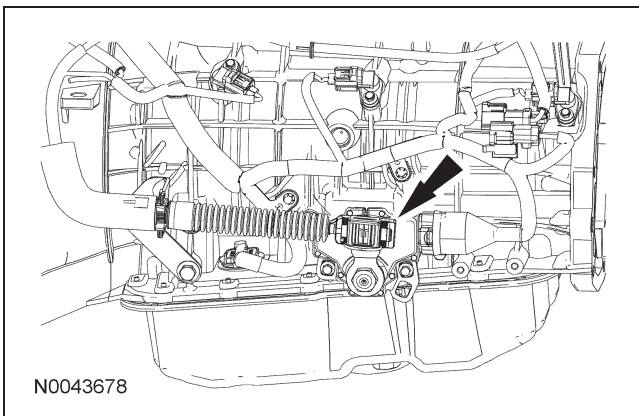


6. **NOTE:** If the shield is loose, install a new shield.


Install the cable shield.

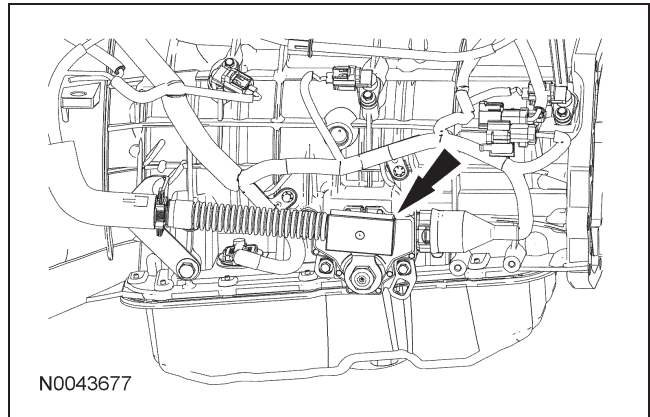**All vehicles**

7. Push the cable and grommet through the floorpan.

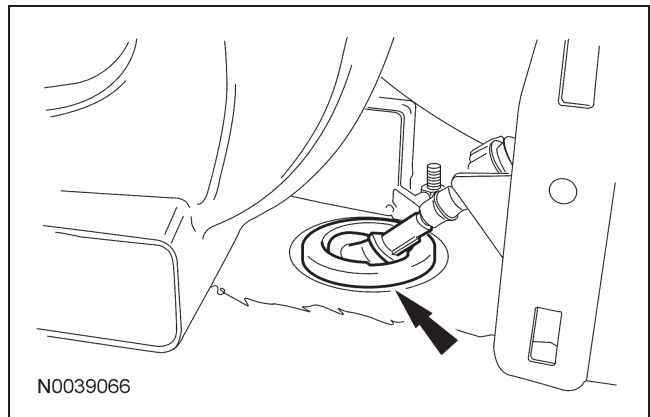


8. Connect the selector lever cable onto the selector lever housing.

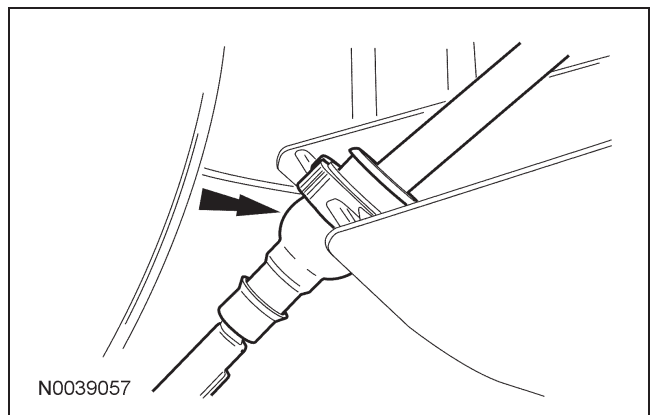


REMOVAL AND INSTALLATION (Continued)

9. Connect the selector lever cable onto the selector lever.

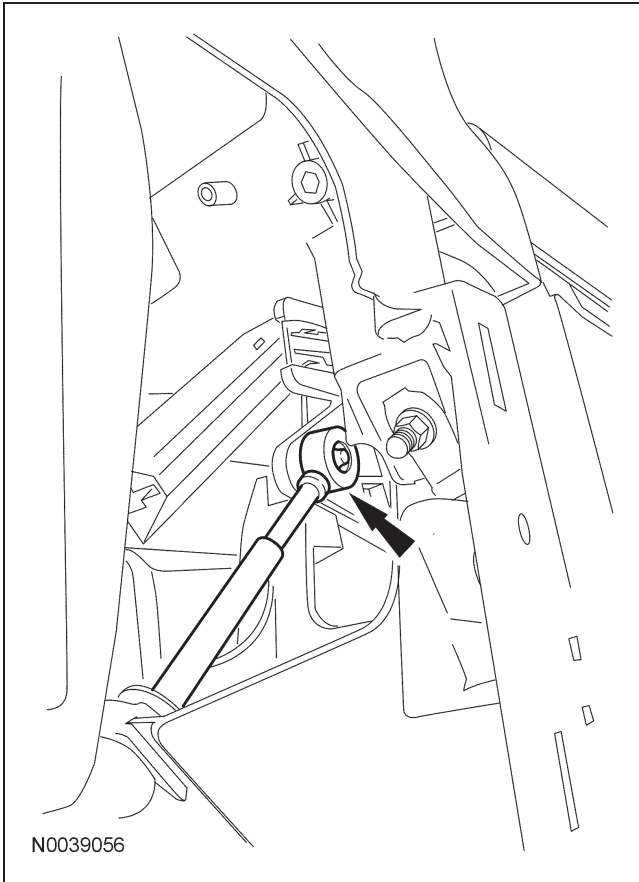

10. Install the center console left side panel.

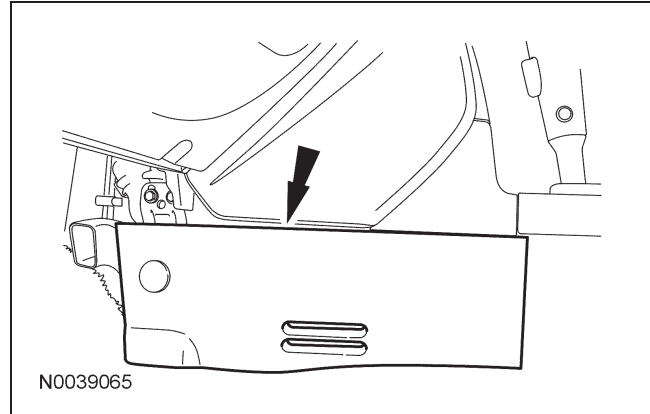

11. Verify the engine will start in PARK and NEUTRAL and the reversing lamps illuminate in REVERSE. If not, readjust the selector lever cable. For additional information, refer to Selector Lever Cable Adjustment — 5R55S or Selector Lever Cable Adjustment — 6R60.