


Trim Panel—Front Door, Navigator**Removal****Both sides**

1. Disconnect the battery ground cable. For additional information, refer to [Section 414-01](#).


Right side

2. **NOTE:** Release the top portion first.


On the RH door, remove the sail panel.

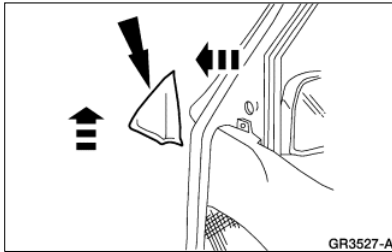


3. Remove the window regulator switchplate (14524).

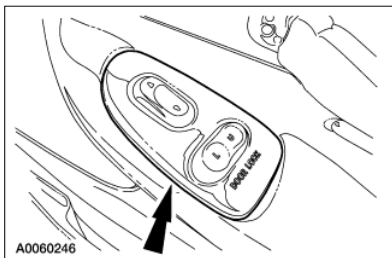


4. Disconnect the electrical connectors.

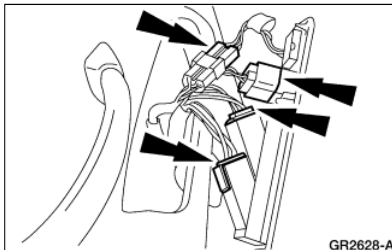


5. On the RH door, remove the top door trim panel screw.

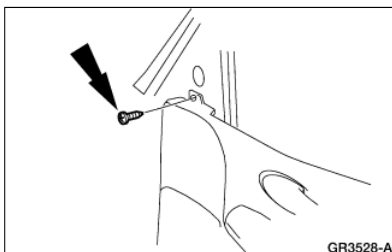**Both sides**


6. Remove the door pull handle screw covers.

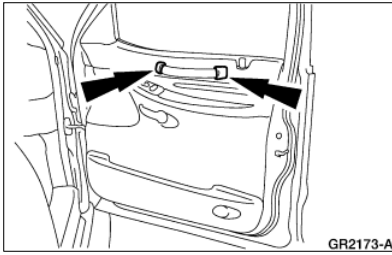


7. Remove the door pull handle screws.

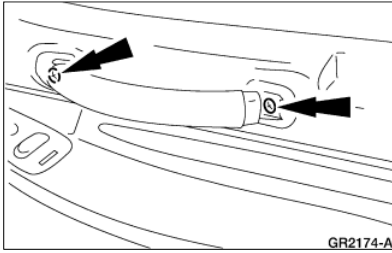


8. Position out the inside door handle trim cover.

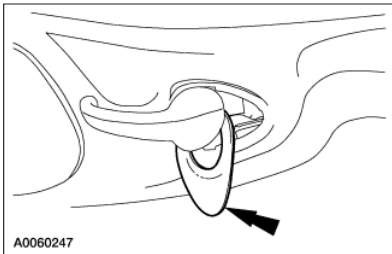


9. Remove the inside door handle.
- Remove the bolt.

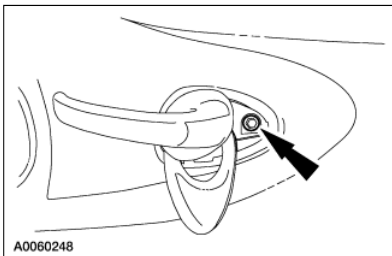


10.  **CAUTION:** To avoid damage to the front door trim panel, do not pull directly outward.

NOTE: On the left front door trim panel, the sail panel remains affixed to the door panel upon removal.

Lift upward and then outward to release the front door trim panel (23943).

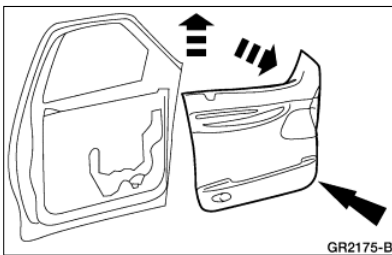


11. Disconnect the electrical connector.

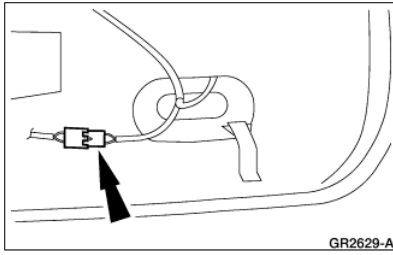

Left side

12. Disconnect all remaining electrical connectors.

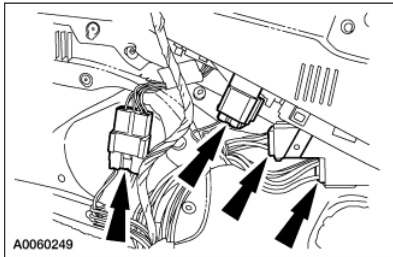

Both sides

13. To install, reverse the removal procedure.