

The camshaft position sensor is mounted to the end of the cylinder head.

1. Remove the negative battery cable.
2. Disconnect the PCV hose and reposition.

